


- NOTES**
1. ALL WOOD IS BALSA UNLESS NOTED OTHERWISE.
 2. FOR RIGHT WING ASSEMBLY, REVERSE TIP AND SHEETED SECTION OF WING. ALSO NOTE LOCATION OF WASHOUT SHIM AND STRUT ATTACHMENT PLATES.
 3. ALL PLYWOOD LABELED "LITE" IS POPLAR PLYWOOD.
 4. EPOXY SHOULD BE USED FOR ALL PLYWOOD LAMINATIONS.


1935 TAYLOR CUB
 MODEL E-2
 TAYLOR AIRCRAFT COMPANY BRADFORD, PA
 DESIGNED BY DOC MATHEWS
 PLANS BY *Bob Mathews*
 By H.E.

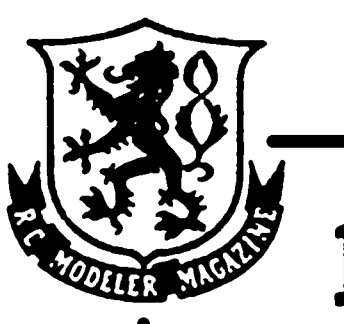