
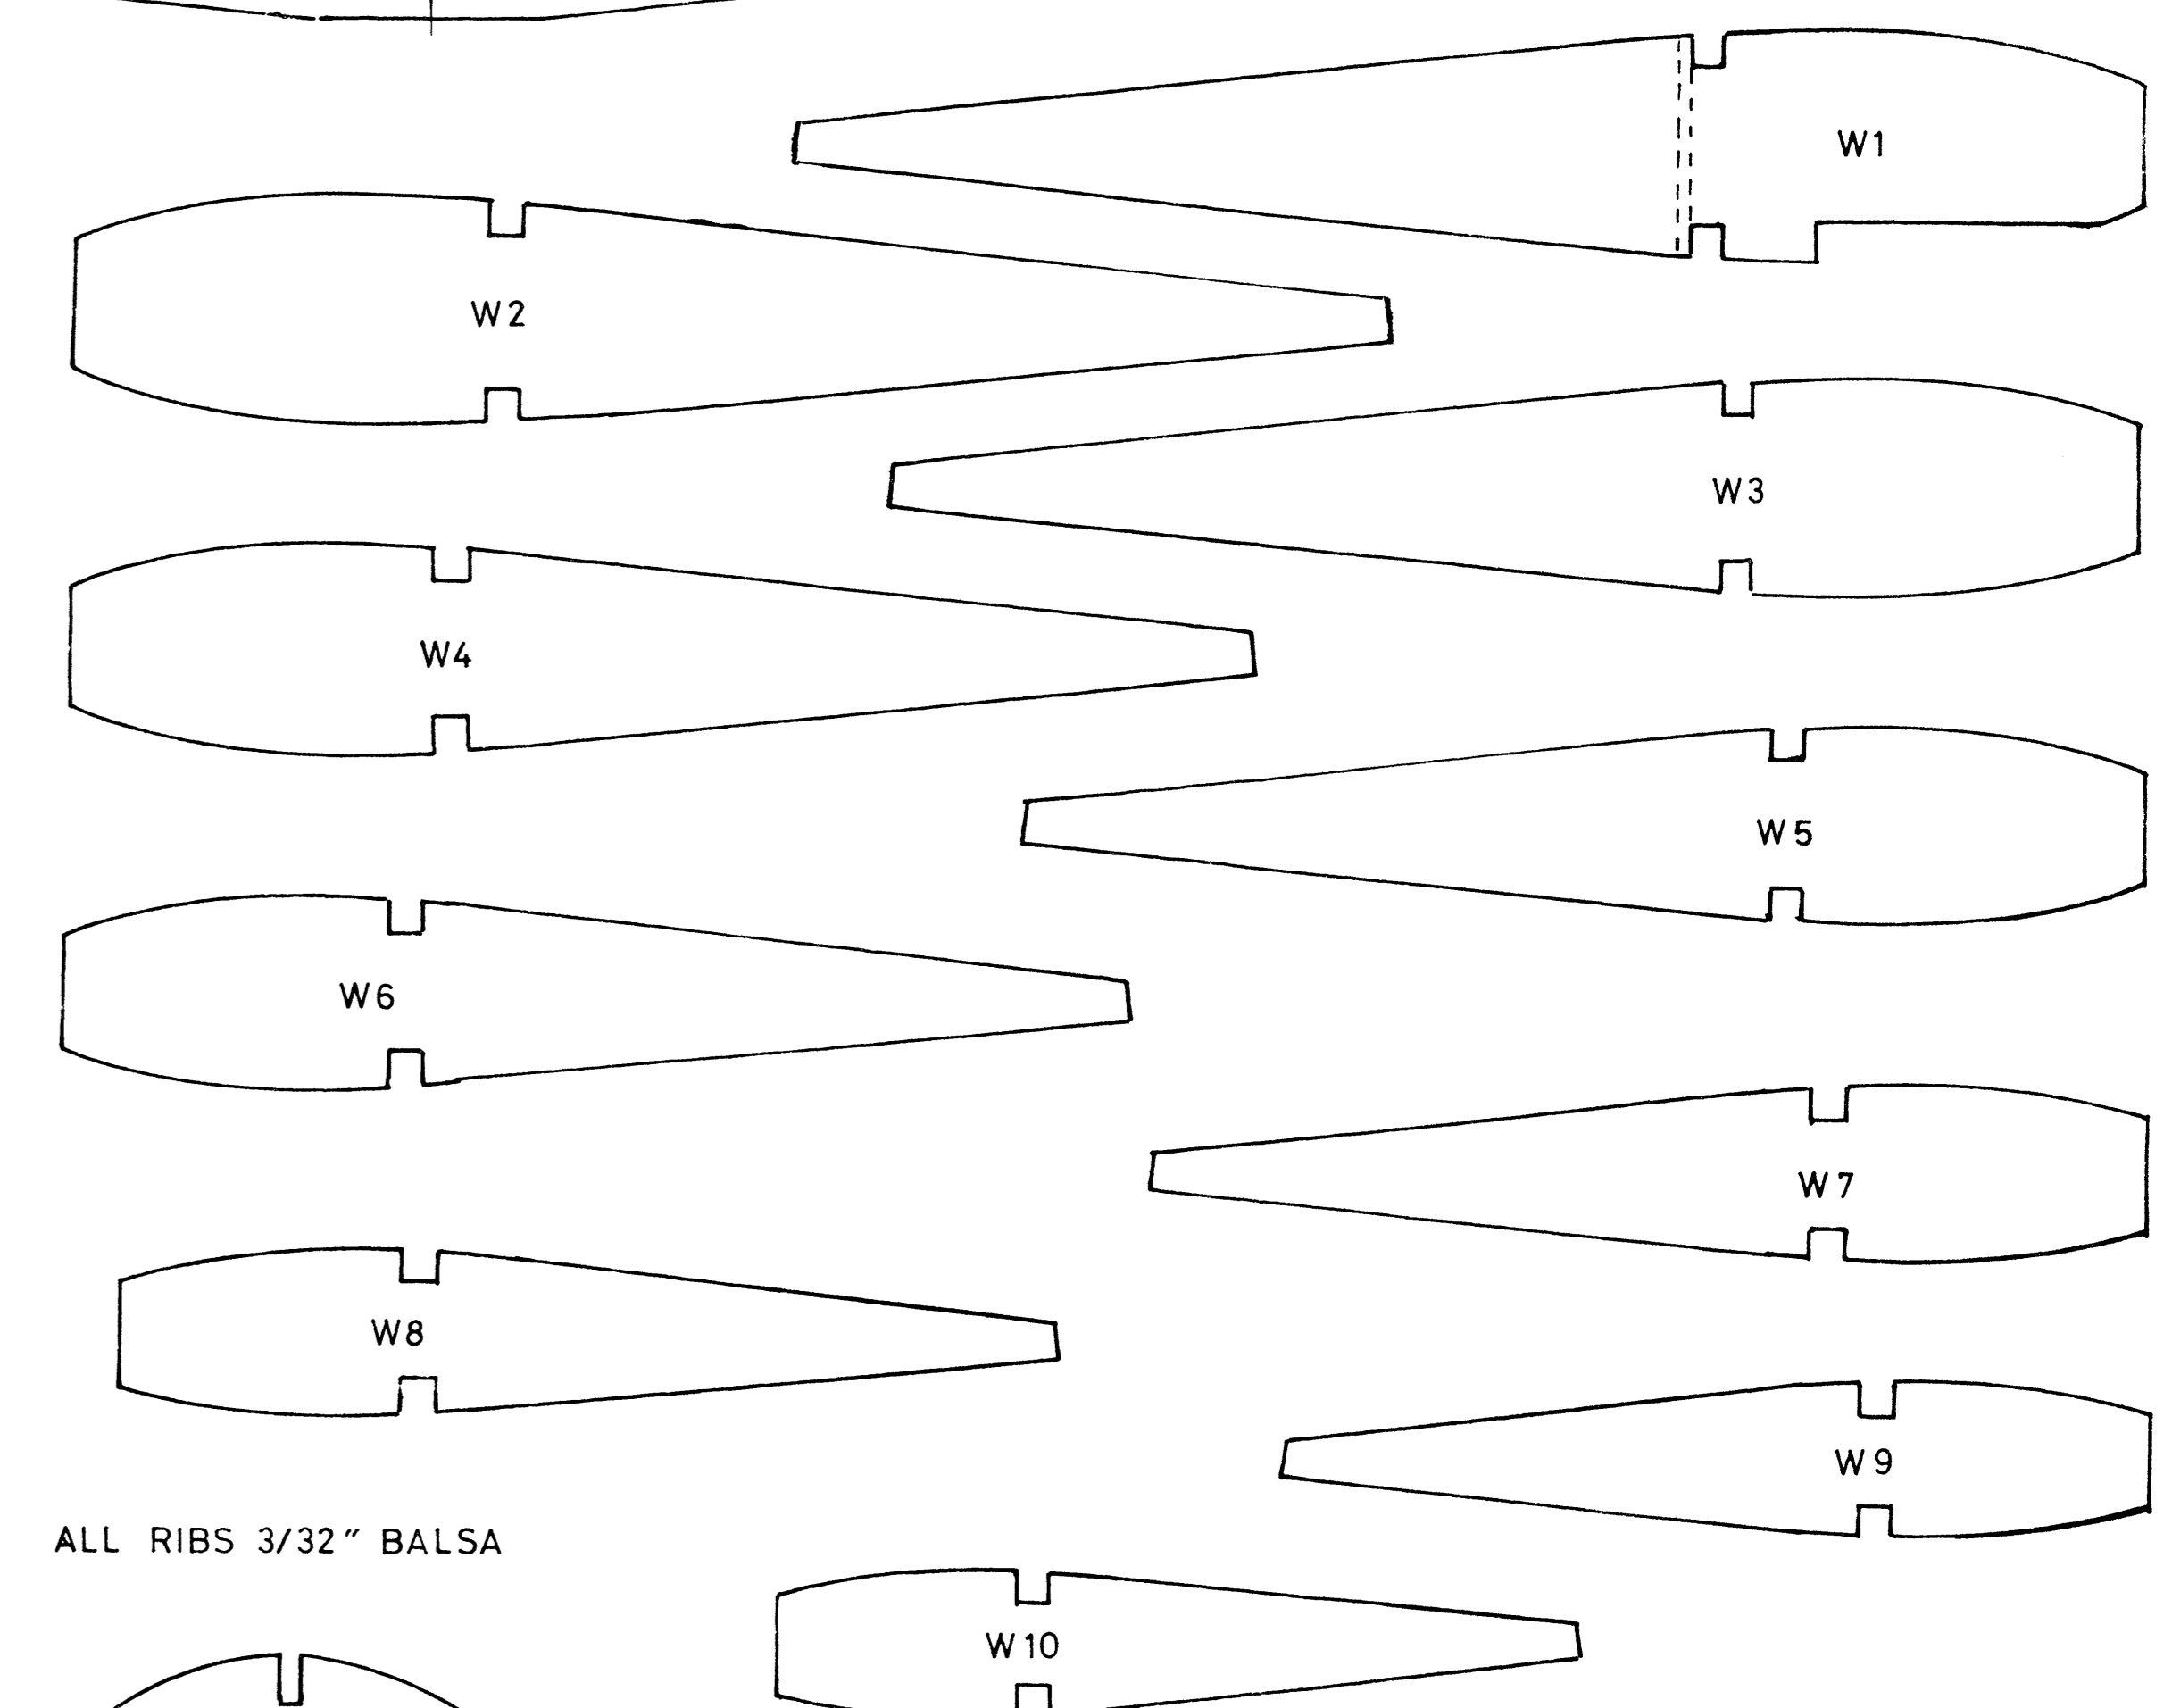





- WING ASSY SEQUENCE:**
1. RIBS, SPARS, FALSE L.E., T.E. STRIP.
 2. LOWER SHEET & RIB CAP STRIPS.
 3. PIN EACH PANEL DOWN WITH PACKING FOR WASHOUT.
 4. COMPLETE SHEETING AND WEBS.
 5. JOIN WINGS, ADD L.G. MOUNT PLATE.
 6. FINISH OFF

DIHEDRAL NOTE:
TOP SURFACE IS FLAT, SO JOIN L.H. & R.H. PANELS INVERTED ON WORKBENCH.



CONTROL THROWS
AILERONS ± 1/4"
ELEVATORS ± 1/2"
RUDDER ± 1-1/4" } AT WIDEST POINT

© RCM ALL COMMERCIAL RIGHTS RESERVED

CAP 21

DESIGNED AND DRAWN BY—GORDON E. WHITEHEAD

PLAN NO. 953