



METAL FITTINGS

NOTE: MAXIMUM SIZE OF ALL ATTACH BOLTS: 2-56

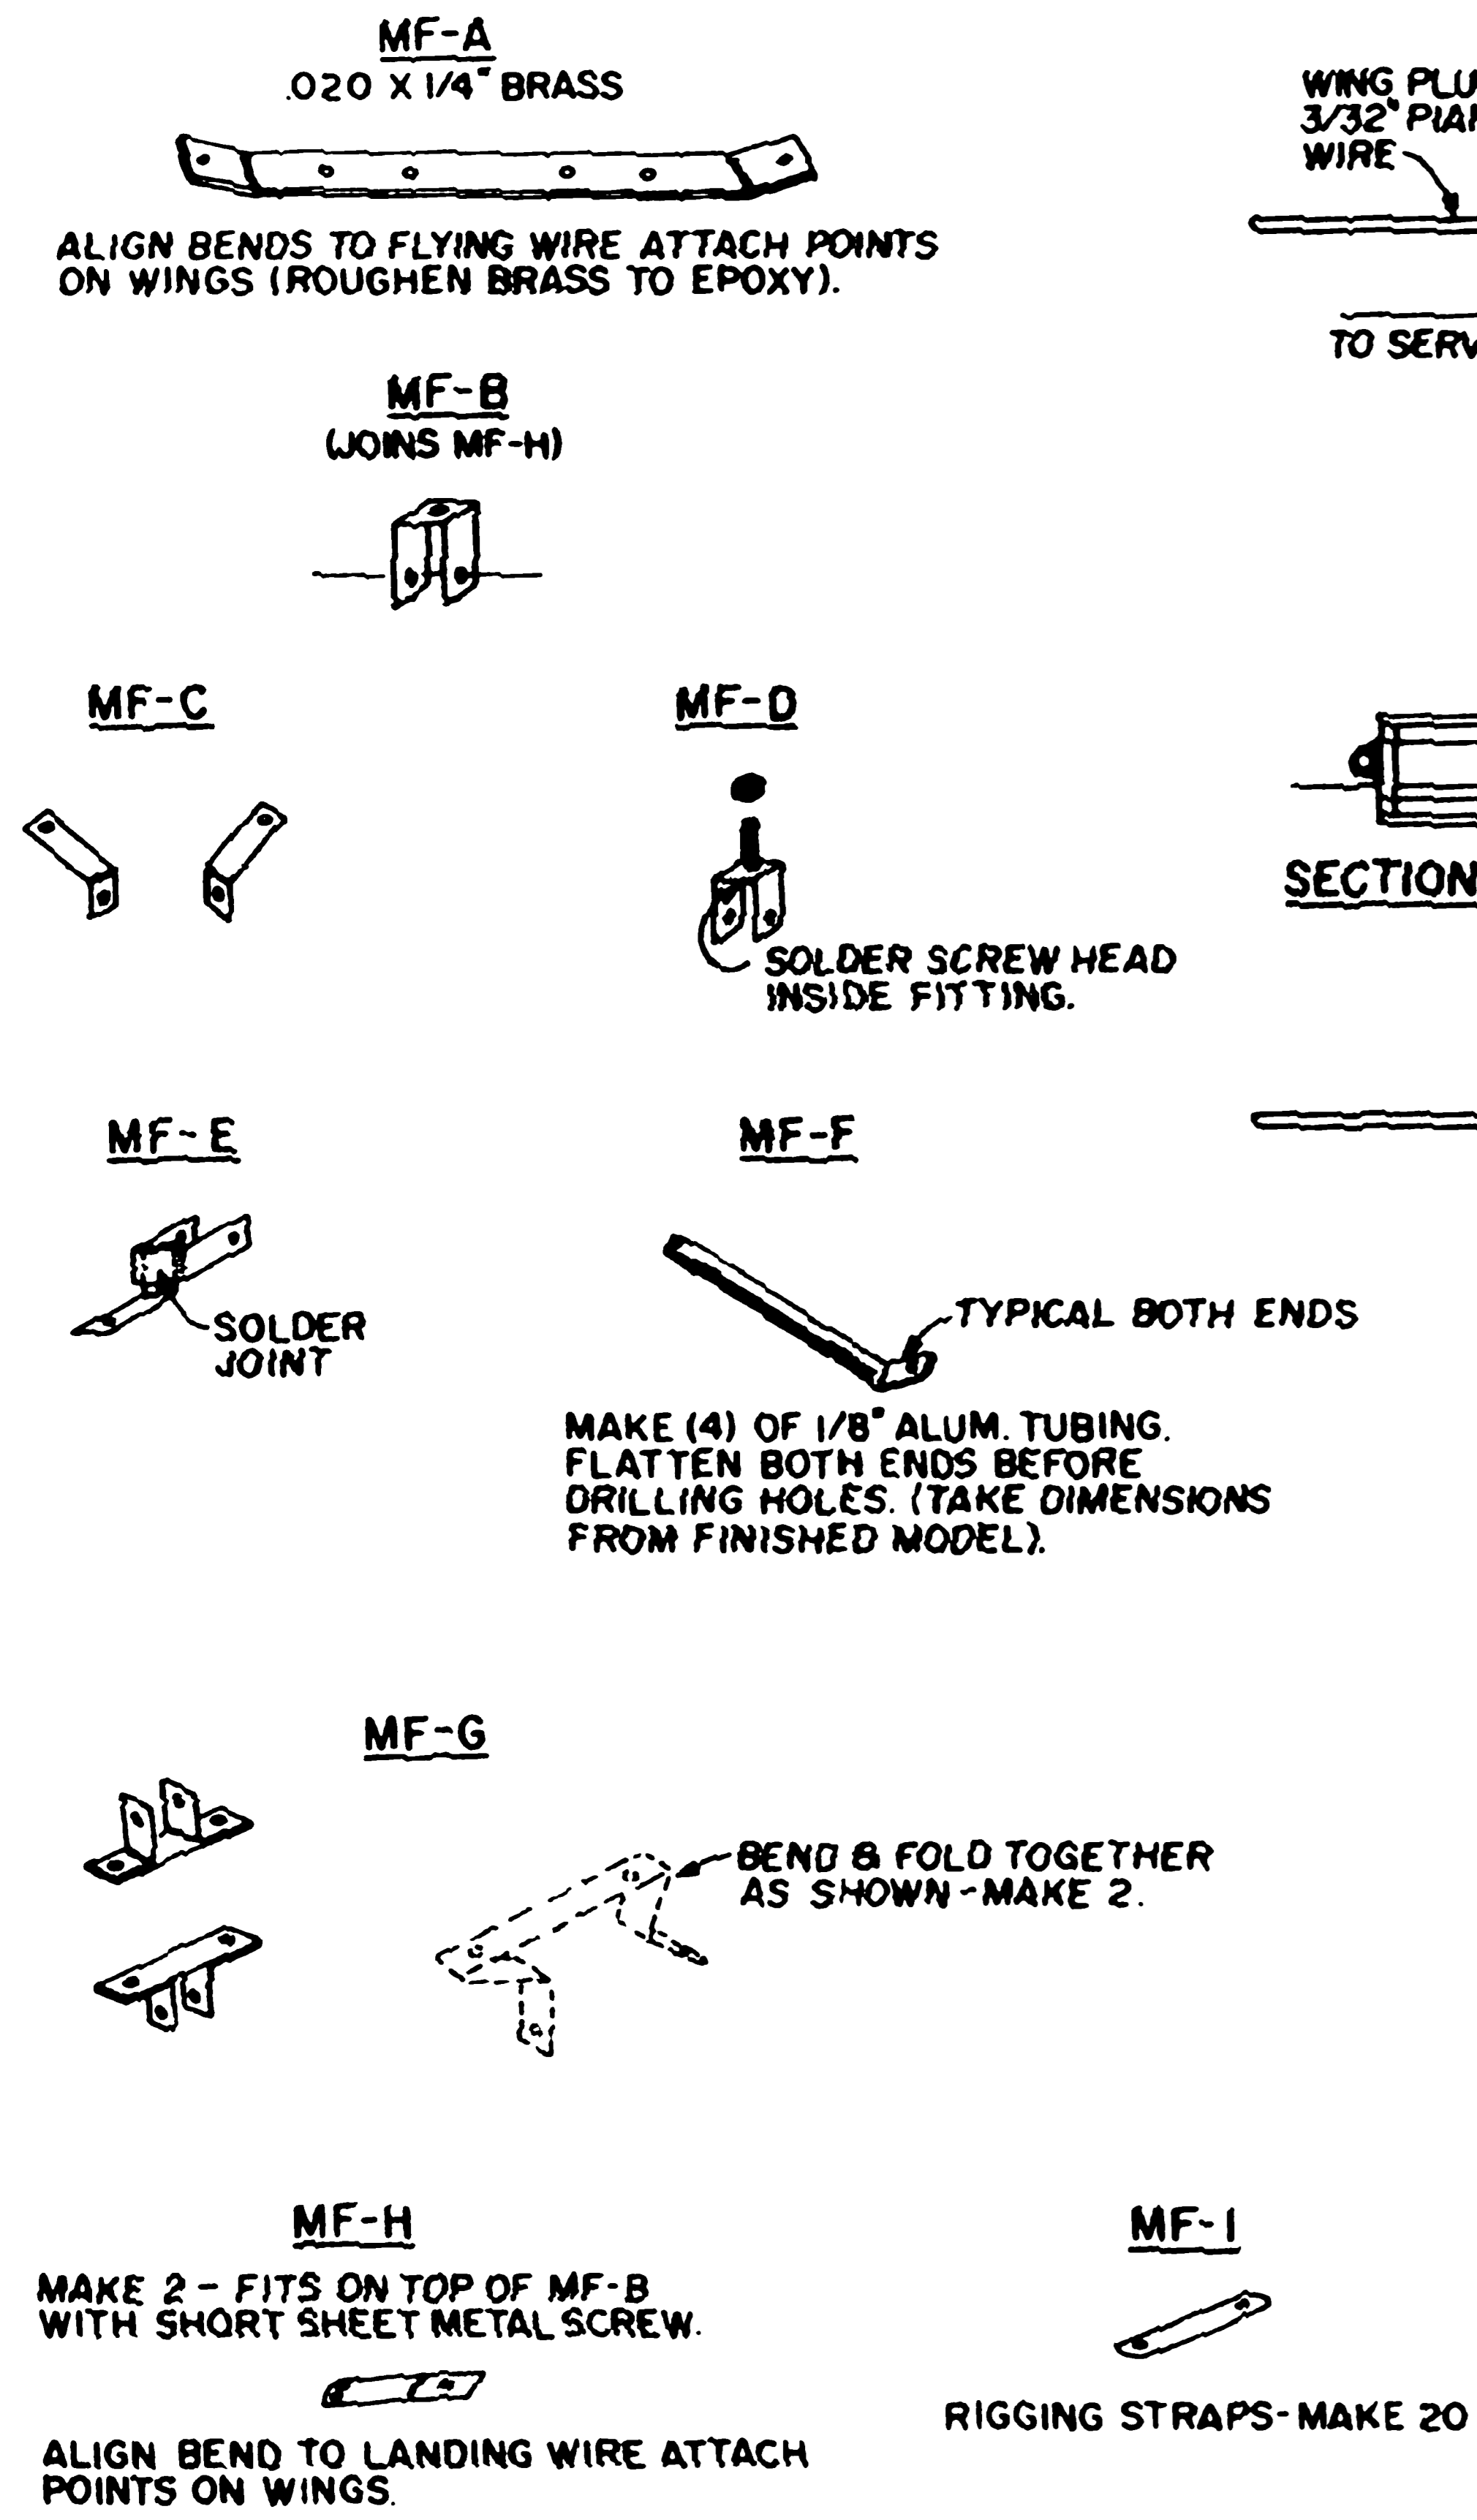







RIGGING INFORMATION

- USE "LOU PROCTOR'S" ITEMS LISTED BELOW:-
- # 3 OR # 5 TURNBUCKLES WITH CLEVIS ENDS;
 - # 312, SWAGE FITTINGS FOR WIRES;
 - # 202 RIGGING CABLE (25 FT.);
 - # 317 CLEVIS PINS;
 - # 316 BOLTS & NUTS.

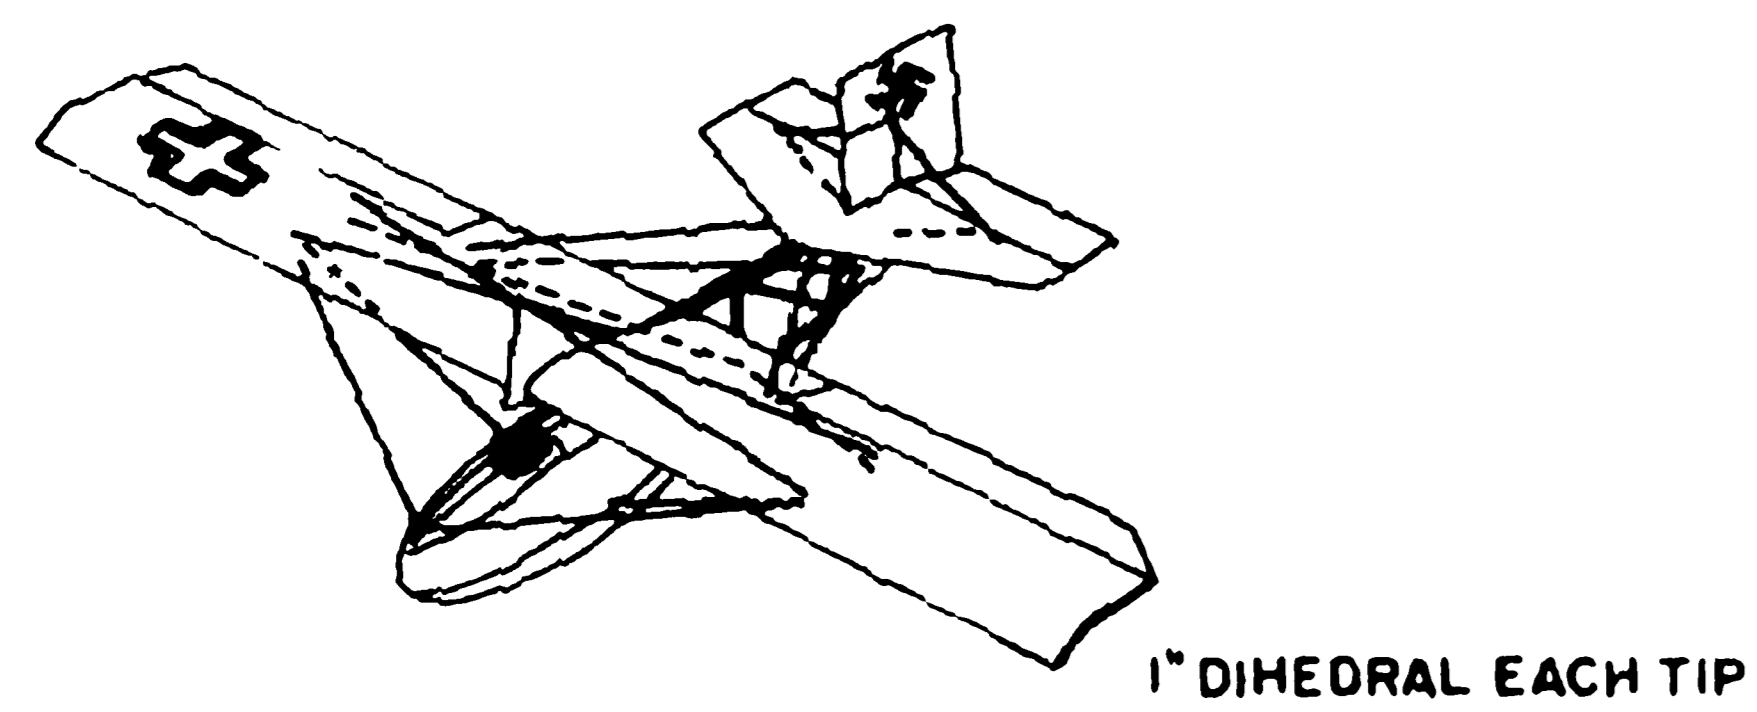

14 RIGGING WIRES TOTAL

- 4 FLYING WIRES (2 EACH SIDE)
- 4 LANDING WIRES (2 EACH SIDE)
- 2 FORWARD DRIFT WIRES
- 4 AFT DRIFT WIRES

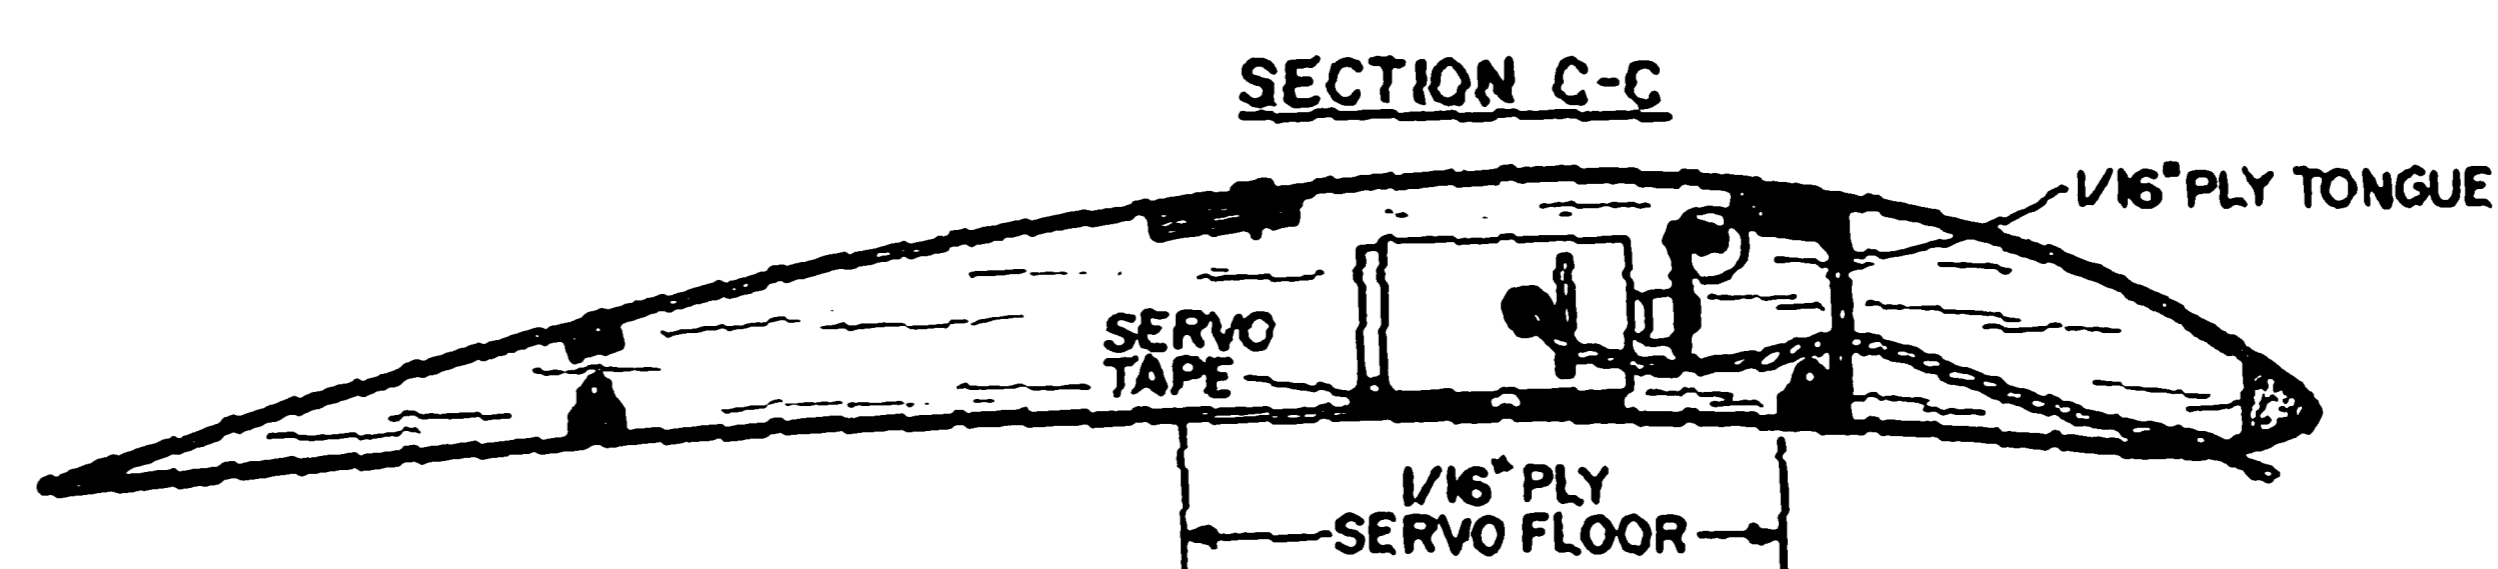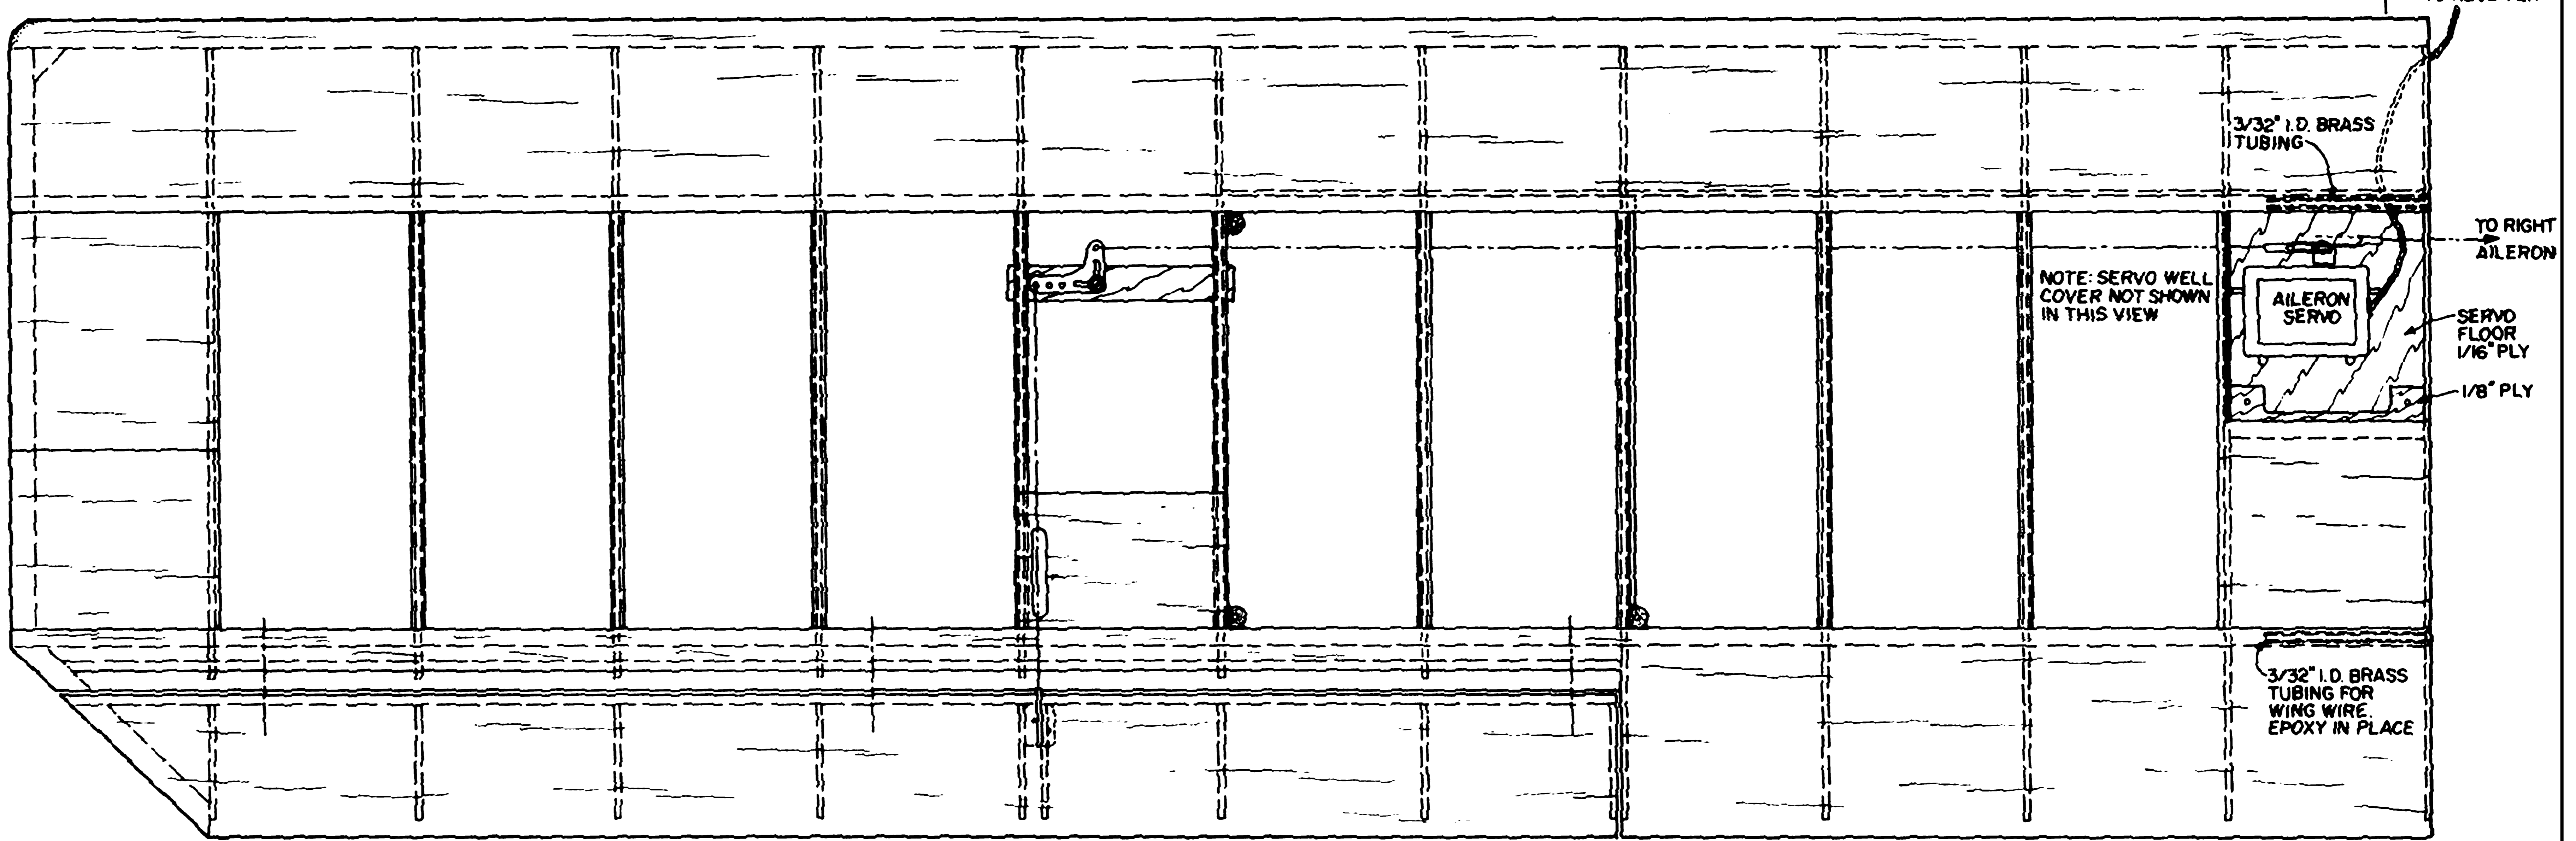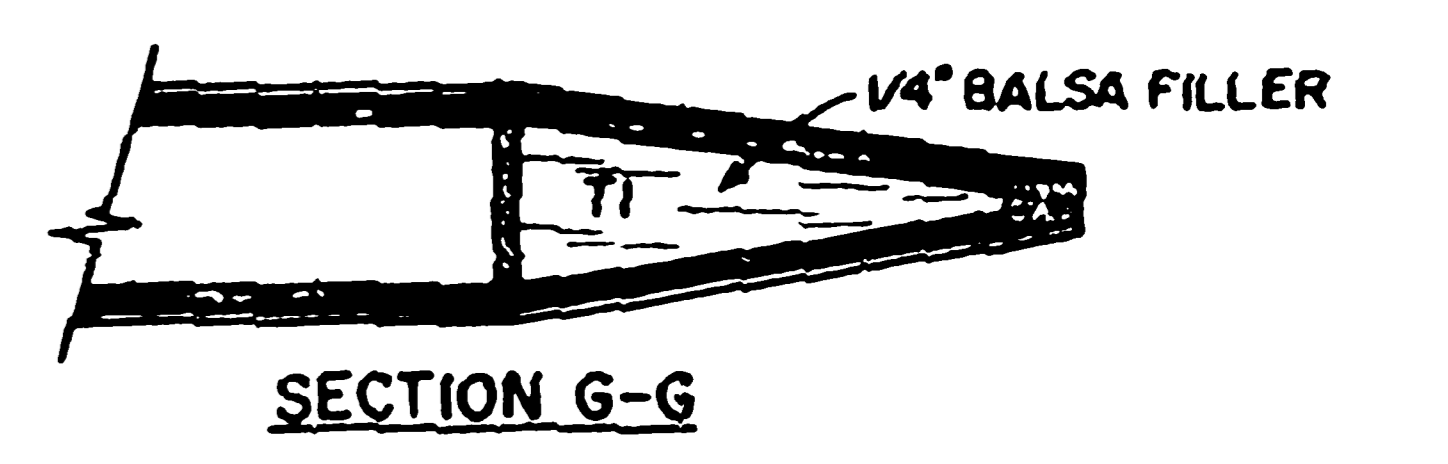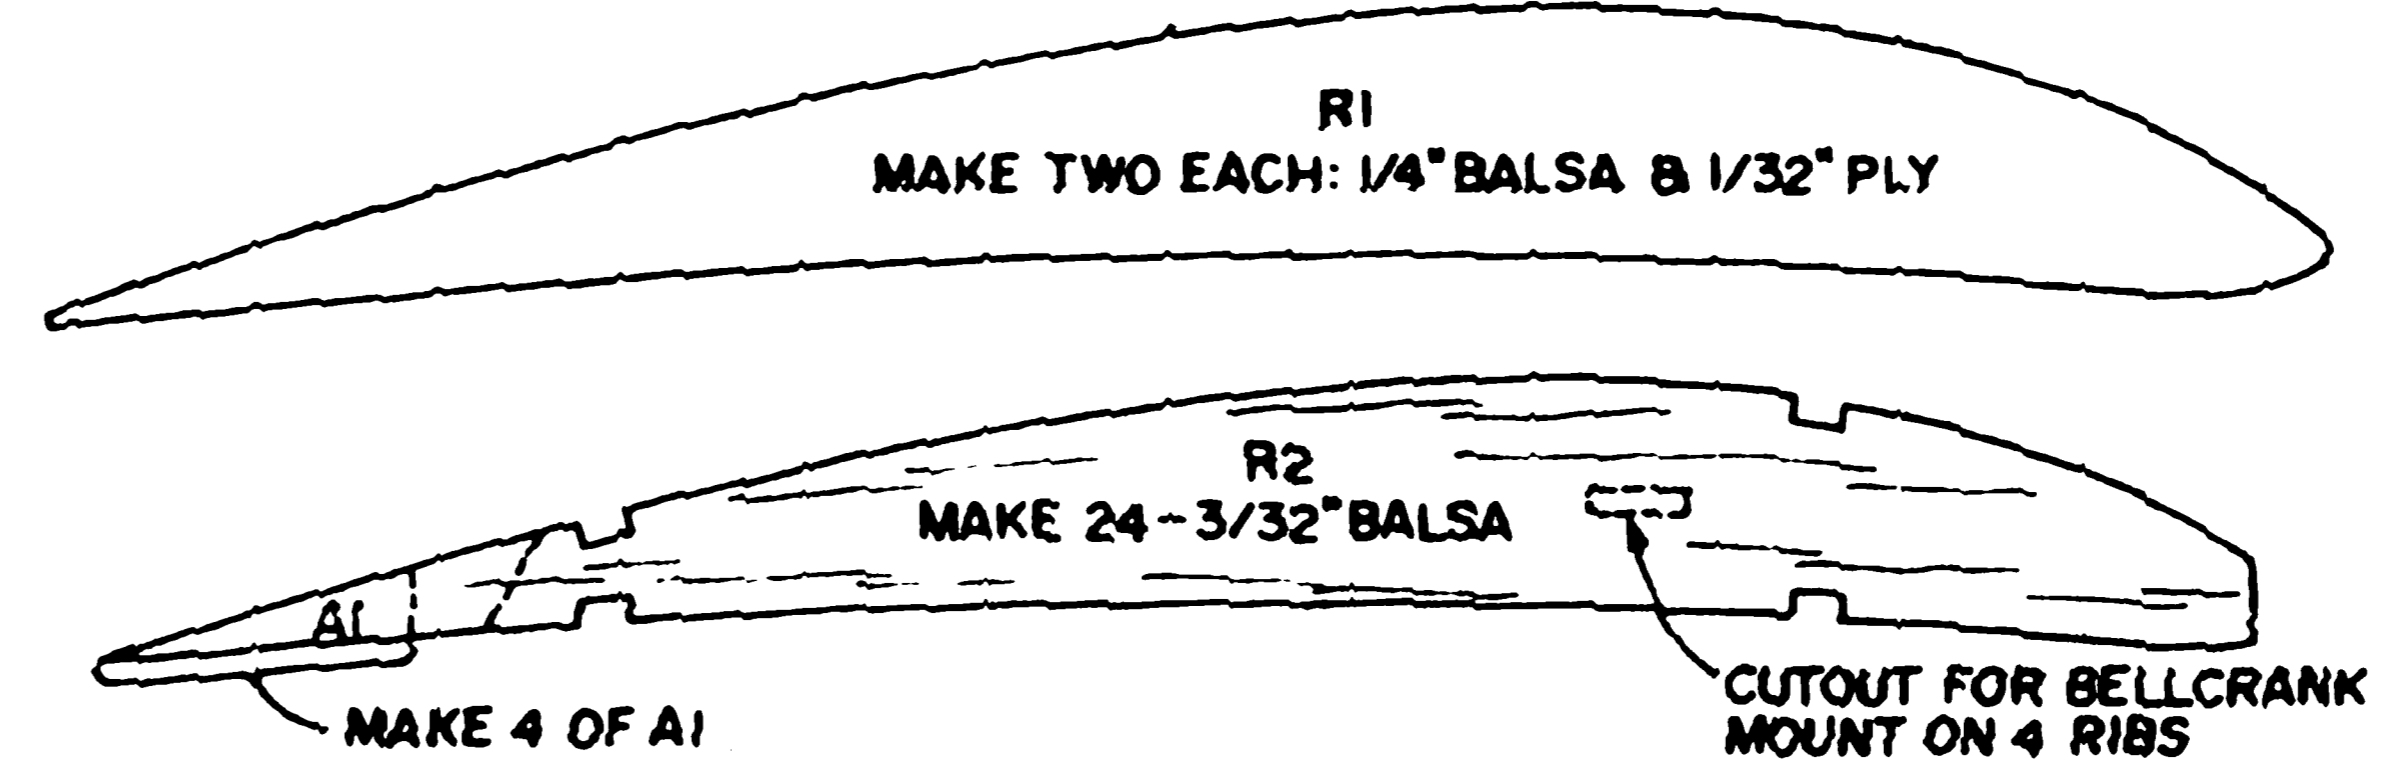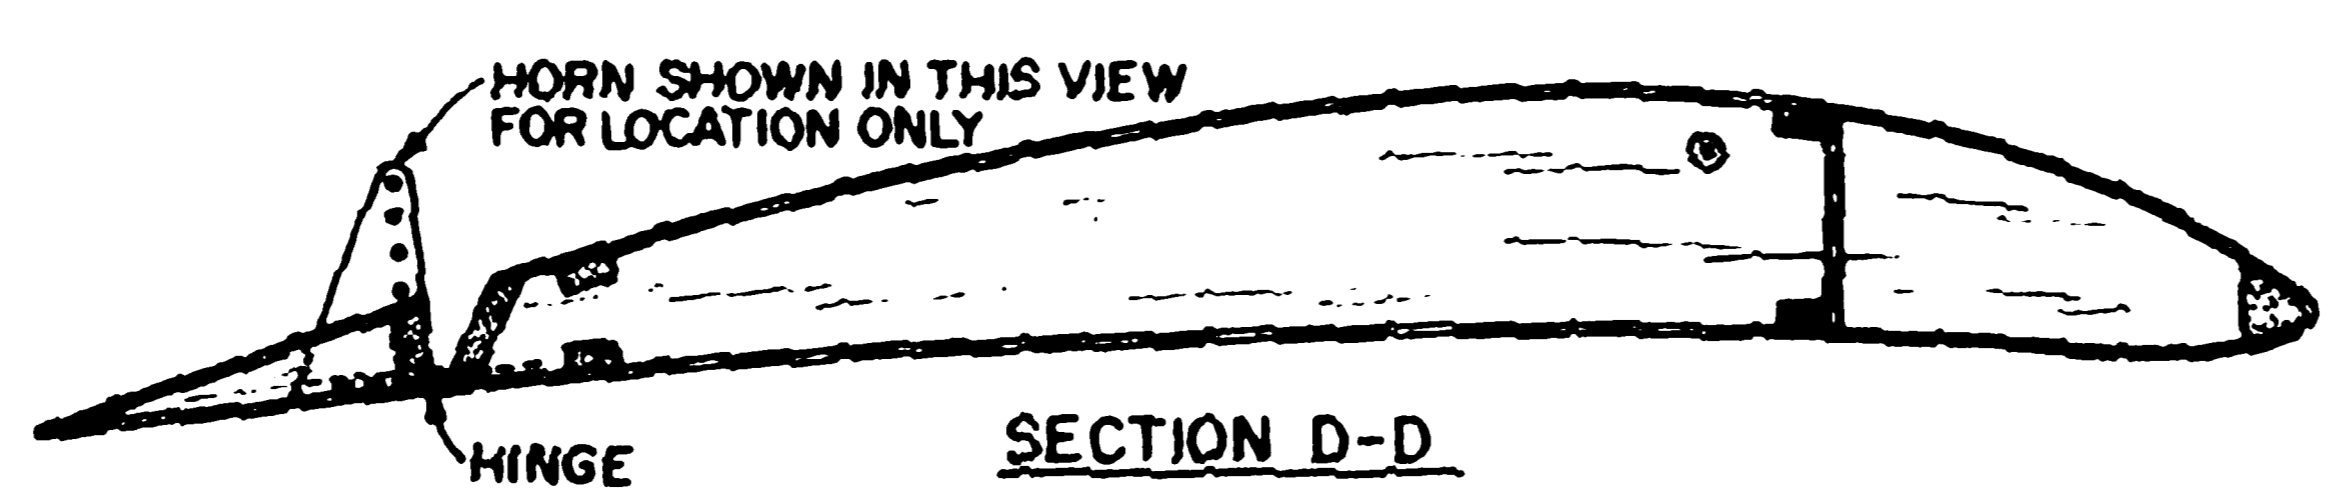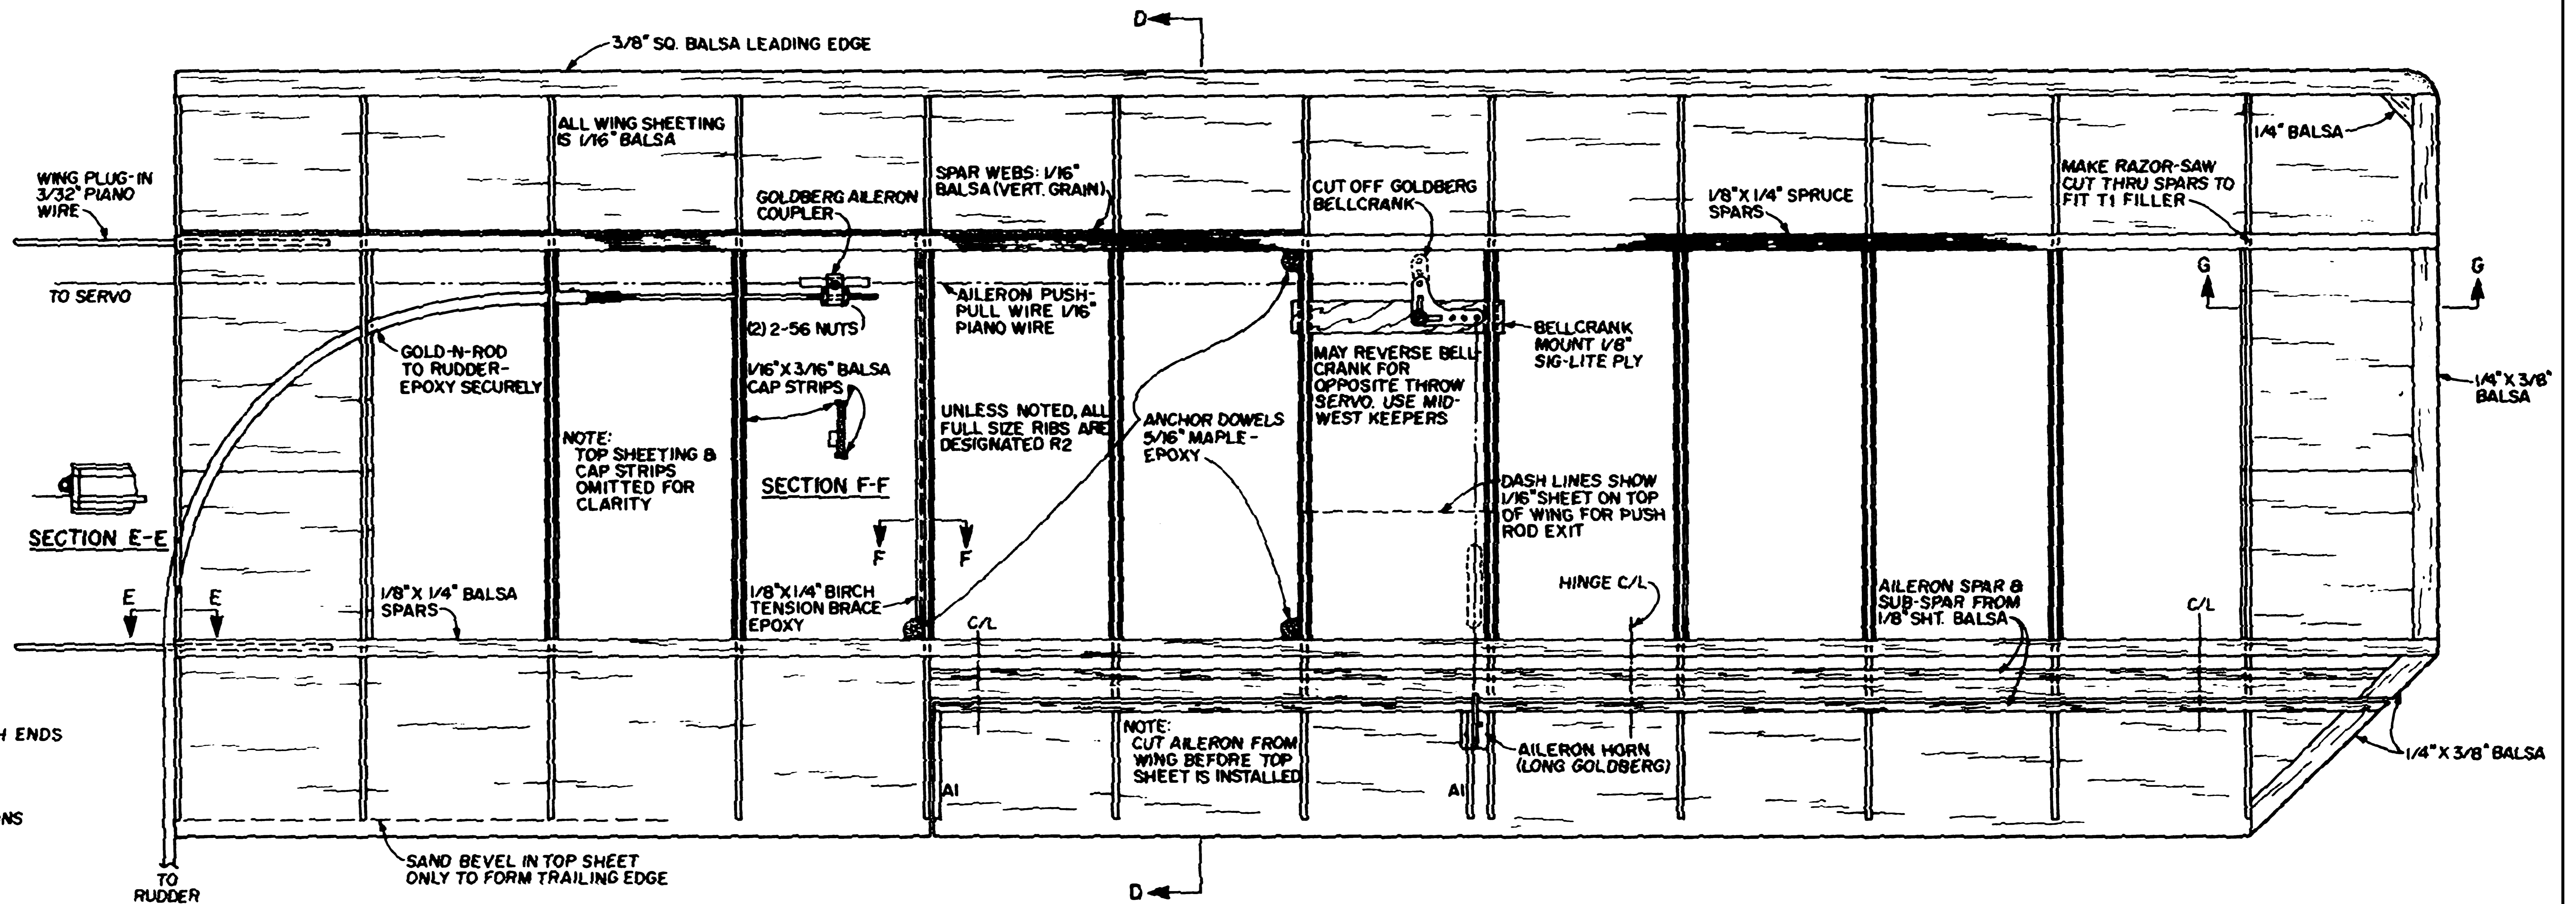

DESIGNED & DRAWN BY DR. GERRY CASEY

LINKED BY DICK KIDD

© 1998 ALL COMMERCIAL RIGHTS RESERVED

ZOGLING PRIMARY '1930'