



PROPER ALIGNMENT OF WING INCIDENCE IS NECESSARY. ENSURE ROD KEEPER BLOCKS ARE EPOXIED IN EXACT PLACE AS SHOWN.

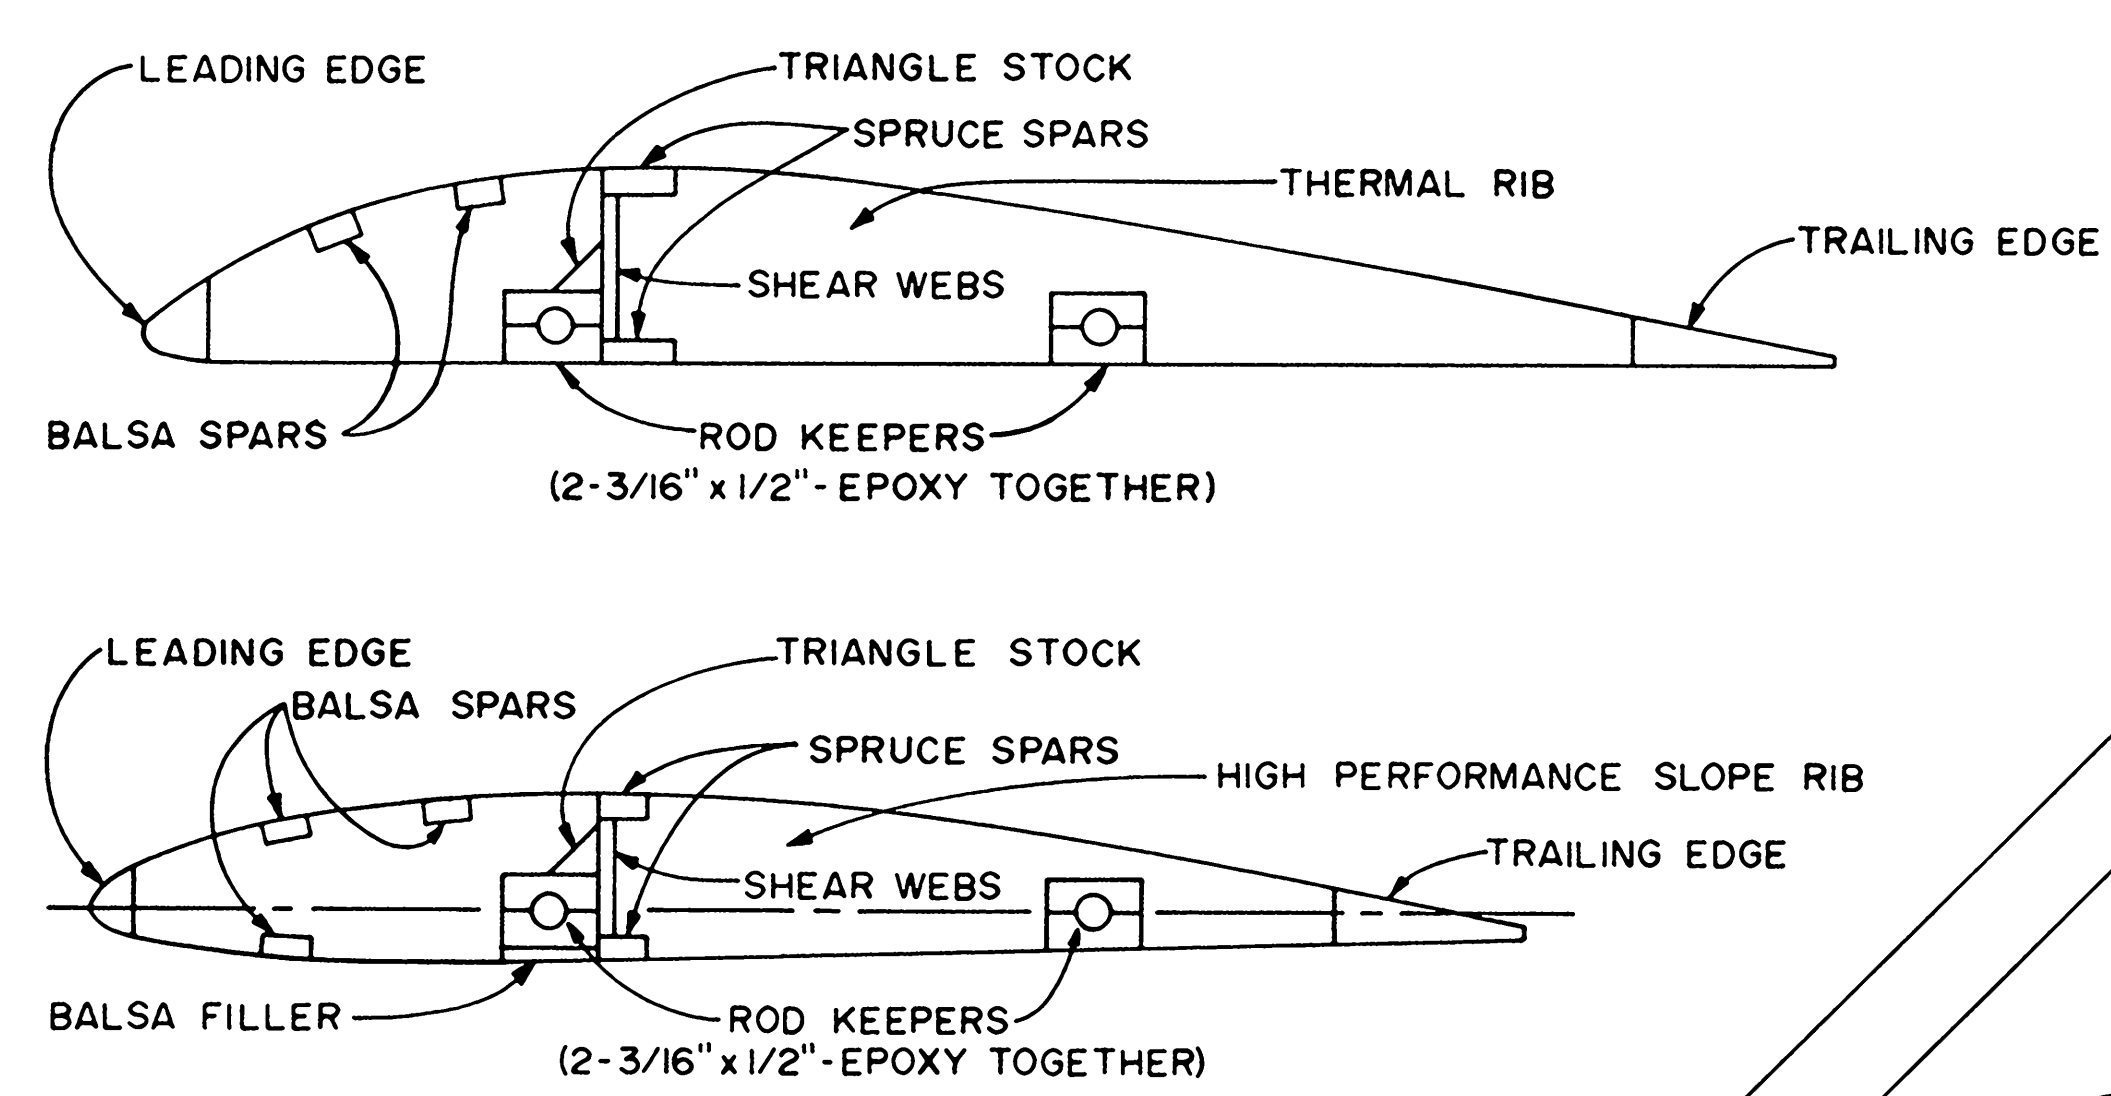

NOTE: WAX WING PLANS AFTER RIGHT PANELS ARE BUILT. TURN PLANS OVER TO CONSTRUCT LEFT PANELS.

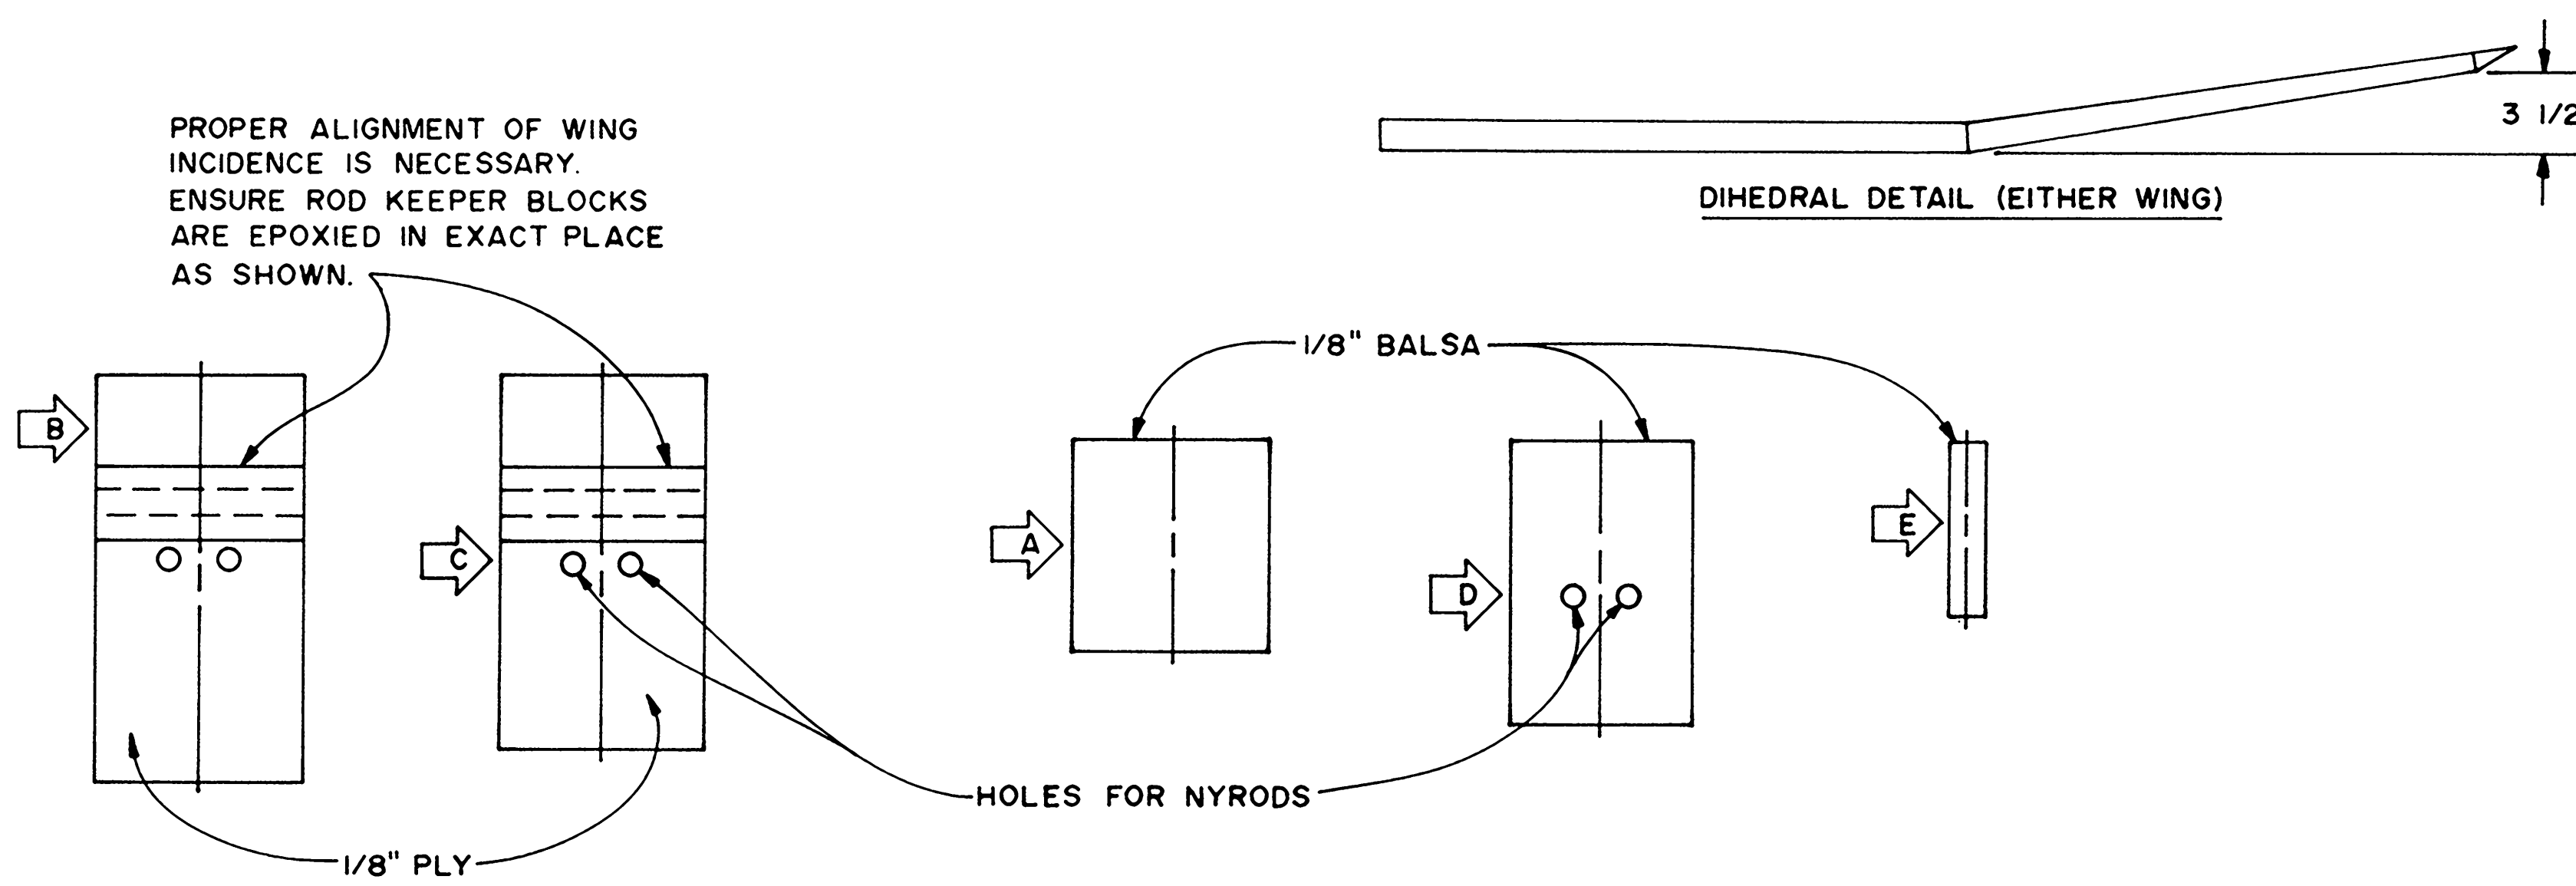