

CHUNKY
 DESIGNED BY
Aeromodeller Staff
 COPYRIGHT OF
THE AEROMODELLER PLANS SERVICE
 38, CLARENDON RD., WATFORD, HERTS


ALL WOODS ARE BALSA UNLESS OTHERWISE STATED

Materials Required	
1 strip of 1/4 x 1/4 x 36" shaped L.E.	1 sheet of 1/8 x 3" x 36"
1 . . . 1/2 x 1/2 x 36"	1/2 of 3/16 x 1/4" hardwood bearer
1 . . . 3/8 x 3/4 x 36"	14" of 18 s.w.g piano wire
1 . . . 1" x 1/4 x 36"	3 sheets of Lightweight Modalspan
2 . . . 7/8 x 1/2 x 36"	4 off 8 B.A. nuts, bolts, washers.
3 . . . 1/4 x 1/8 x 36"	Cement, dope, glasspaper
1 sheet . . . 3/32 x 3" x 36"	Small transparent free-flight tank
2 . . . 1/16 x 3" x 36"	

FUSELAGE CONSTRUCTION

Pin fuselage side over plan, add bearers and 1/16 sheet fillers, 1/8 x 1/4 bottom, end and F5. Add other side, then tail platform. Fit wire parts, drill bearers, assemble P6's on P1, add P2, P4, P5 and runners.
DO NOT FIT PYLON UNTIL ENTIRE MODEL IS FINISHED AND BALANCED.

Tail is retained by rubber bands passing around fuselage outside ends of L.E. pivot, to D/T hook on tail.

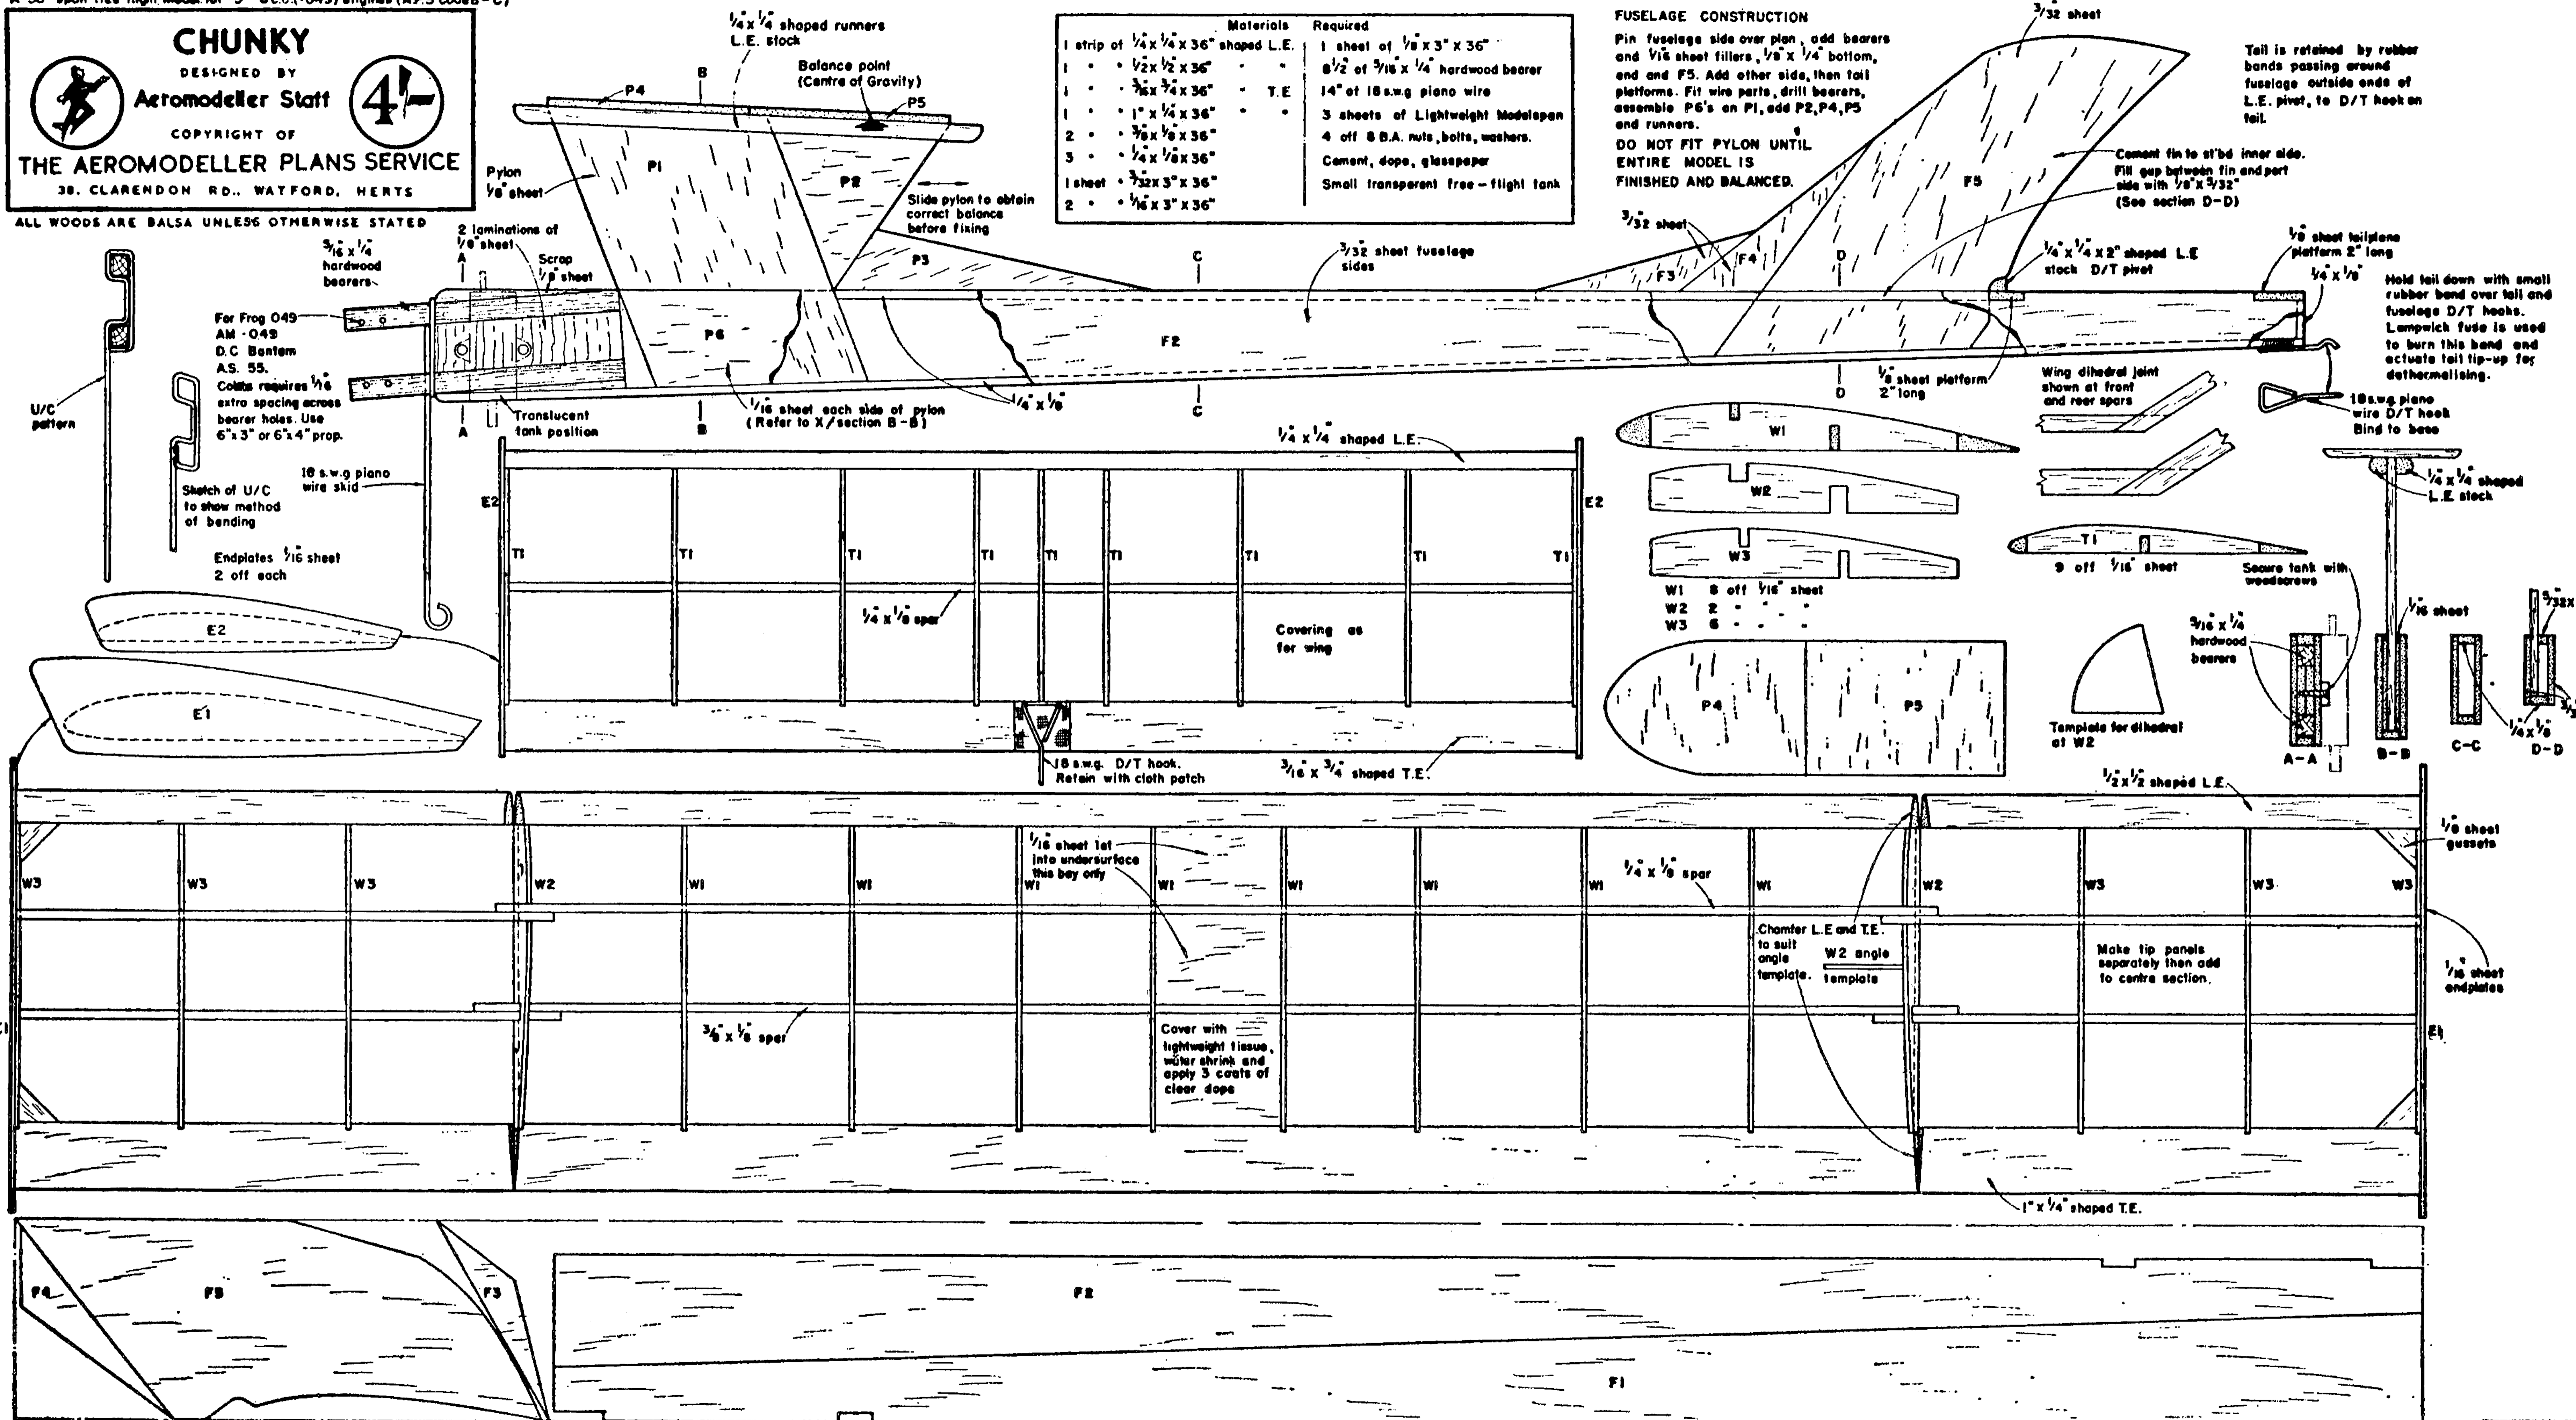

Layout for 3/32 parts on 3" x 36" sheet.