
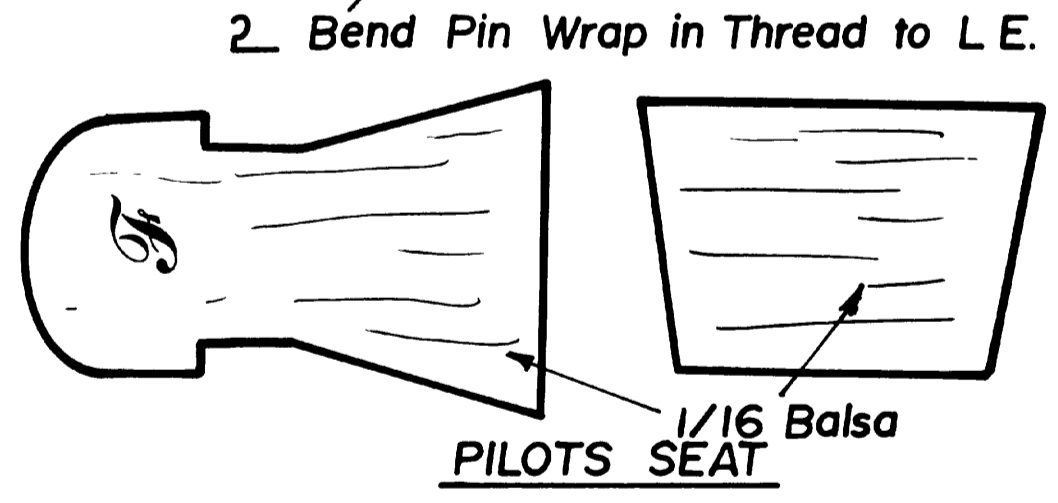
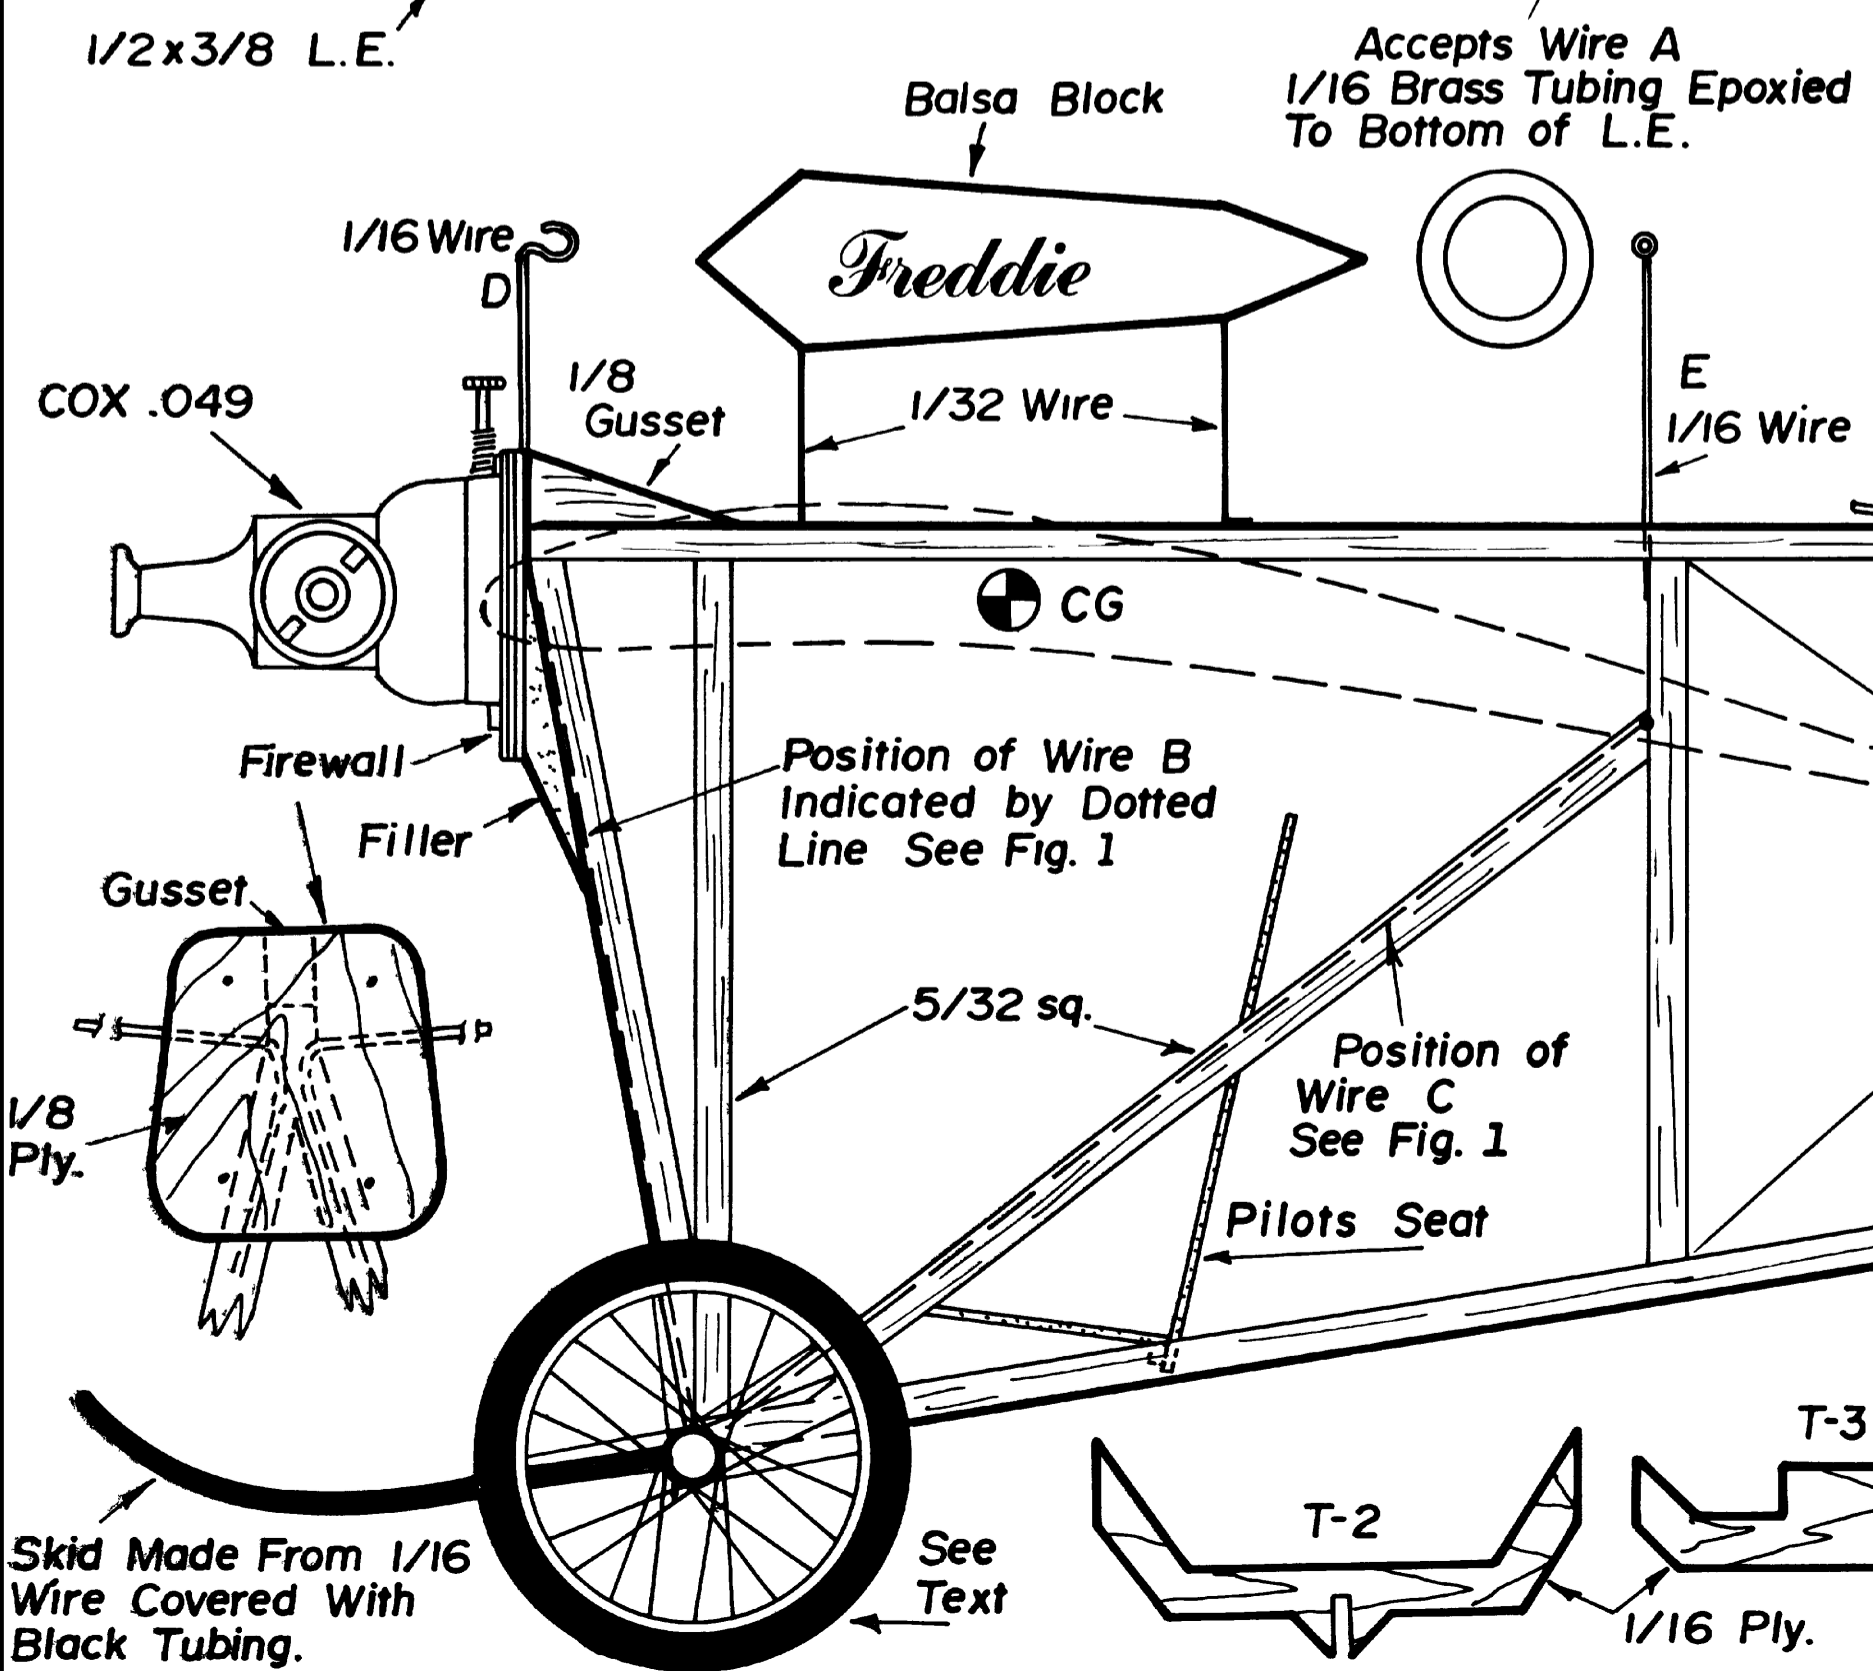
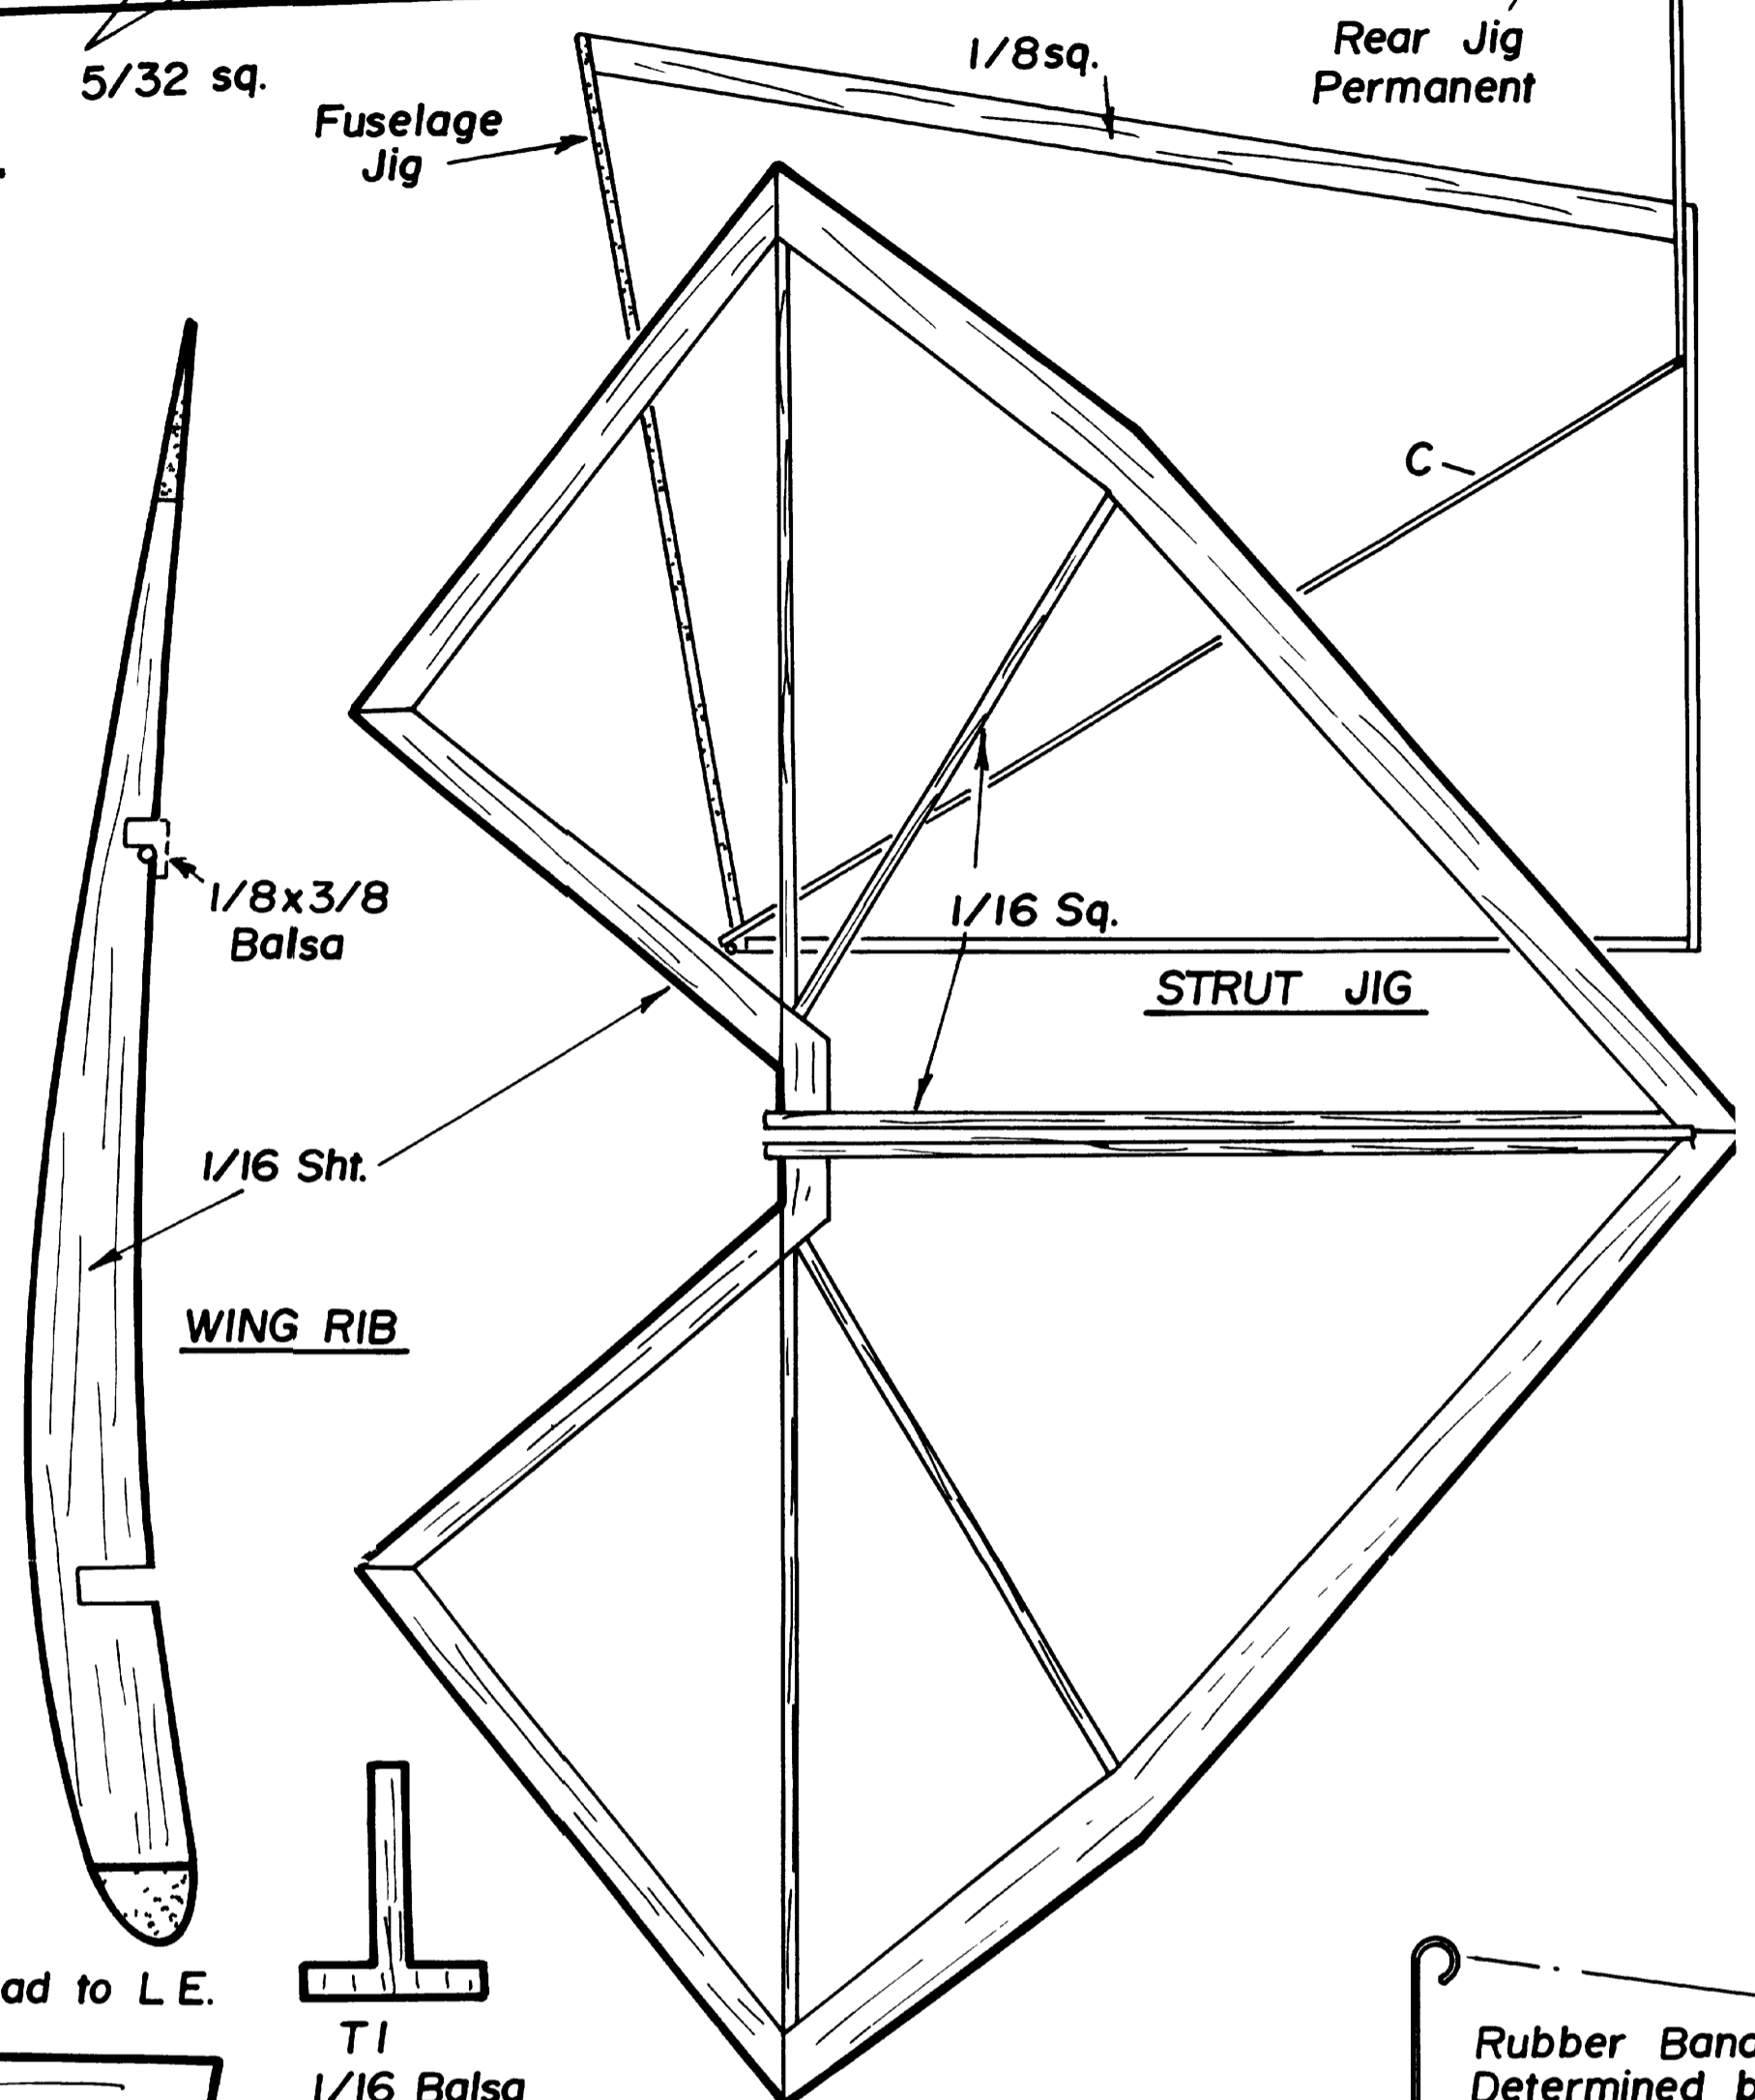


Front FUSELAGE Jig (Temporary)

NOTE: Assemble Fuse. Bottom, Tack Bottom To Jig, Add Top Longeron, & Fit Uprights


DEMOISELLE

Designed by S. MacPHERSON
Traced by Al. Novotnik

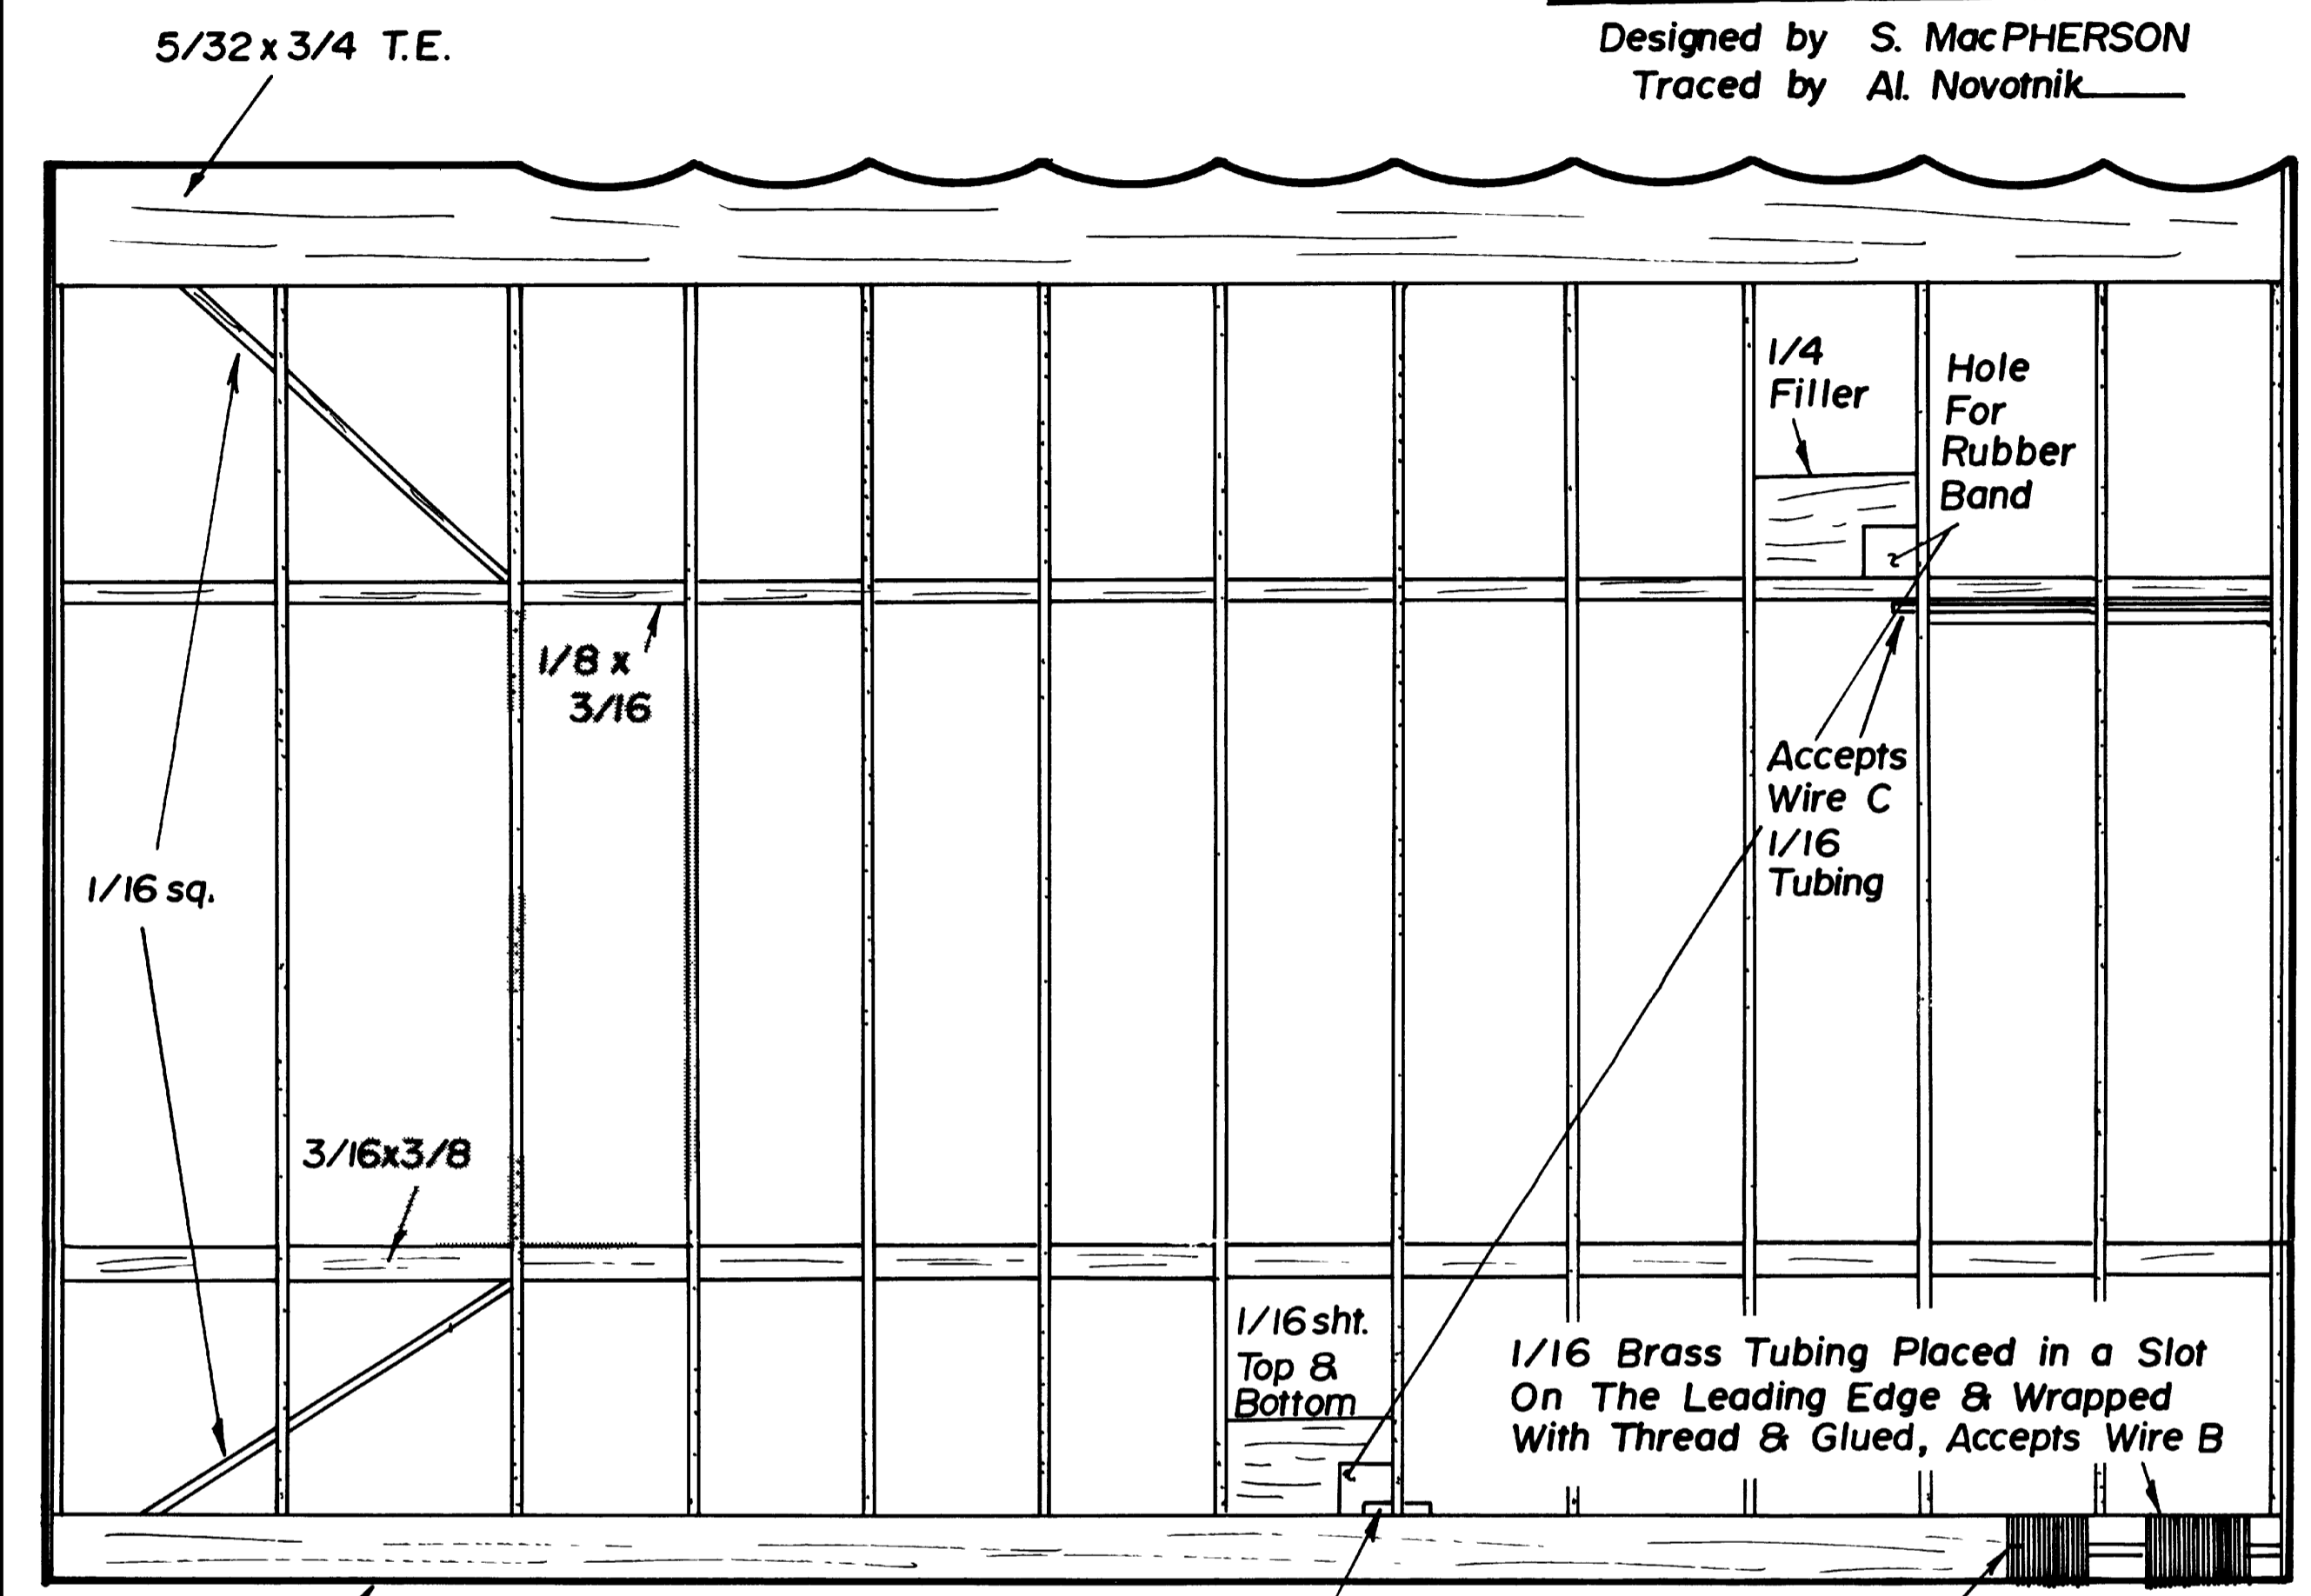

HORIZONTAL STABILIZER

ASSEMBLY NOTES (Continued)
and Hooked To Wires Protruding on Opposite Wing. Rubber Band Hooked on The End of Wire C, Passed Under Model & Hooked To End of Wire C on Opposite Wings.

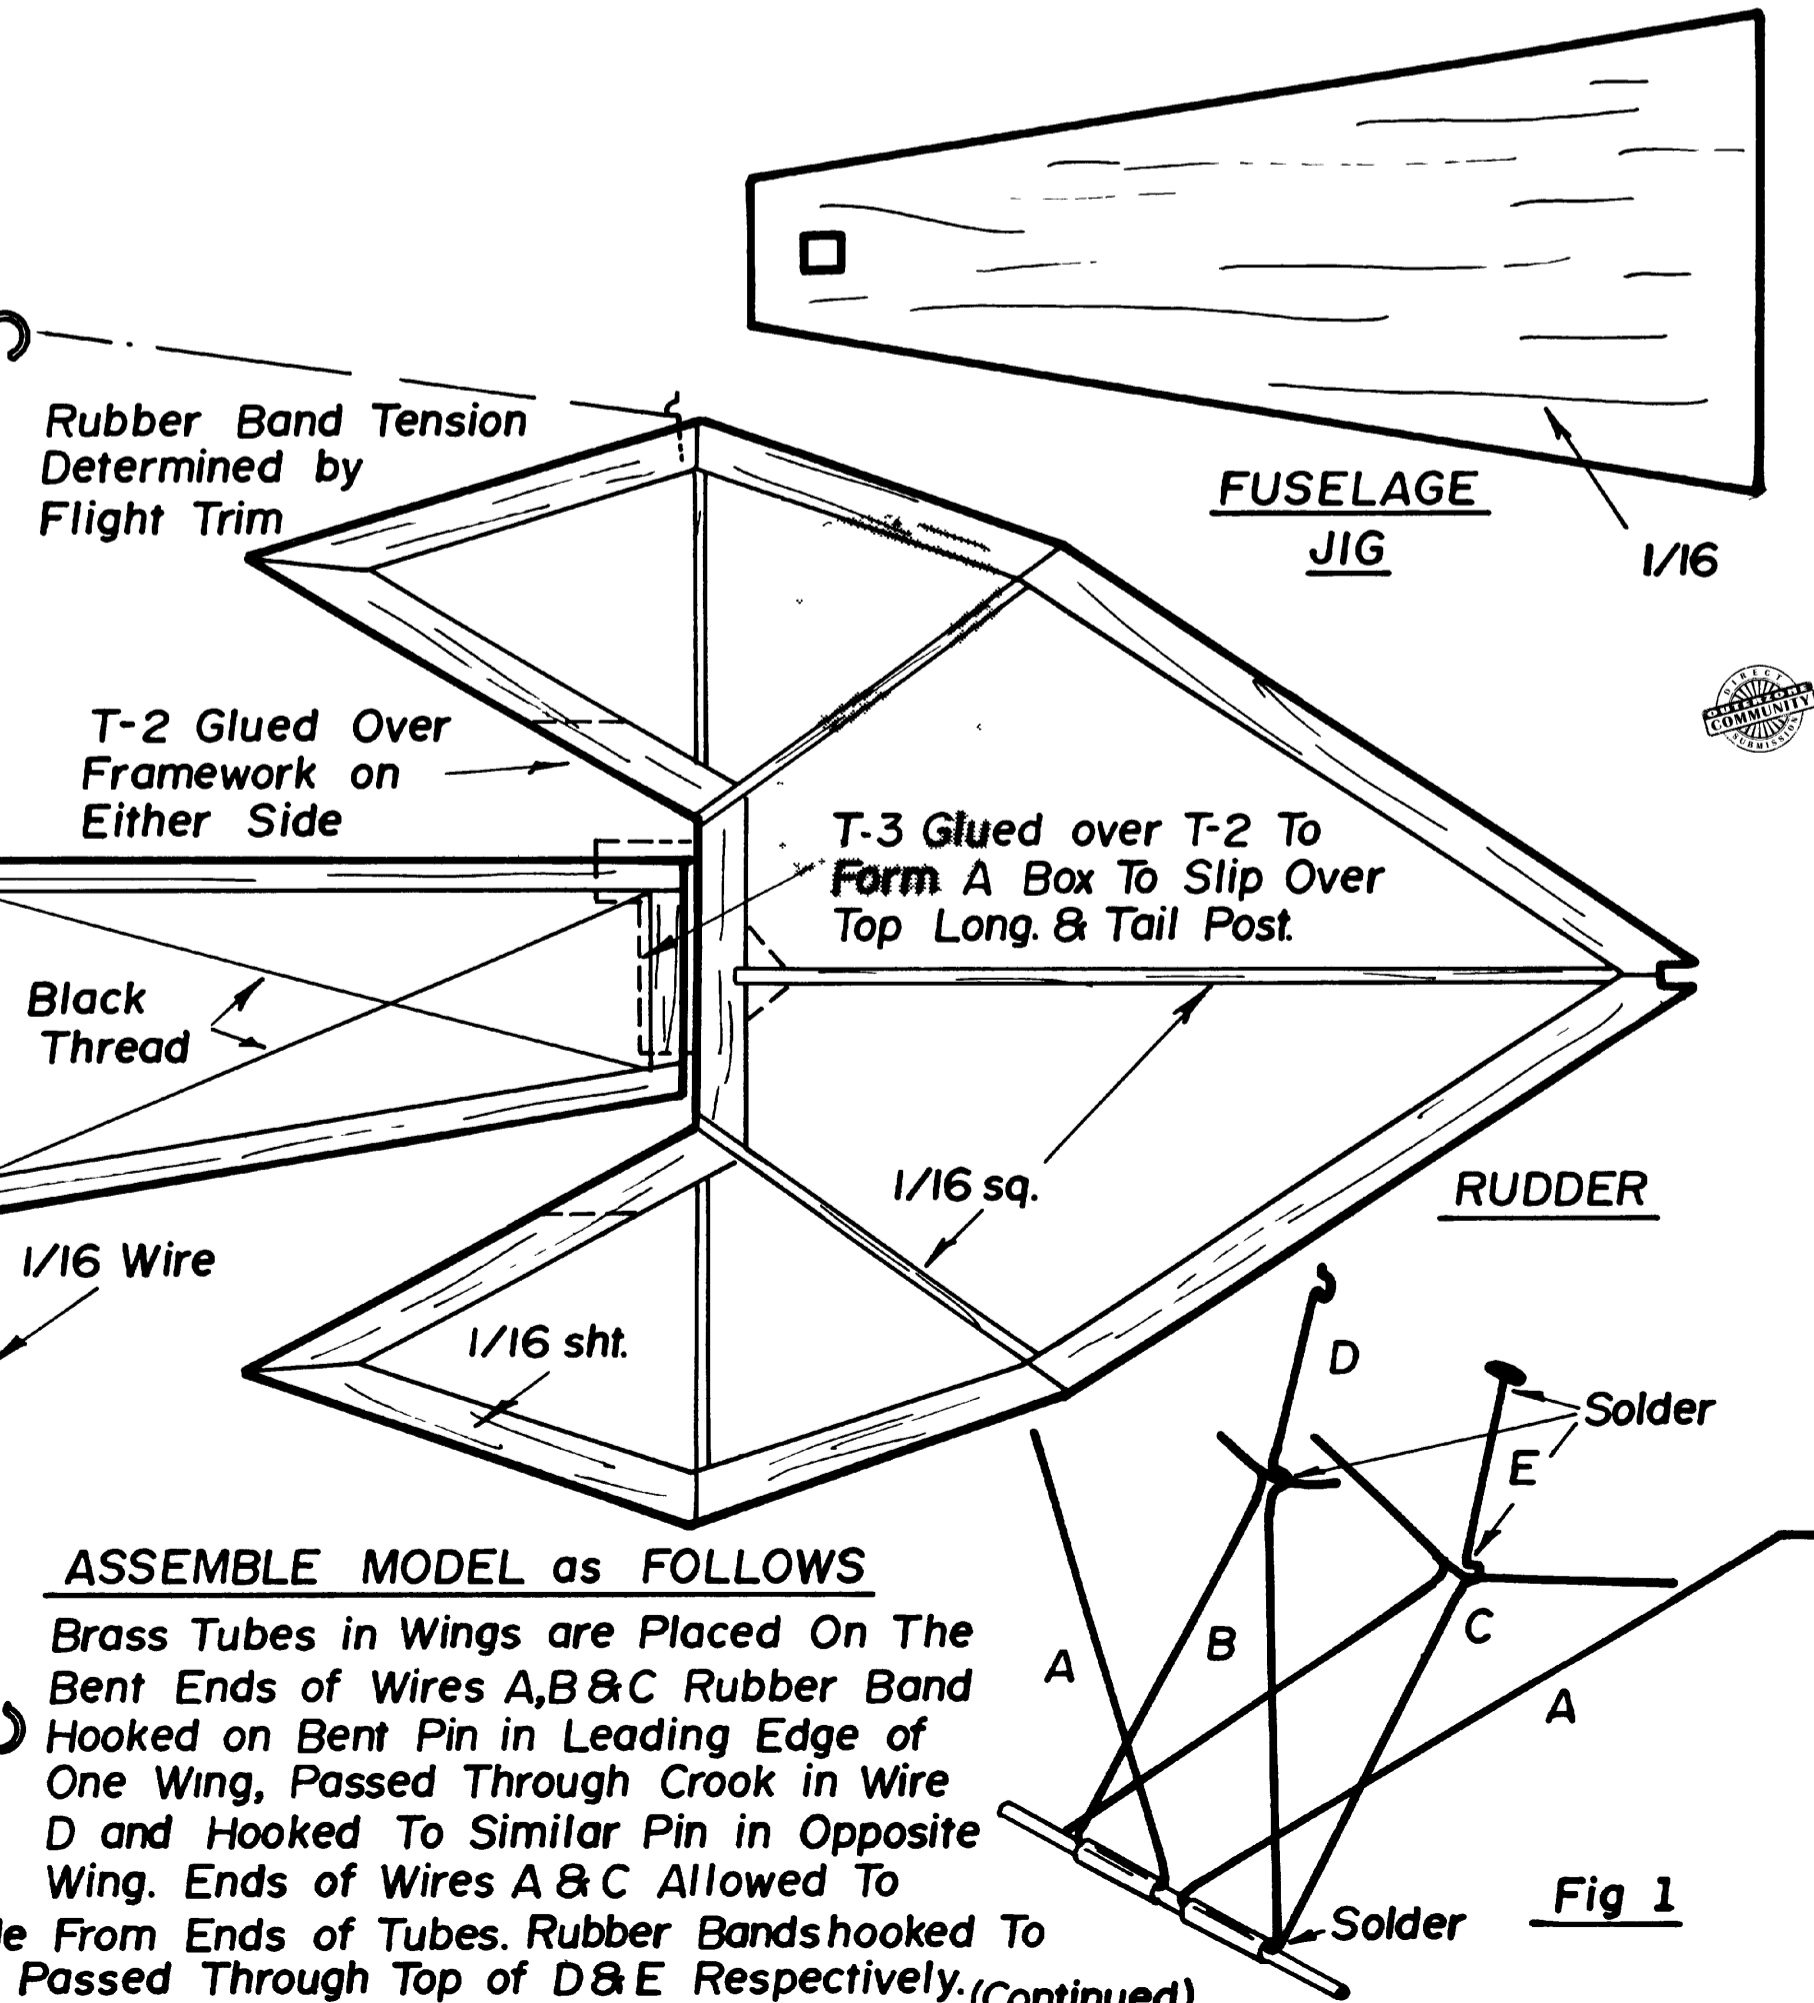

MODEL AIRPLANE NEWS
551 FIFTH AVENUE • NEW YORK 17, N. Y.

from Demoiselle

Daddy Rabbit Hoopree