


- NOTES**
1. PIN ALL HINGES.
  2. FOR ENGINES .29 OR LARGER USE SPRUCE FOR SPAR CAPS
  3. MAKE CUT OUT BEHIND SPAR FOR YOUR SIZE SERVO.
  4. ALL RIBS TRIMMED TO LENGTH AT REAR.

BUILD IT LIGHT - 3.5 LBS. OR LESS GIVES 1.16 LBS. PER SQ. FT.

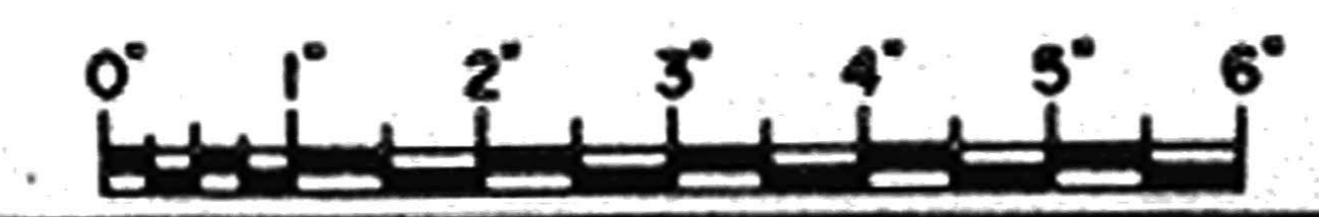

MODEL AIRPLANE NEWS  
**THRUSH**  
 DESIGNED & DRAWN BY STEVE GARDNER  
 TRACING BY JOE DEMARCO  
 ALL RIGHTS RESERVED