
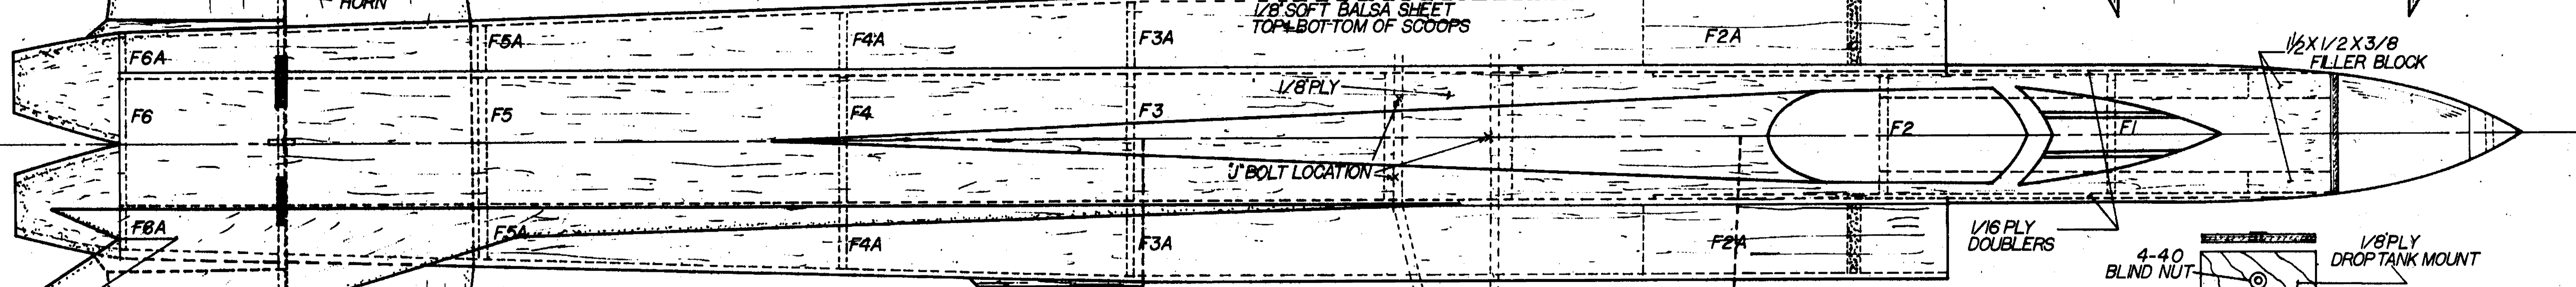
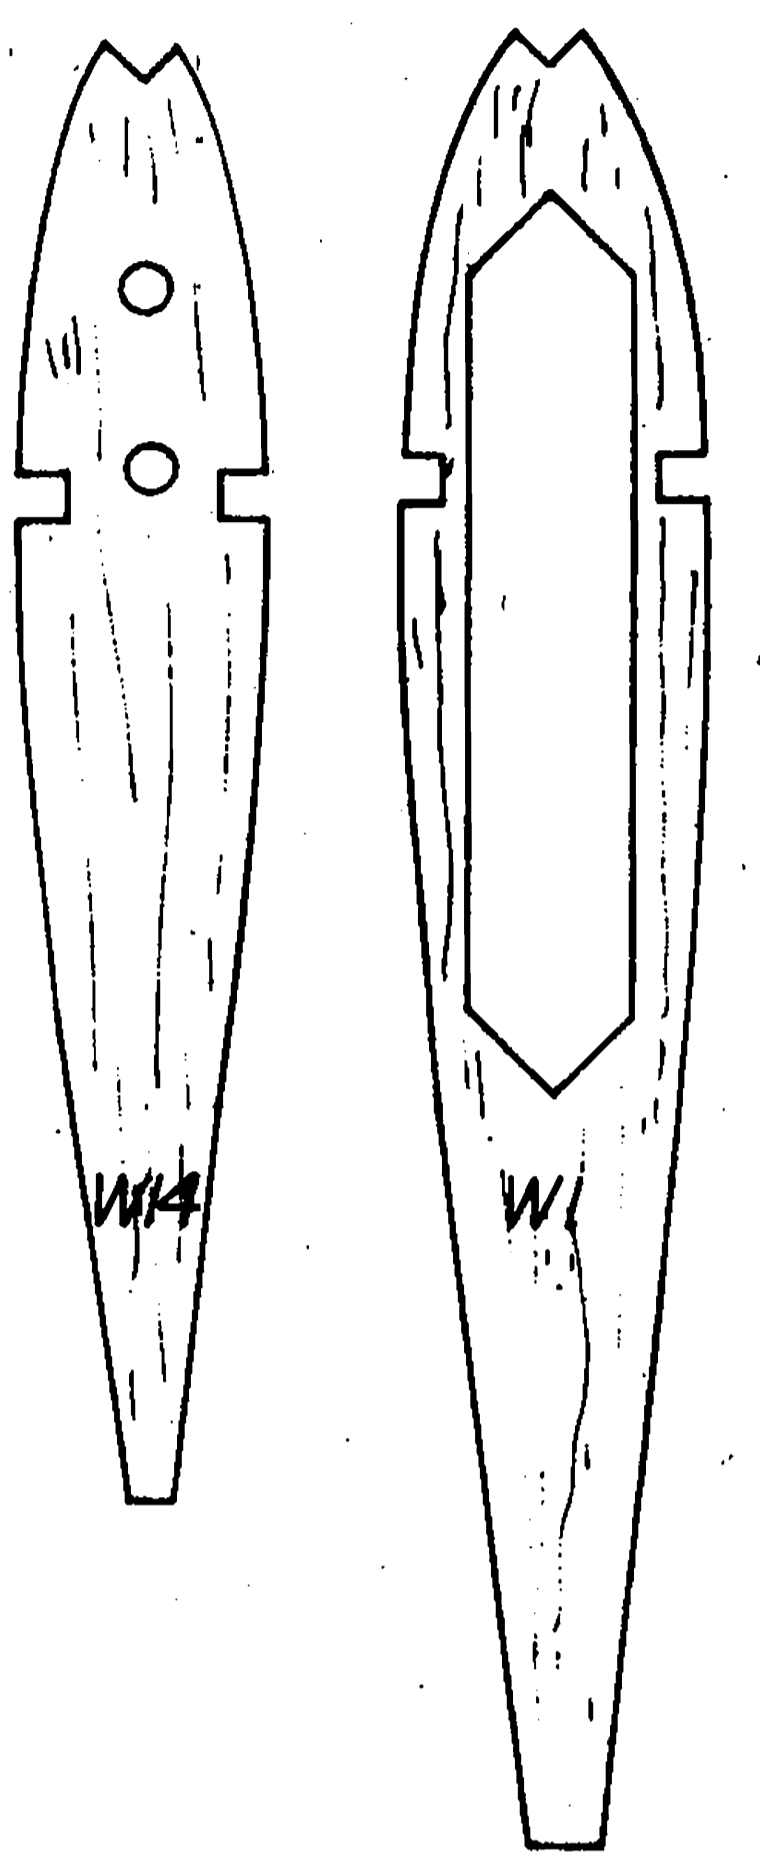


- A) MAKE 1/16 PLY TEMPLATES OF W1+W14.
- B) STACK 12 10X2X1/16 Balsa STRIPS BETWEEN TEMPLATES + SAND RIBS TO SHAPE.
- C) CUT W1+W14 DIRECTLY FROM TEMPLATES.
- D) USE SAME PROCEDURE FOR OTHER HALF OF WING.

NOTE
MAKE OUTBOARD TIP 2 INCHES SHORTER THAN INBOARD TIP.

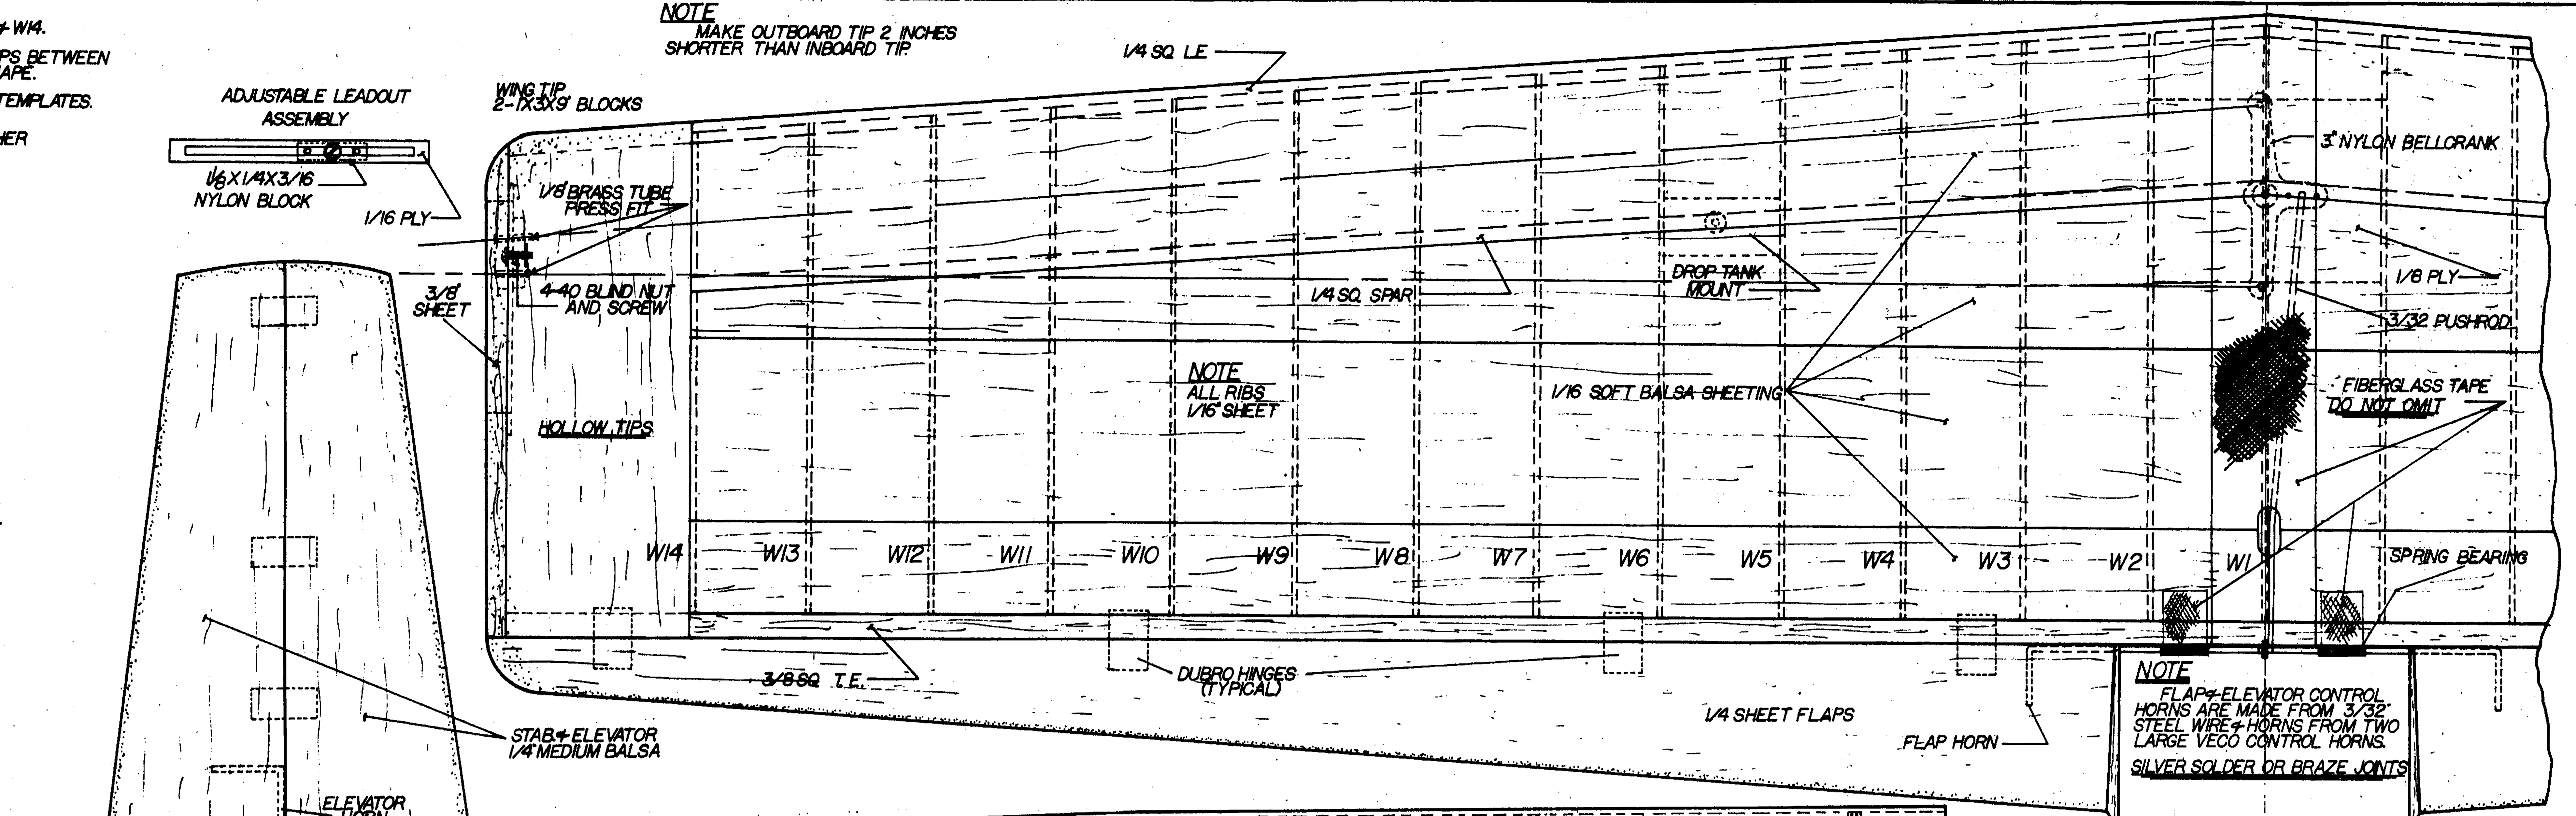

F-14 Tom Cat

DESIGNED AND INKED BY
VIC MACALUSO

