


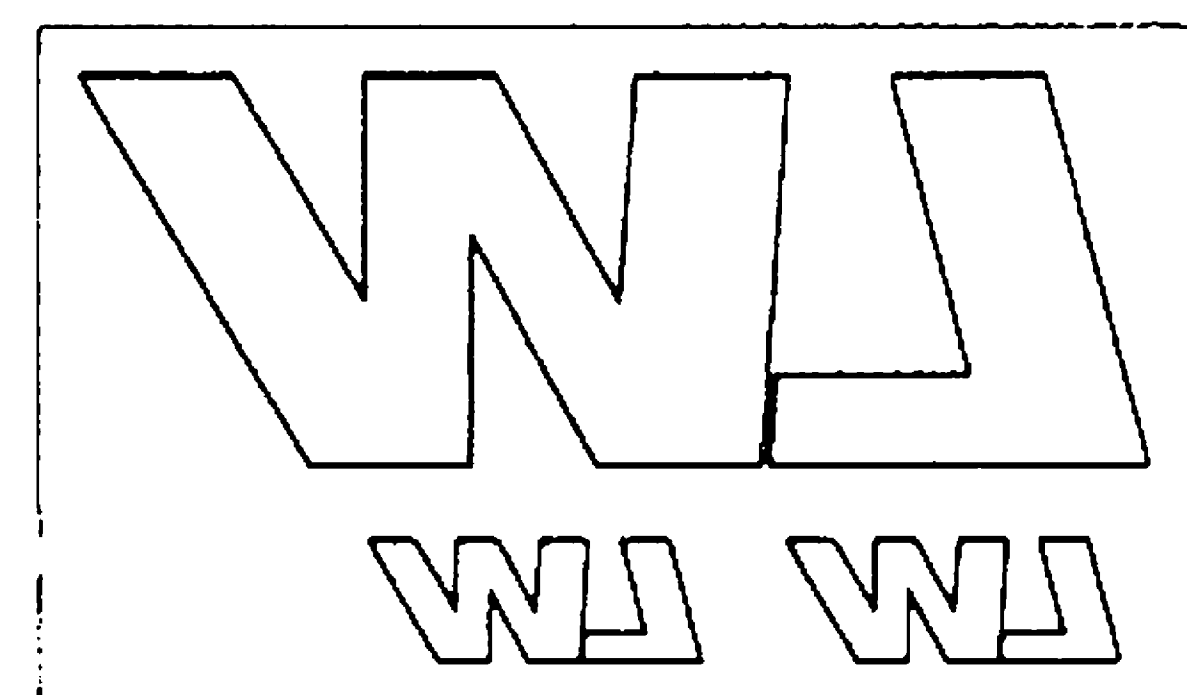


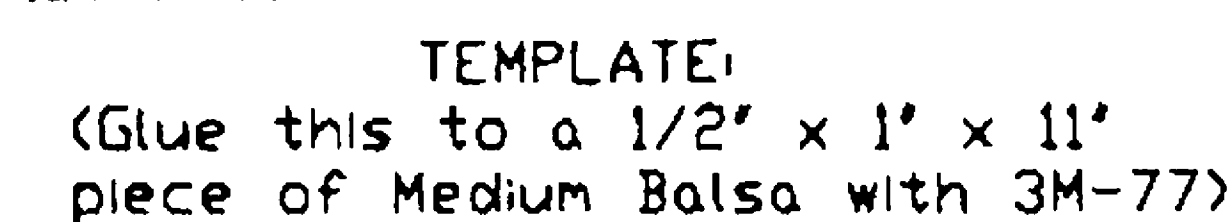


TEMPLATE for LW stickers.
(Glue this to the back of UltraCoat
Plus or trim sheet with 3M-77.)

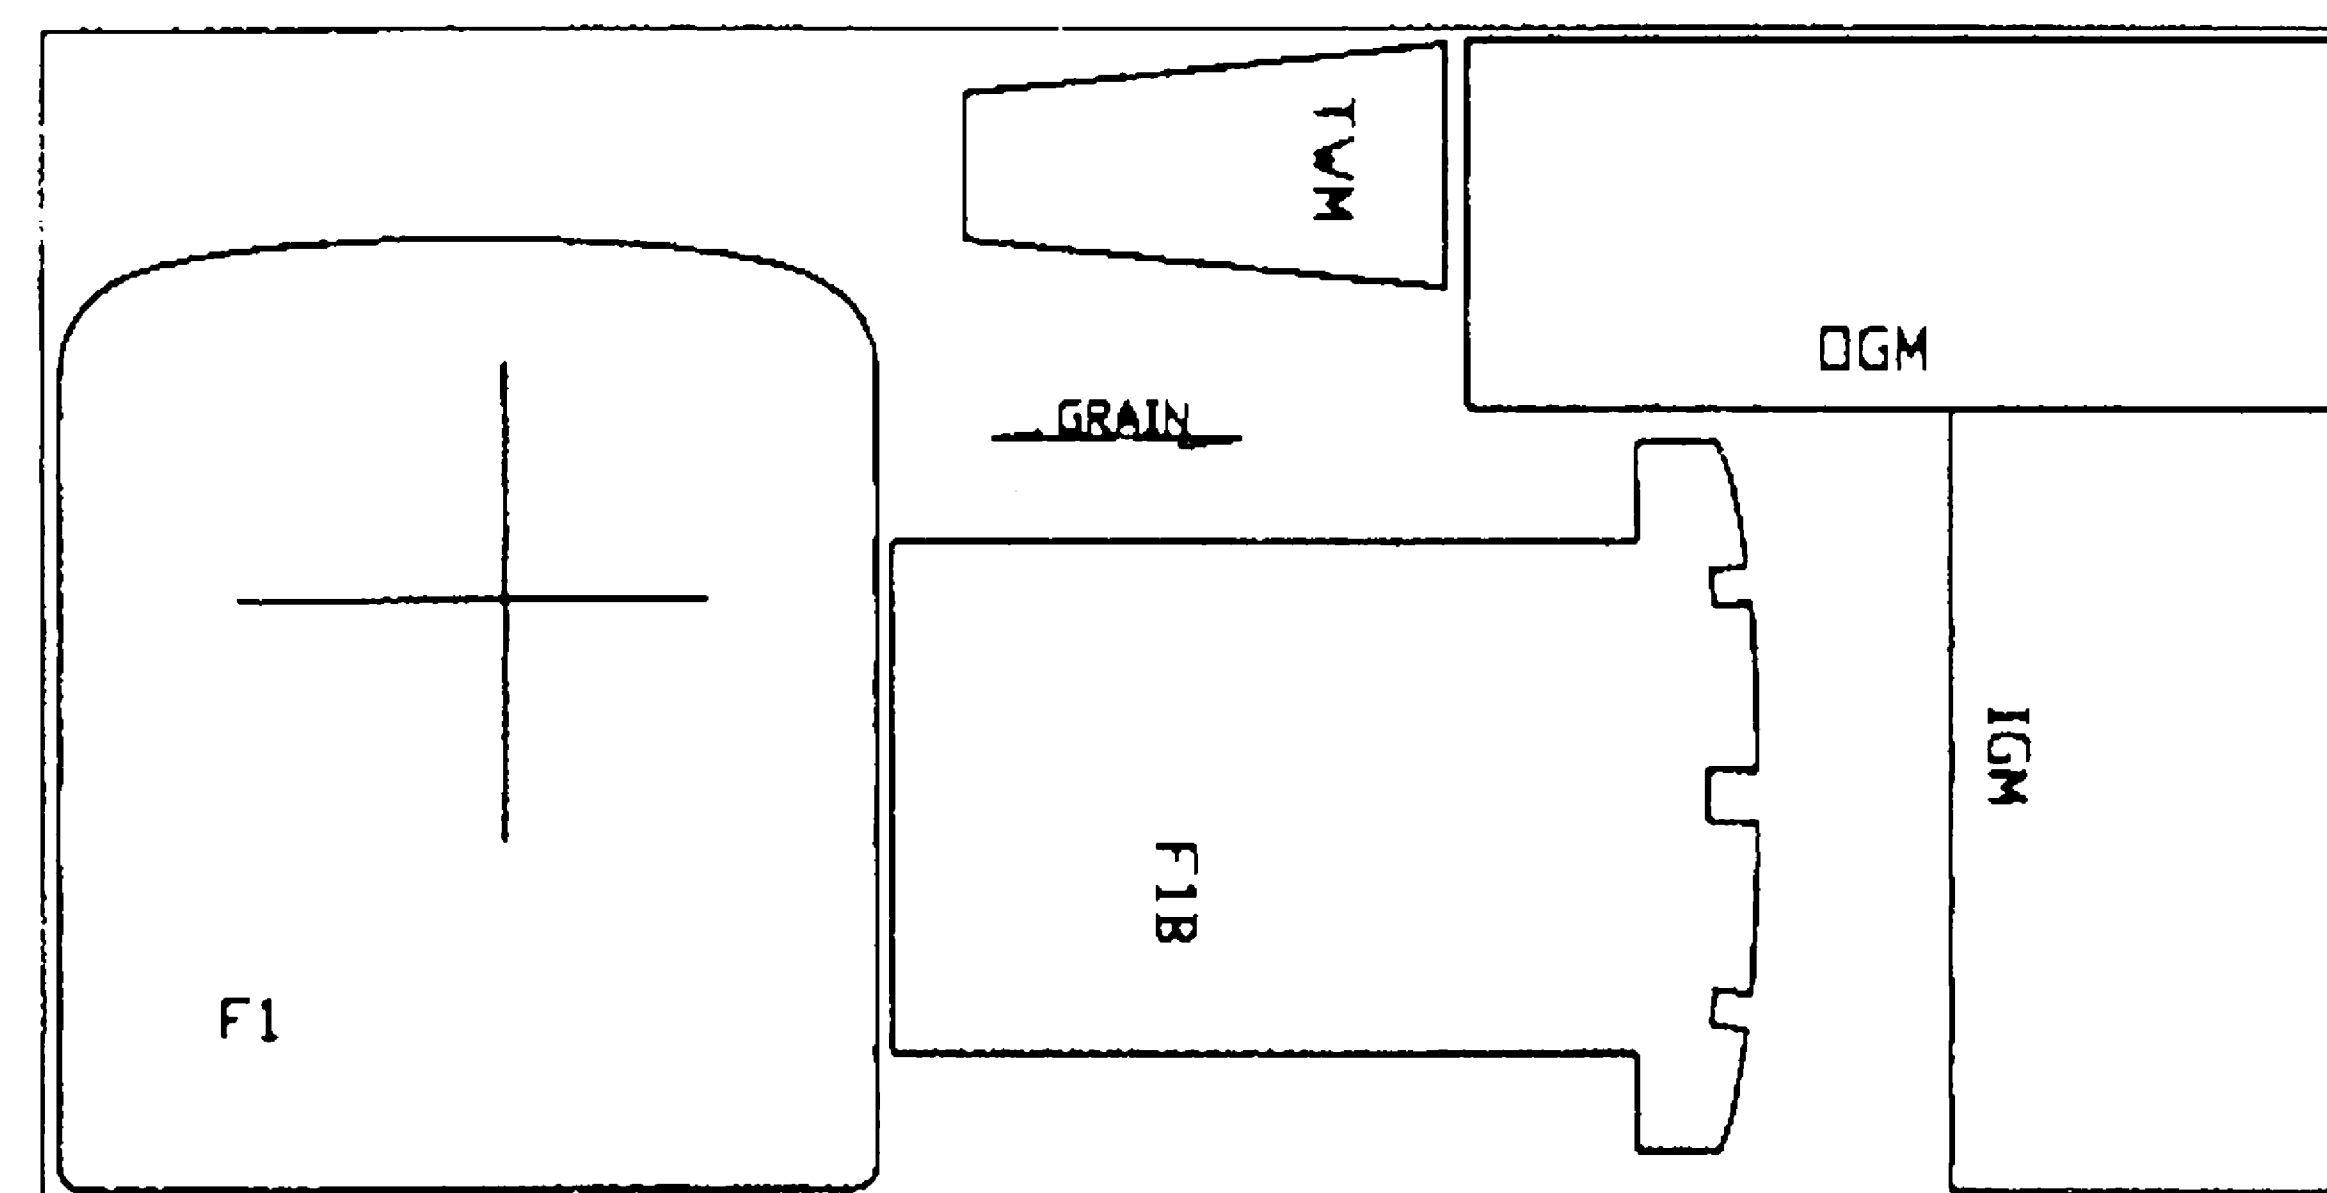

TEMPLATE
(Glue this to a 1/8'x6'x12' sheet
of Birch Plywood with 3M-77.)

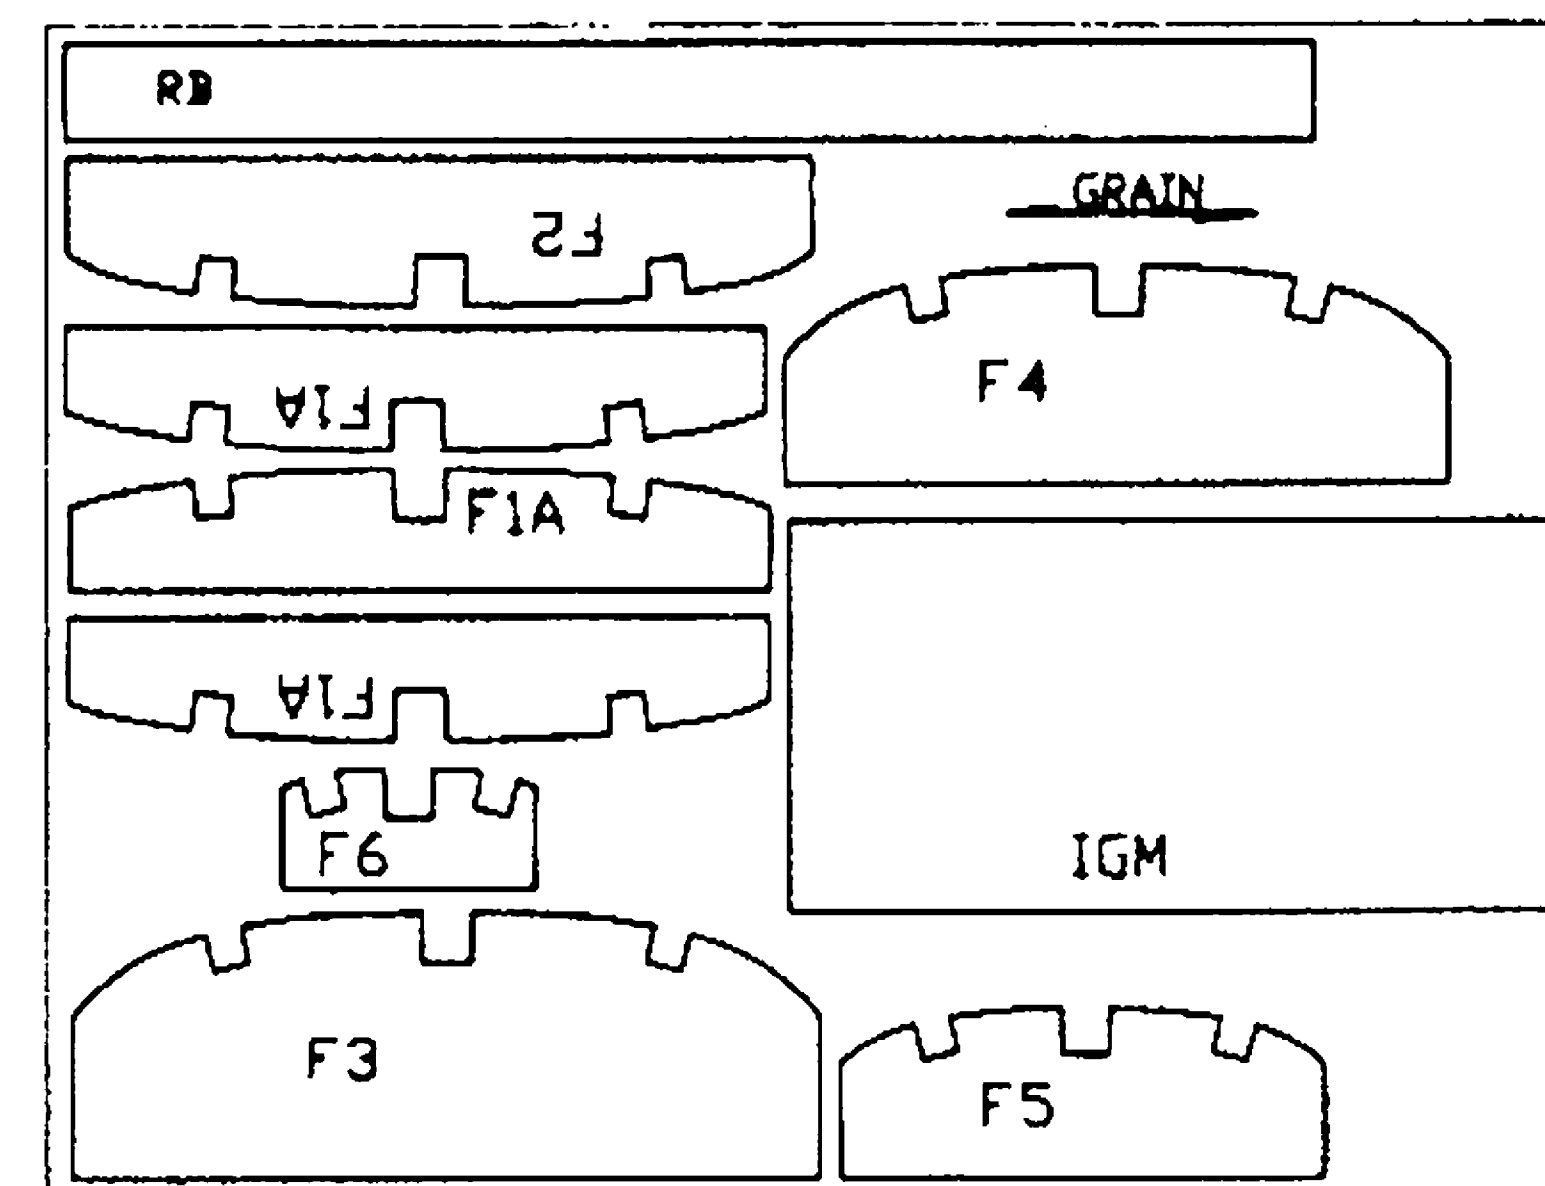


TEMPLATE
(Glue this to a 1/8"x6"x8" sheet of Birch
or Poplar (Lite) Plywood with 3M-77.)

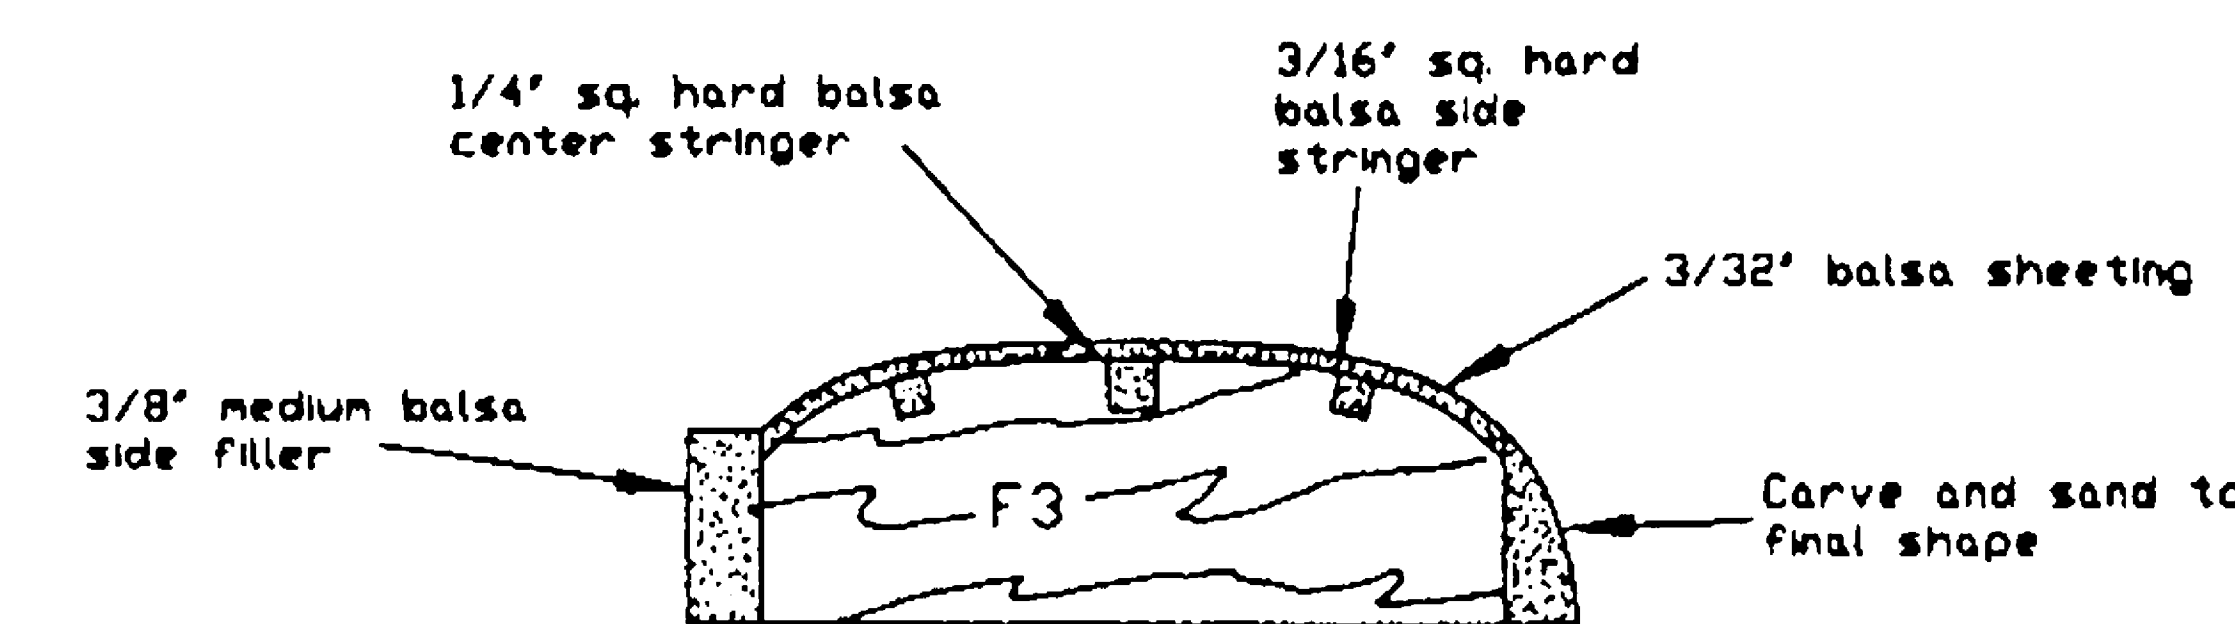

Top Deck cross-section at F3
(Typical)

NOTE:
Left side stringers, fillers and
sheeting omitted for clarity.



NOTE:
All incidences are 0-0 except
2 degrees right thrust.



© FROM ALL COMMERCIAL SOURCES BY MIRM

ULTRA STICK LW

A modified Hanger 9 Ultra Stick

Designed By:

JIM FELDMANN

Plans By:

JIM FELDMANN

