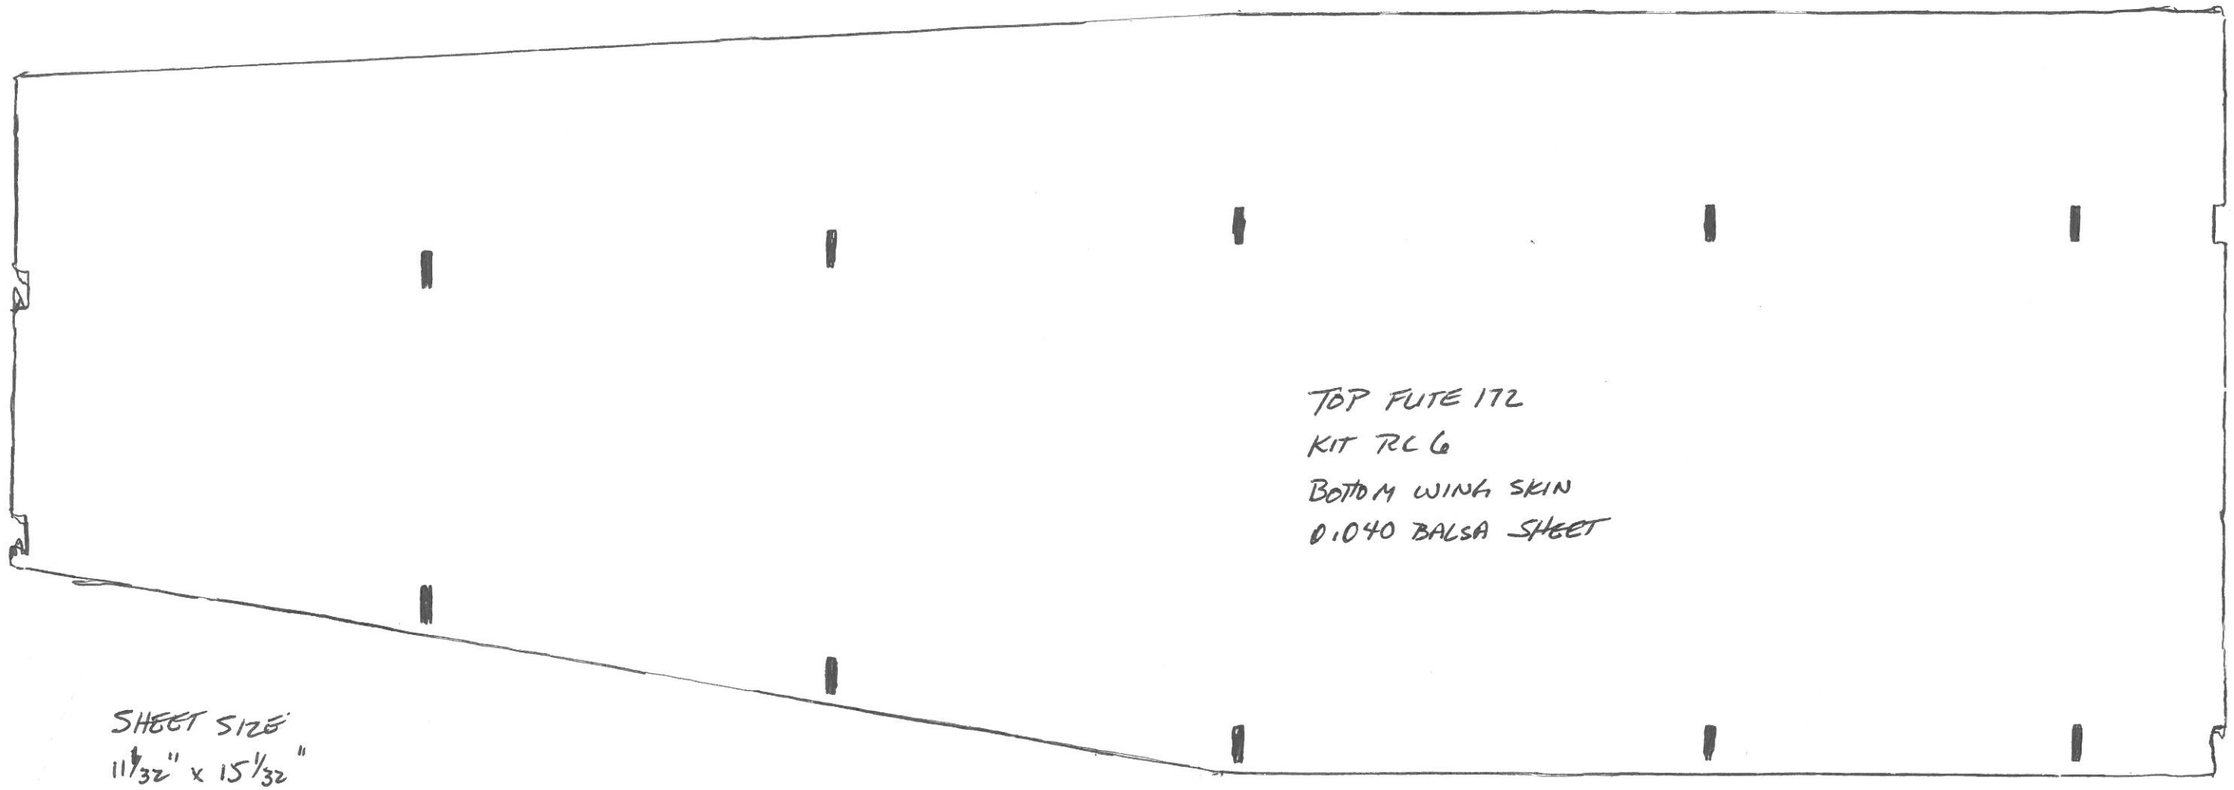
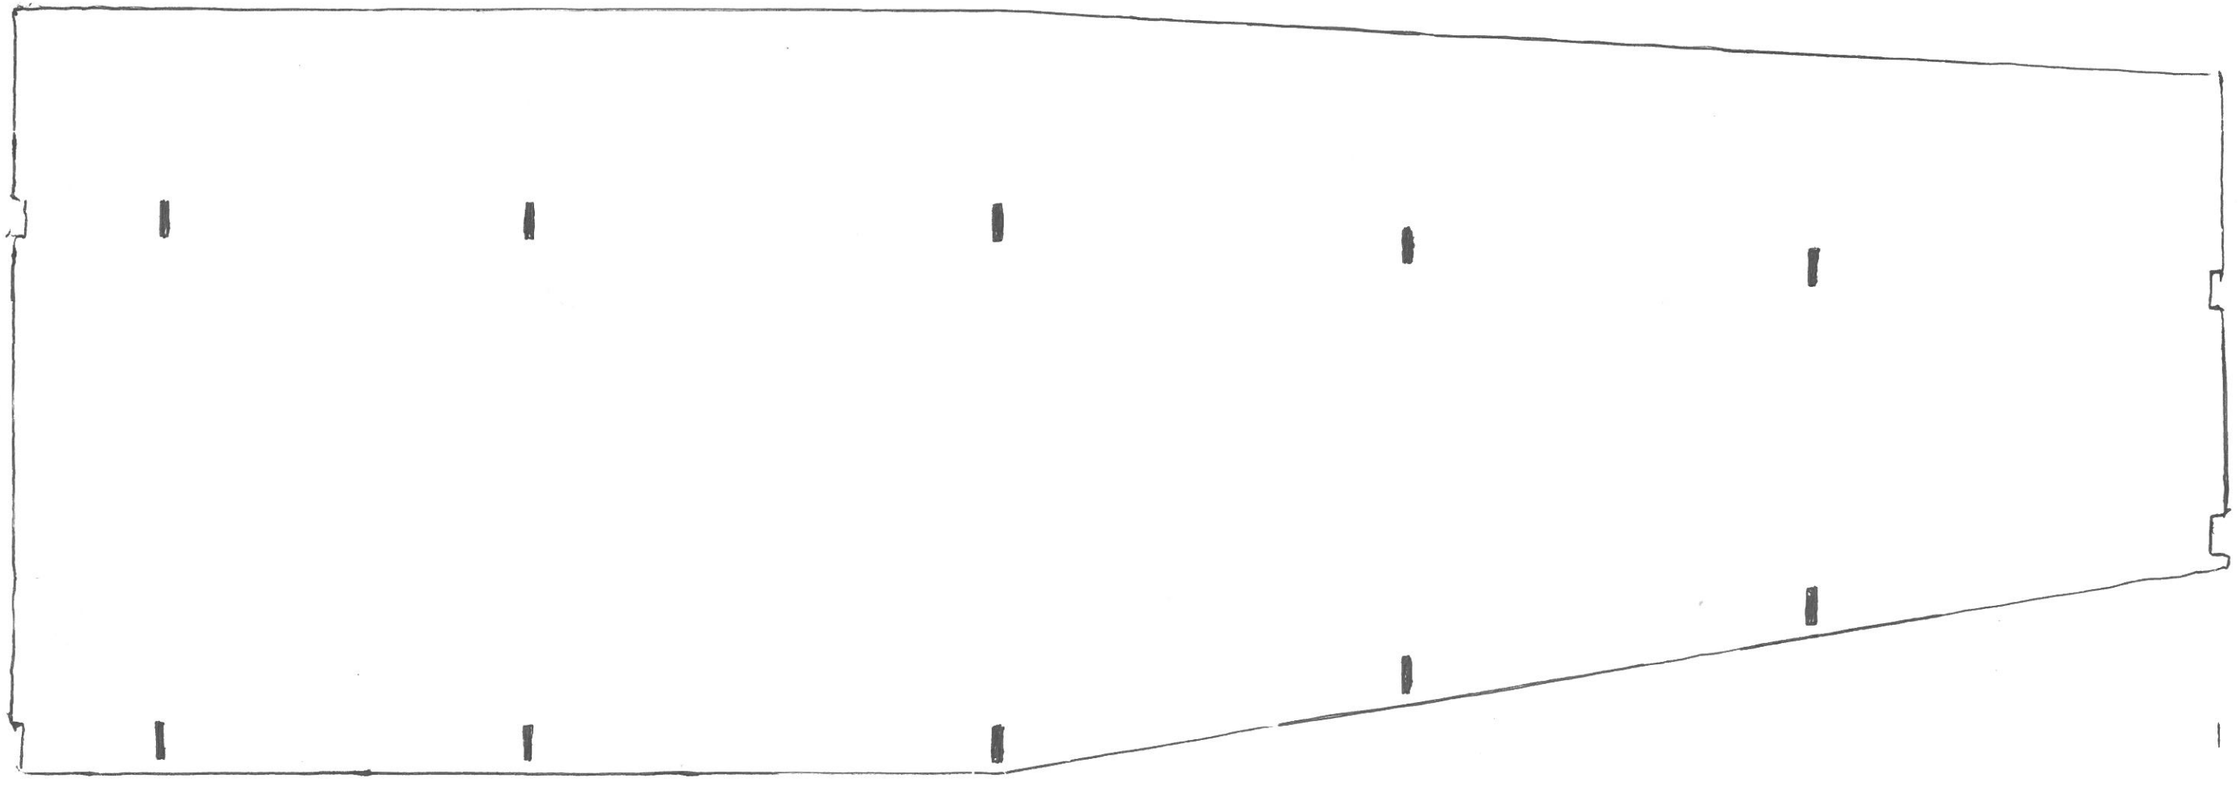

TOP FUTE 172
KIT RC 6
BOTTOM WING SKIN
0.040 BALSA SHEET
SHEET SIZE
11 1/32" x 15 1/32"



TOP FLITE 172
KIT # RC 6

SHEET SIZE
11 1/32" X 15 1/32"

F-13
1/16" PLY

F-8
1/16" PLY

WING TIP
1/4" BALSA (MAKE 4)

F-11
1/16" BALSA

W3 1/16"
(4)

W-4 0.040 BALSA (6)

W-2 (2)

W-5 (2)

W-6 (2)

W-7 (2)

F-3
1/16" PLY

F-13
1/16"
BALSA

F-10
1/16" PLY

S-1
1/16" BALSA

F-4
1/16" PLY

F-9 1/16" PLY

S-2
1/16" BALSA

S-3
1/16"
BALSA
(2)

S-2
1/16" BALSA

S-4 (2) 1/16 BALSA

F-5
1/16" PLY

F-6
1/16" BALSA

F-7
1/16" BALSA

F-6A
1/16" BALSA

F-4
1/16" BALSA

F-6B
1/16" BALSA

F-2A
1/16" BALSA
(2)

F-2
1/16" BALSA

LG (2) 1/16"

R-1
1/16"
BALSA

R-2
1/16" BALSA

R-3
1/16"

TOP FLITE 172
KIT # RC6
TOP WING SKIN
0.040 BALSA SHEET
(1/16 USED ALSO)

USE 1/4" SQUARE FOR
LEADING EDGE

SHEET SIZE
11 1/32" X 15 1/32"

TOP FLITE 172
KIT # RC6
TOP WING SKIN

SHEET SIZE (ALL)
11 11/32" X 15 1/32"

TOP FLITE 172
KIT # RC-6

ALL PARTS TRACED DIRECTLY FROM KIT PARTS REMOVED FROM DIE-CUT SHEETS. LAMINATED WHEEL PANT BALSA PARTS NOT INCLUDED

1/16" WIRE LANDING GEAR (MAIN)

F-14
1/16" BASA

1/8" HOLE

F-1
1/16" BALSA
(2)

F-15
1/16" BALSA

F-12
1/16" BALSA

F-1B 1/16" BALSA (2)