


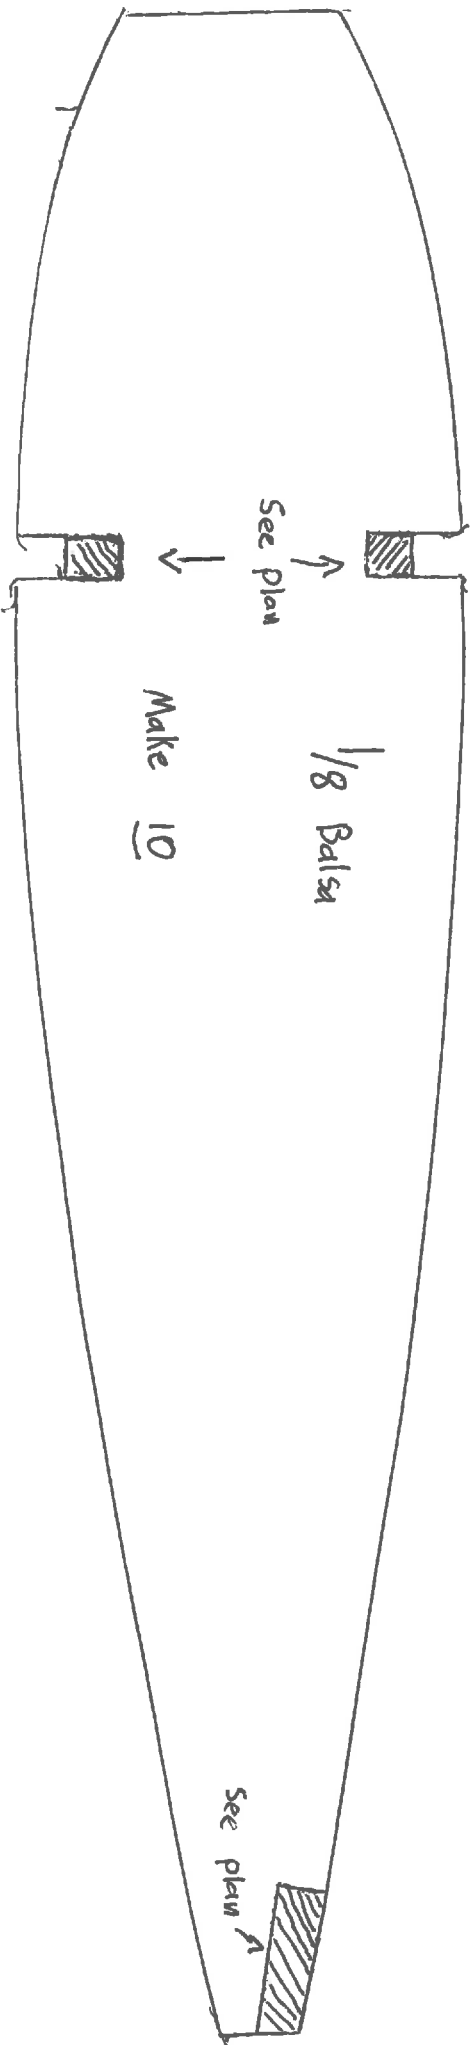
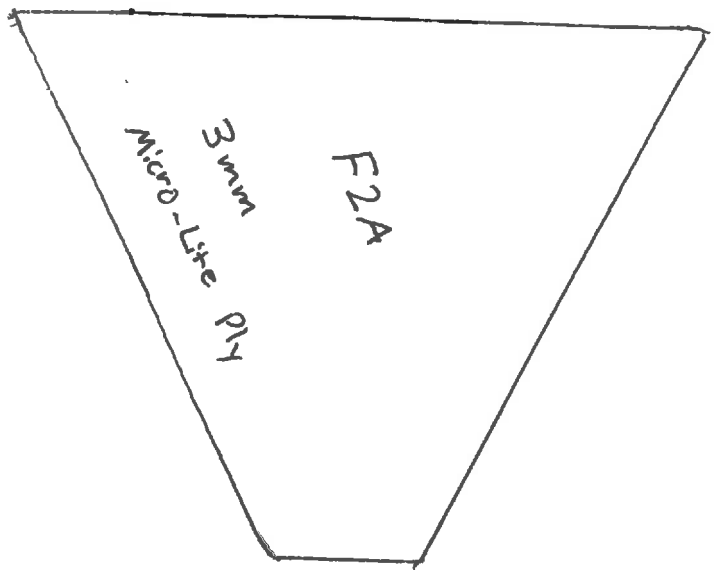
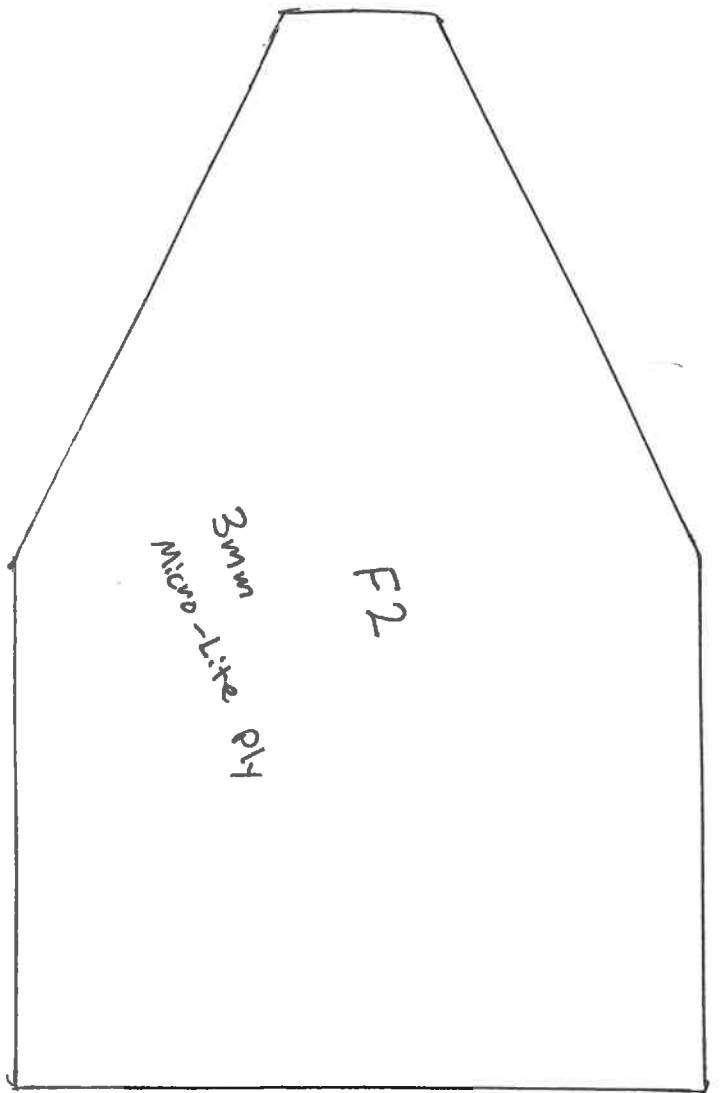
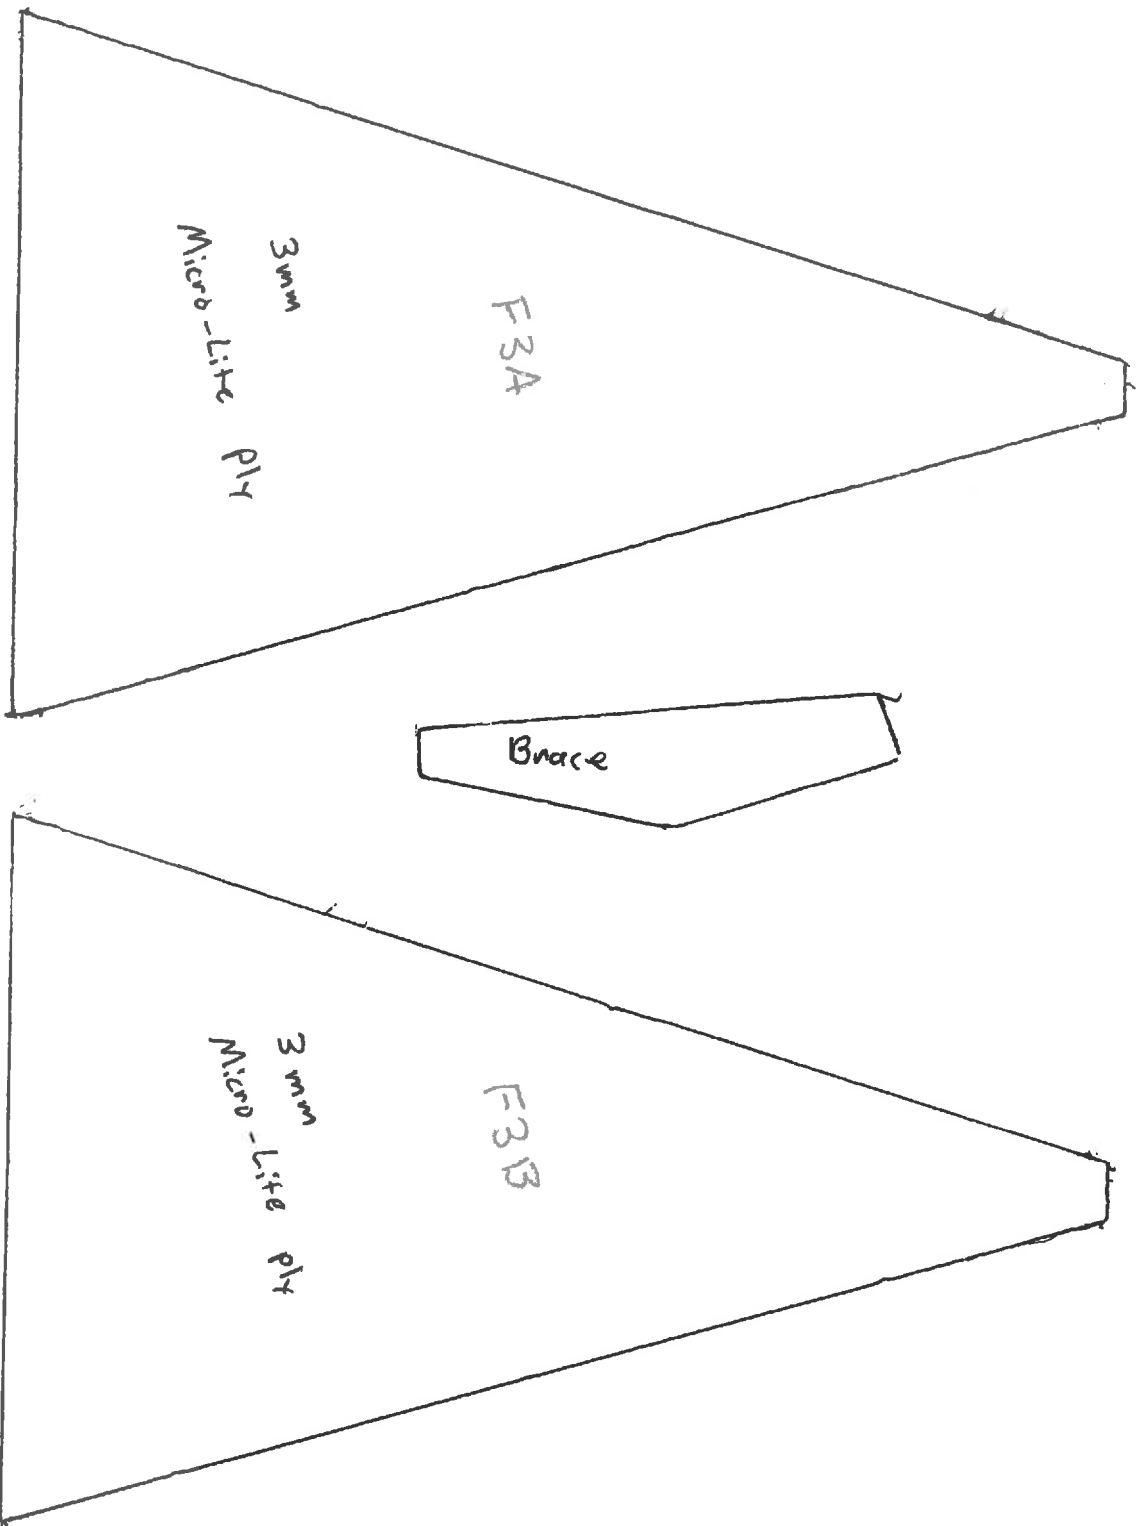
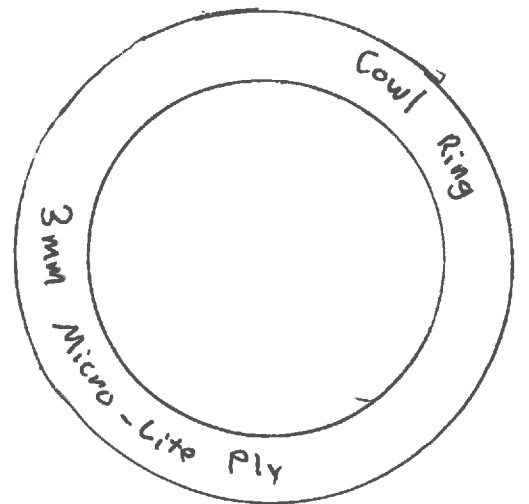


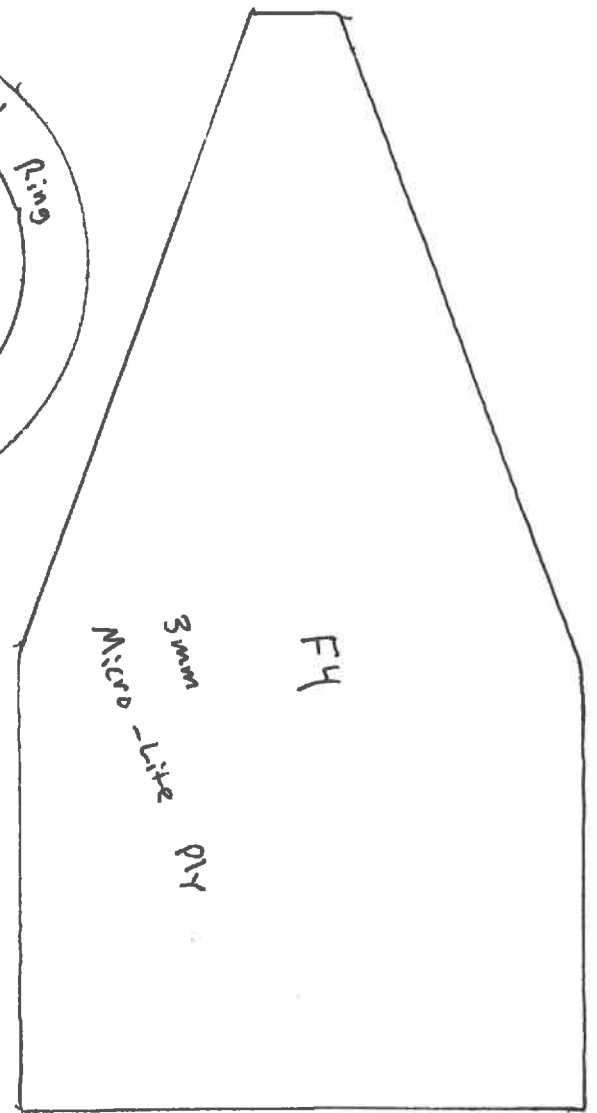


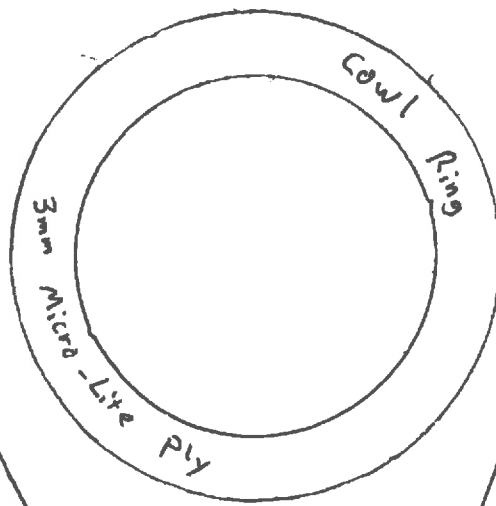


Saddle  
Doublers  
Make 2


1/16 Ply

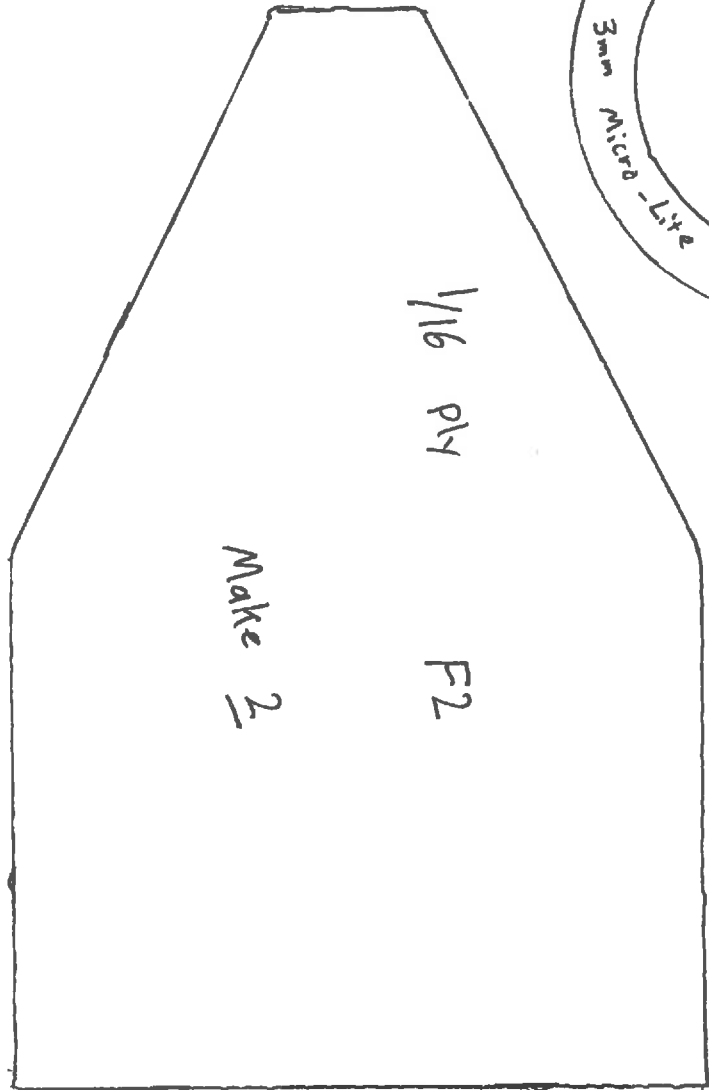

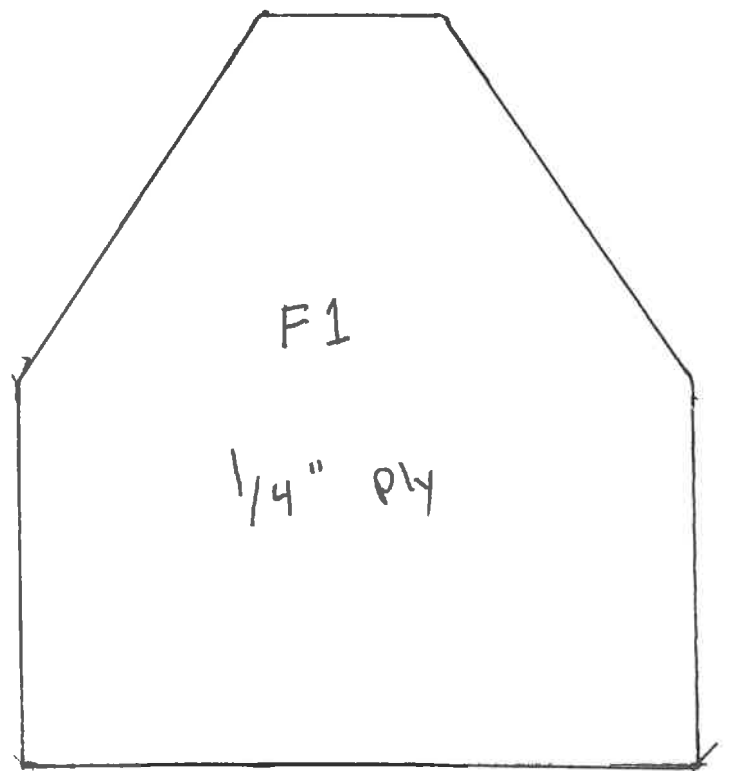


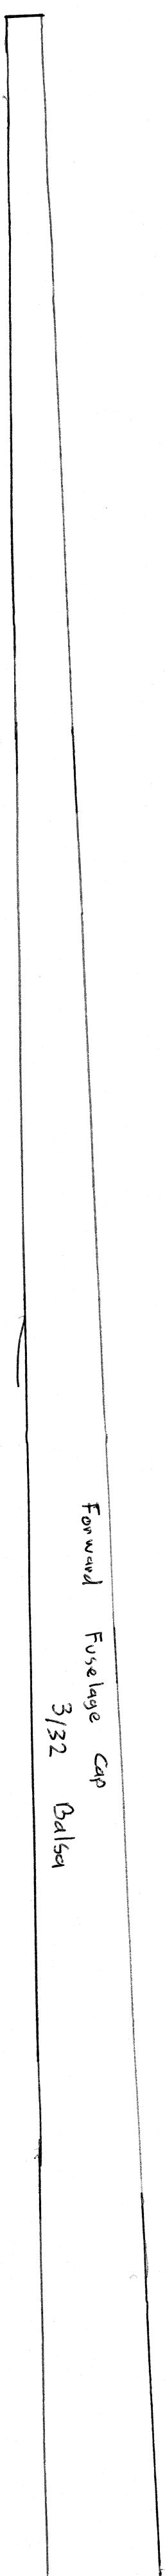


Forward Fuselage Cap  
3/32 Balsa

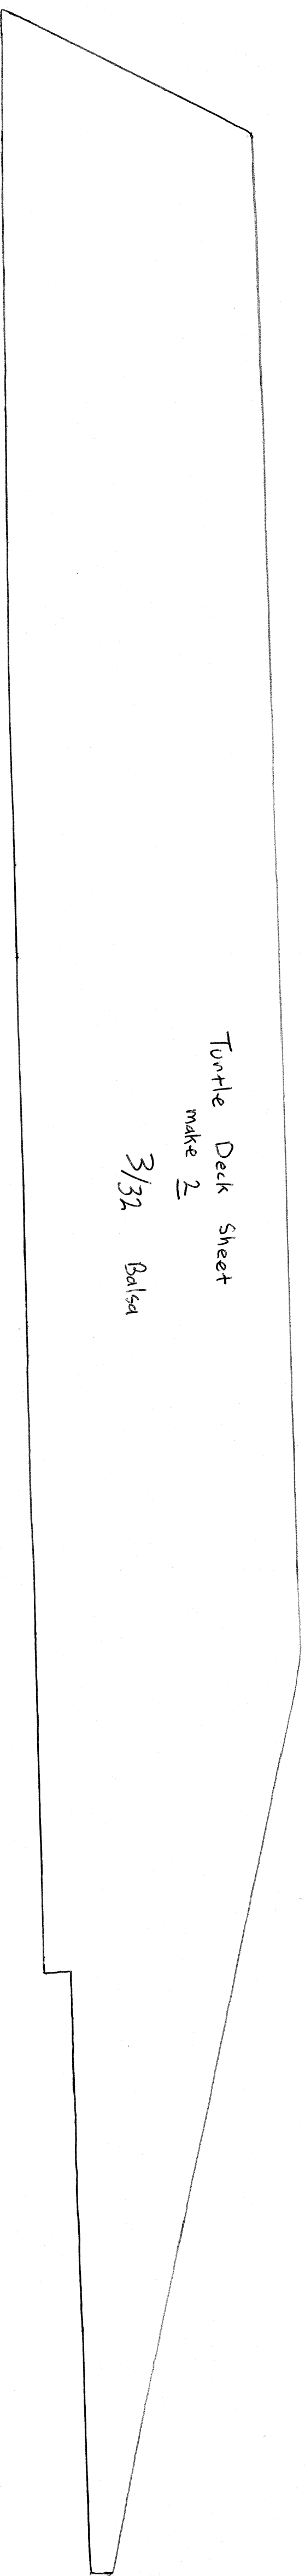


Turtle Deck Sheet  
make 2  
3/32 Balsa

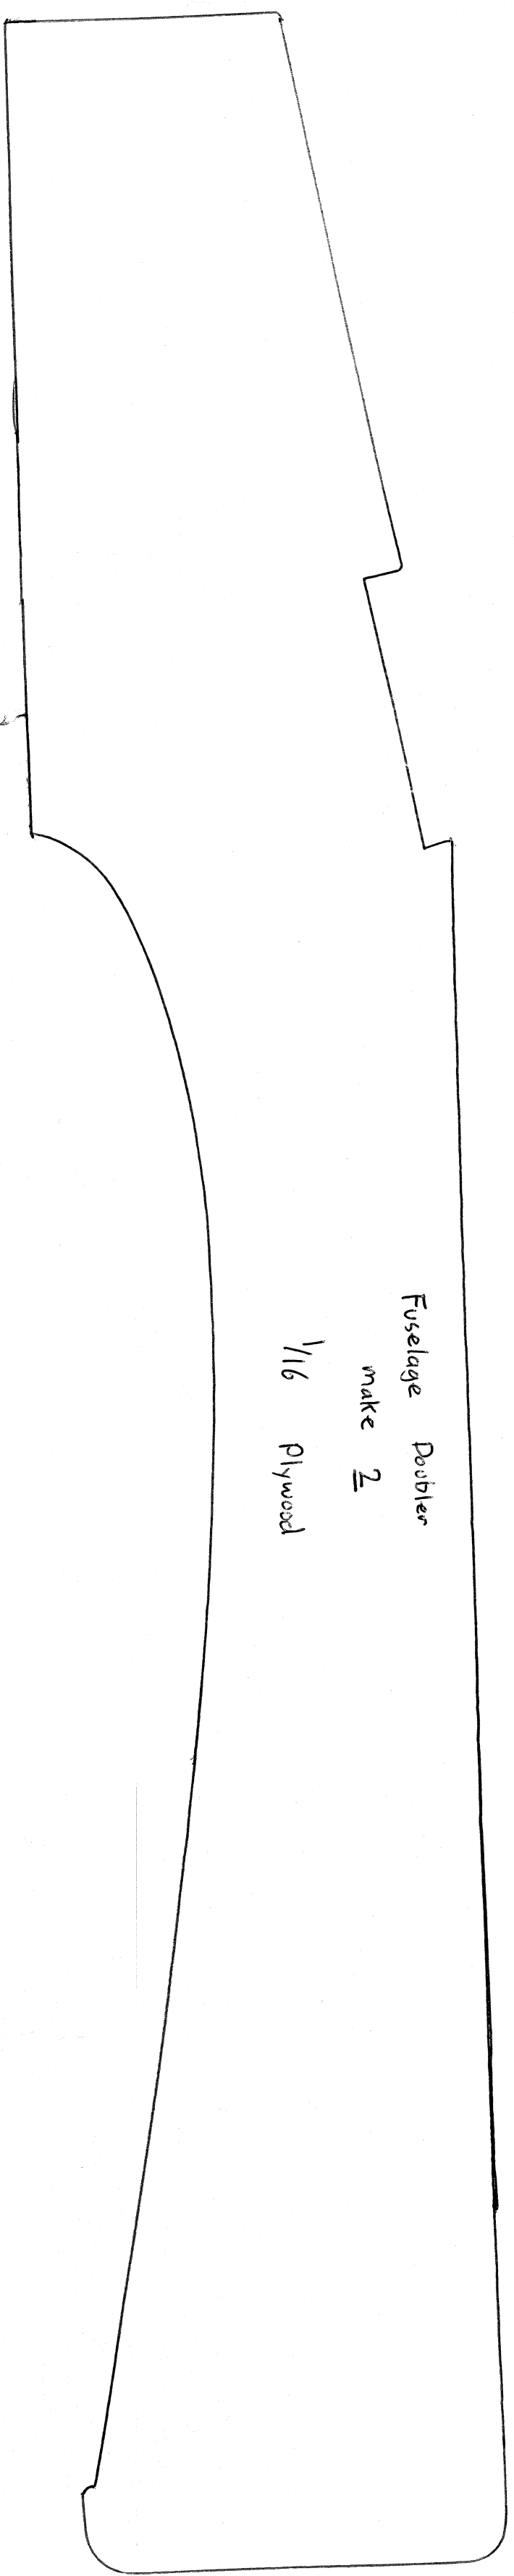

Fuselage Doubler  
make 2  
1/16 Plywood

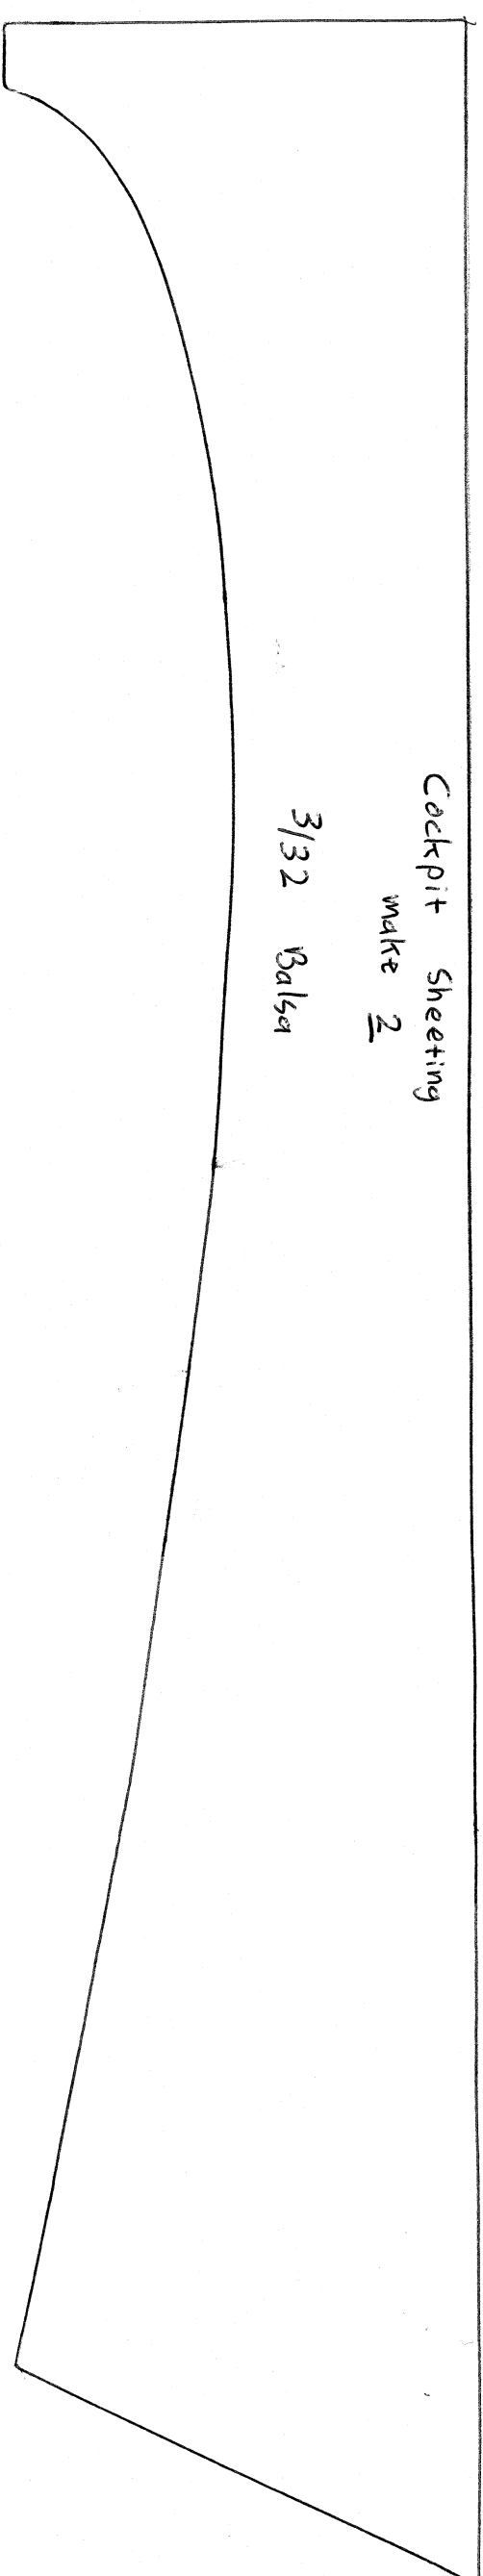

Cockpit Sheeting  
make 2  
3/32 Balsa

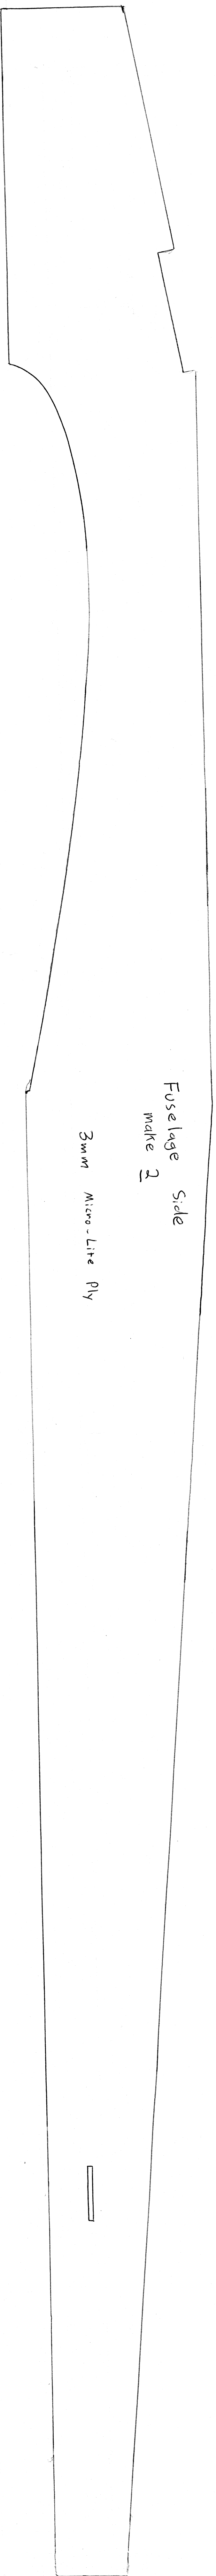

Fuselage Side  
make 2

3mm Micro-Lite Ply

