



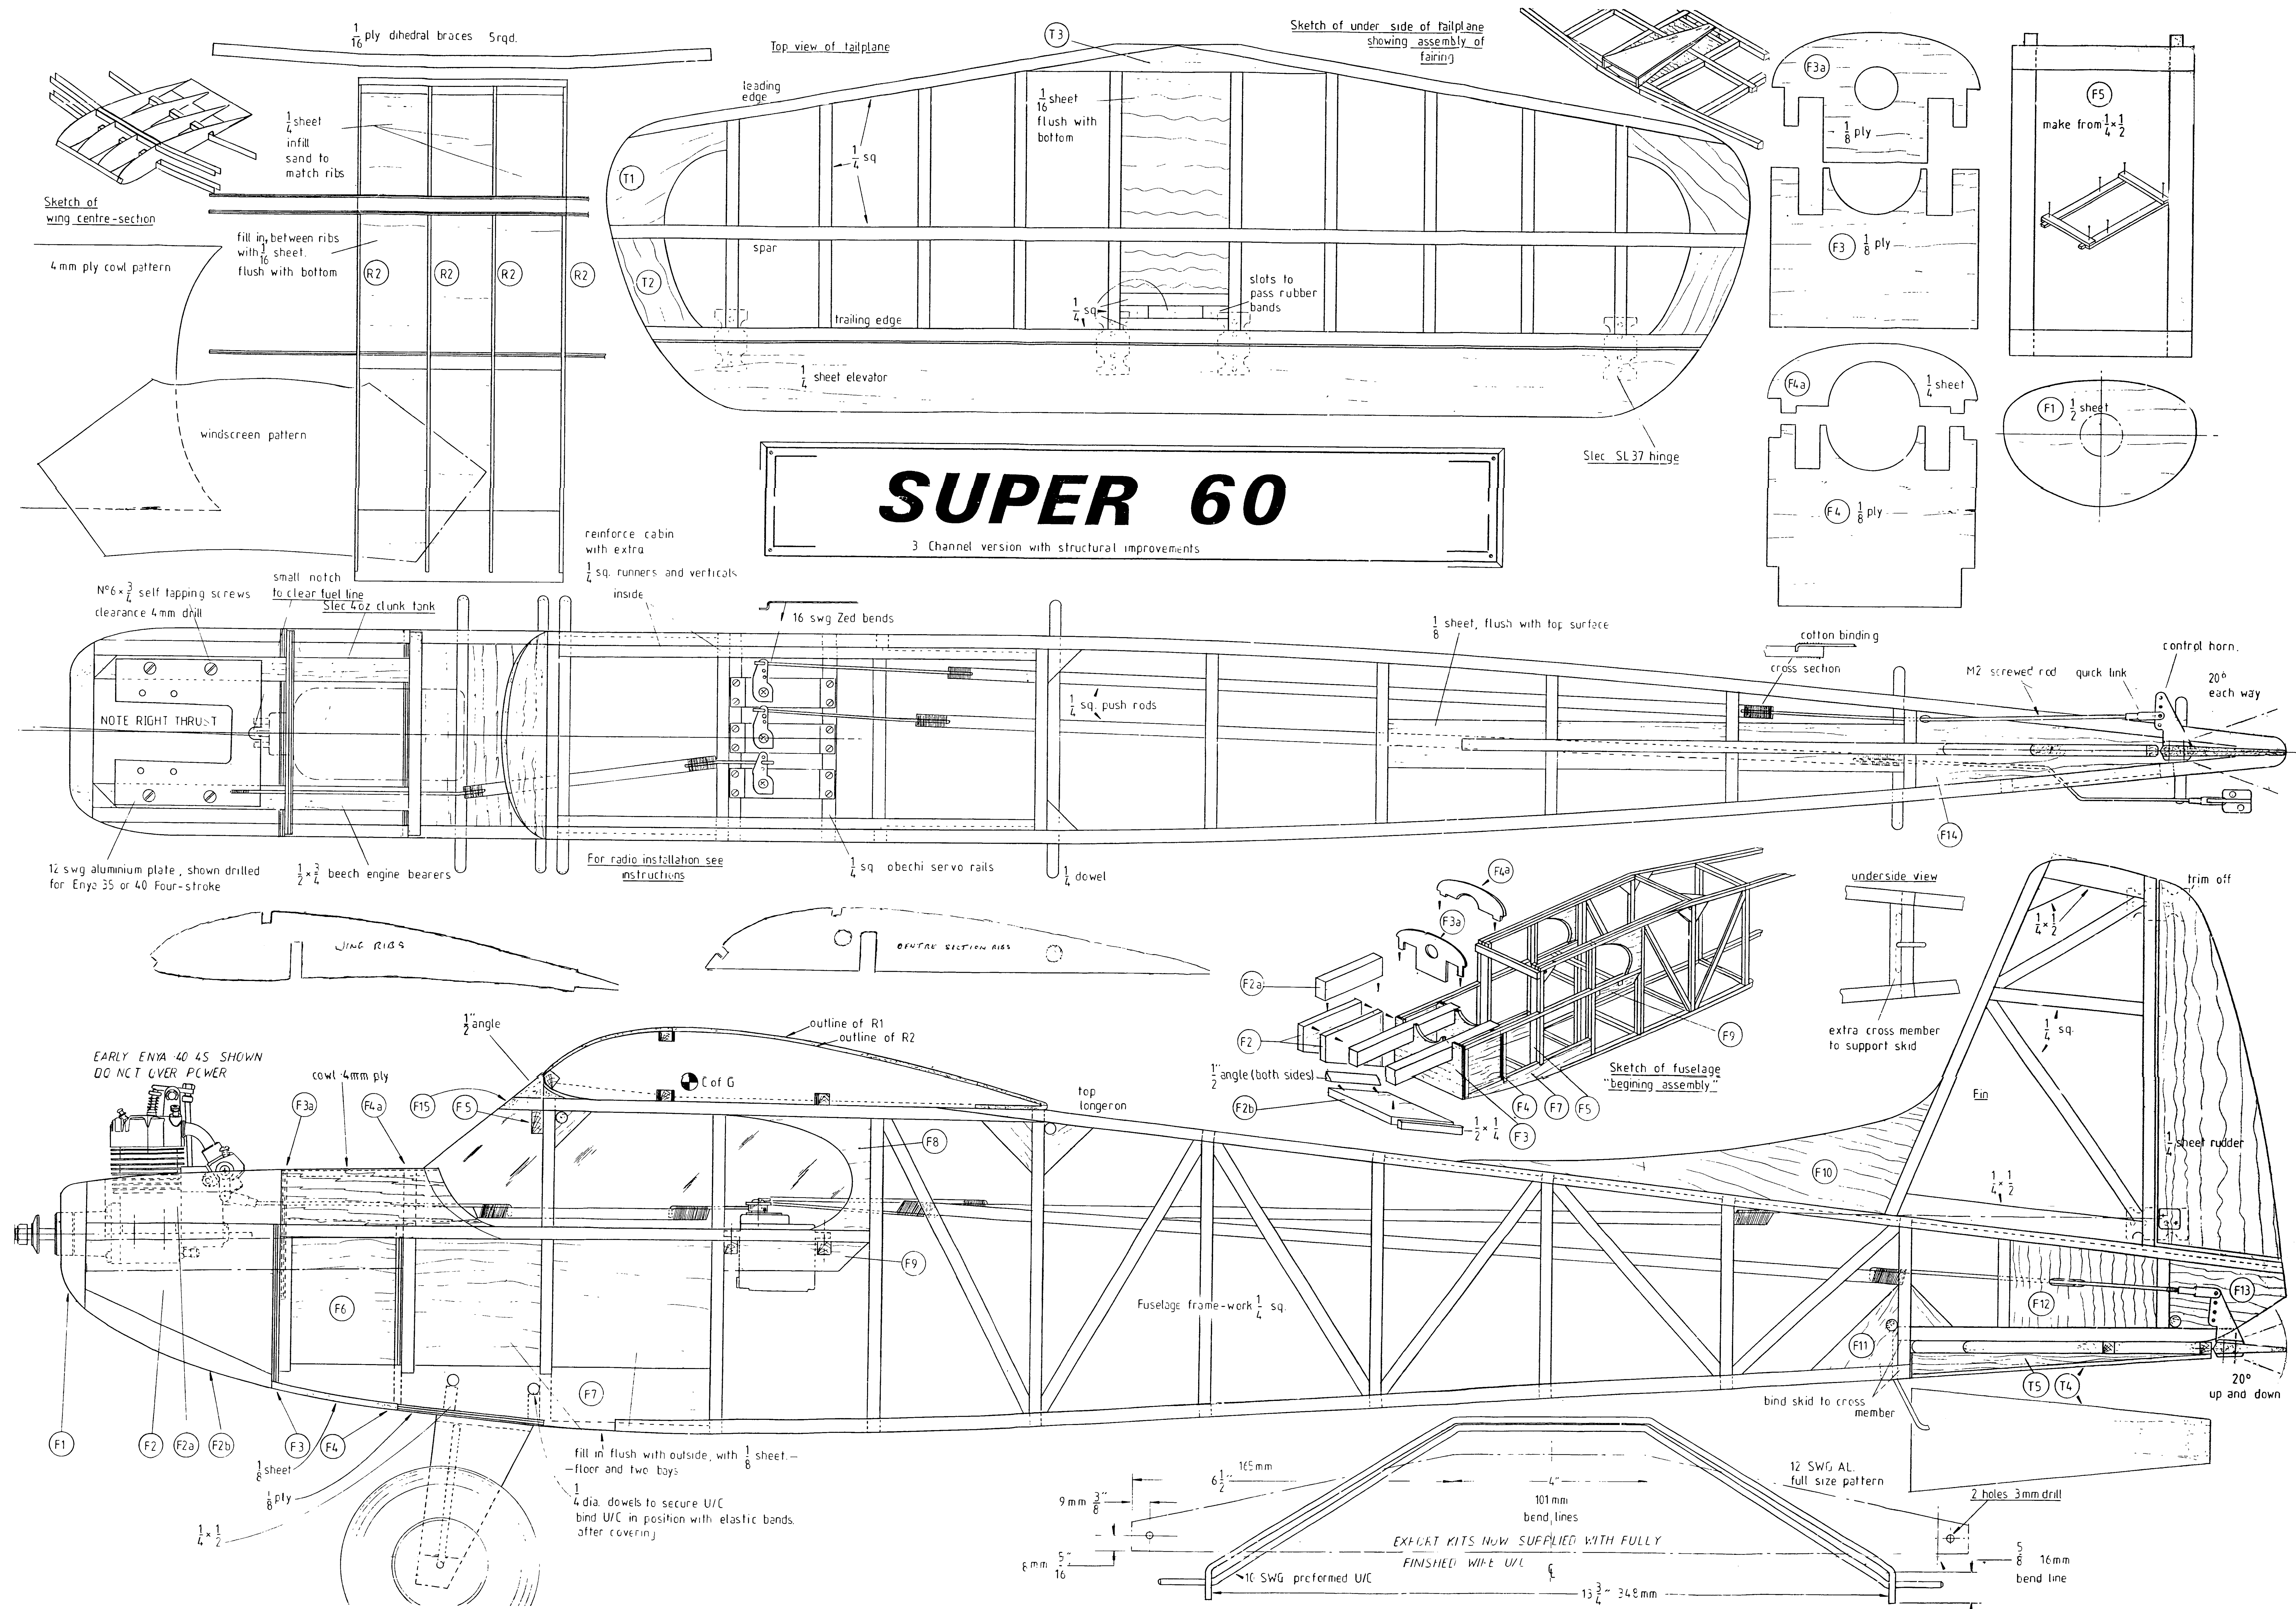

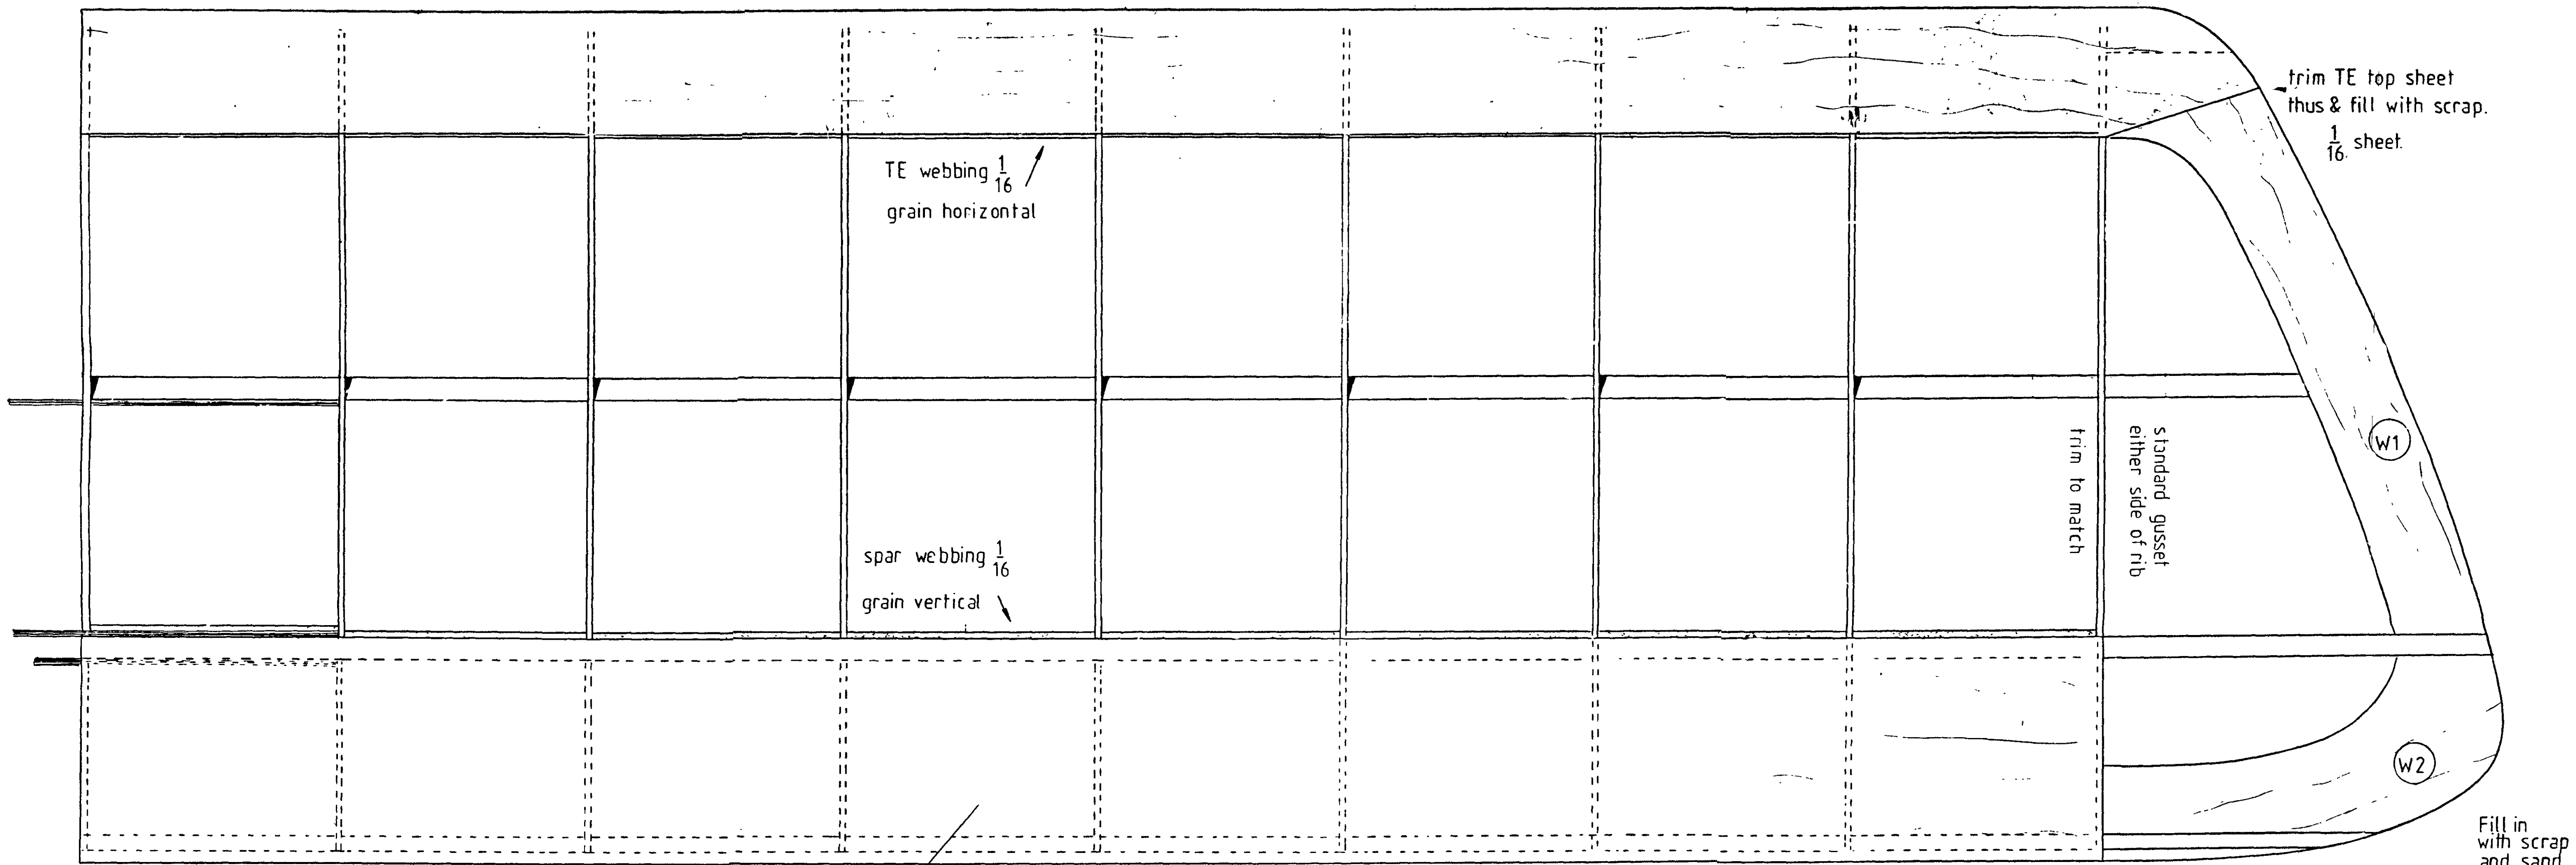



1/16 LE sheet

1/4 sq. L.E.

Fill in with scrap and sand to match rib

1/4 tip

top spar ends here

Rear view of main spars 1/4 sq

1/4 sq

1/16 TE lower sheet

sand tips to this section

1/4 tip

TE sheet

Q of aircraft

(R2) root rib

centre section

(R2)

(R1)

(R1)

(R1)

(R1)

(R1)

(R1)

(R1)

(R1)

TE sheet