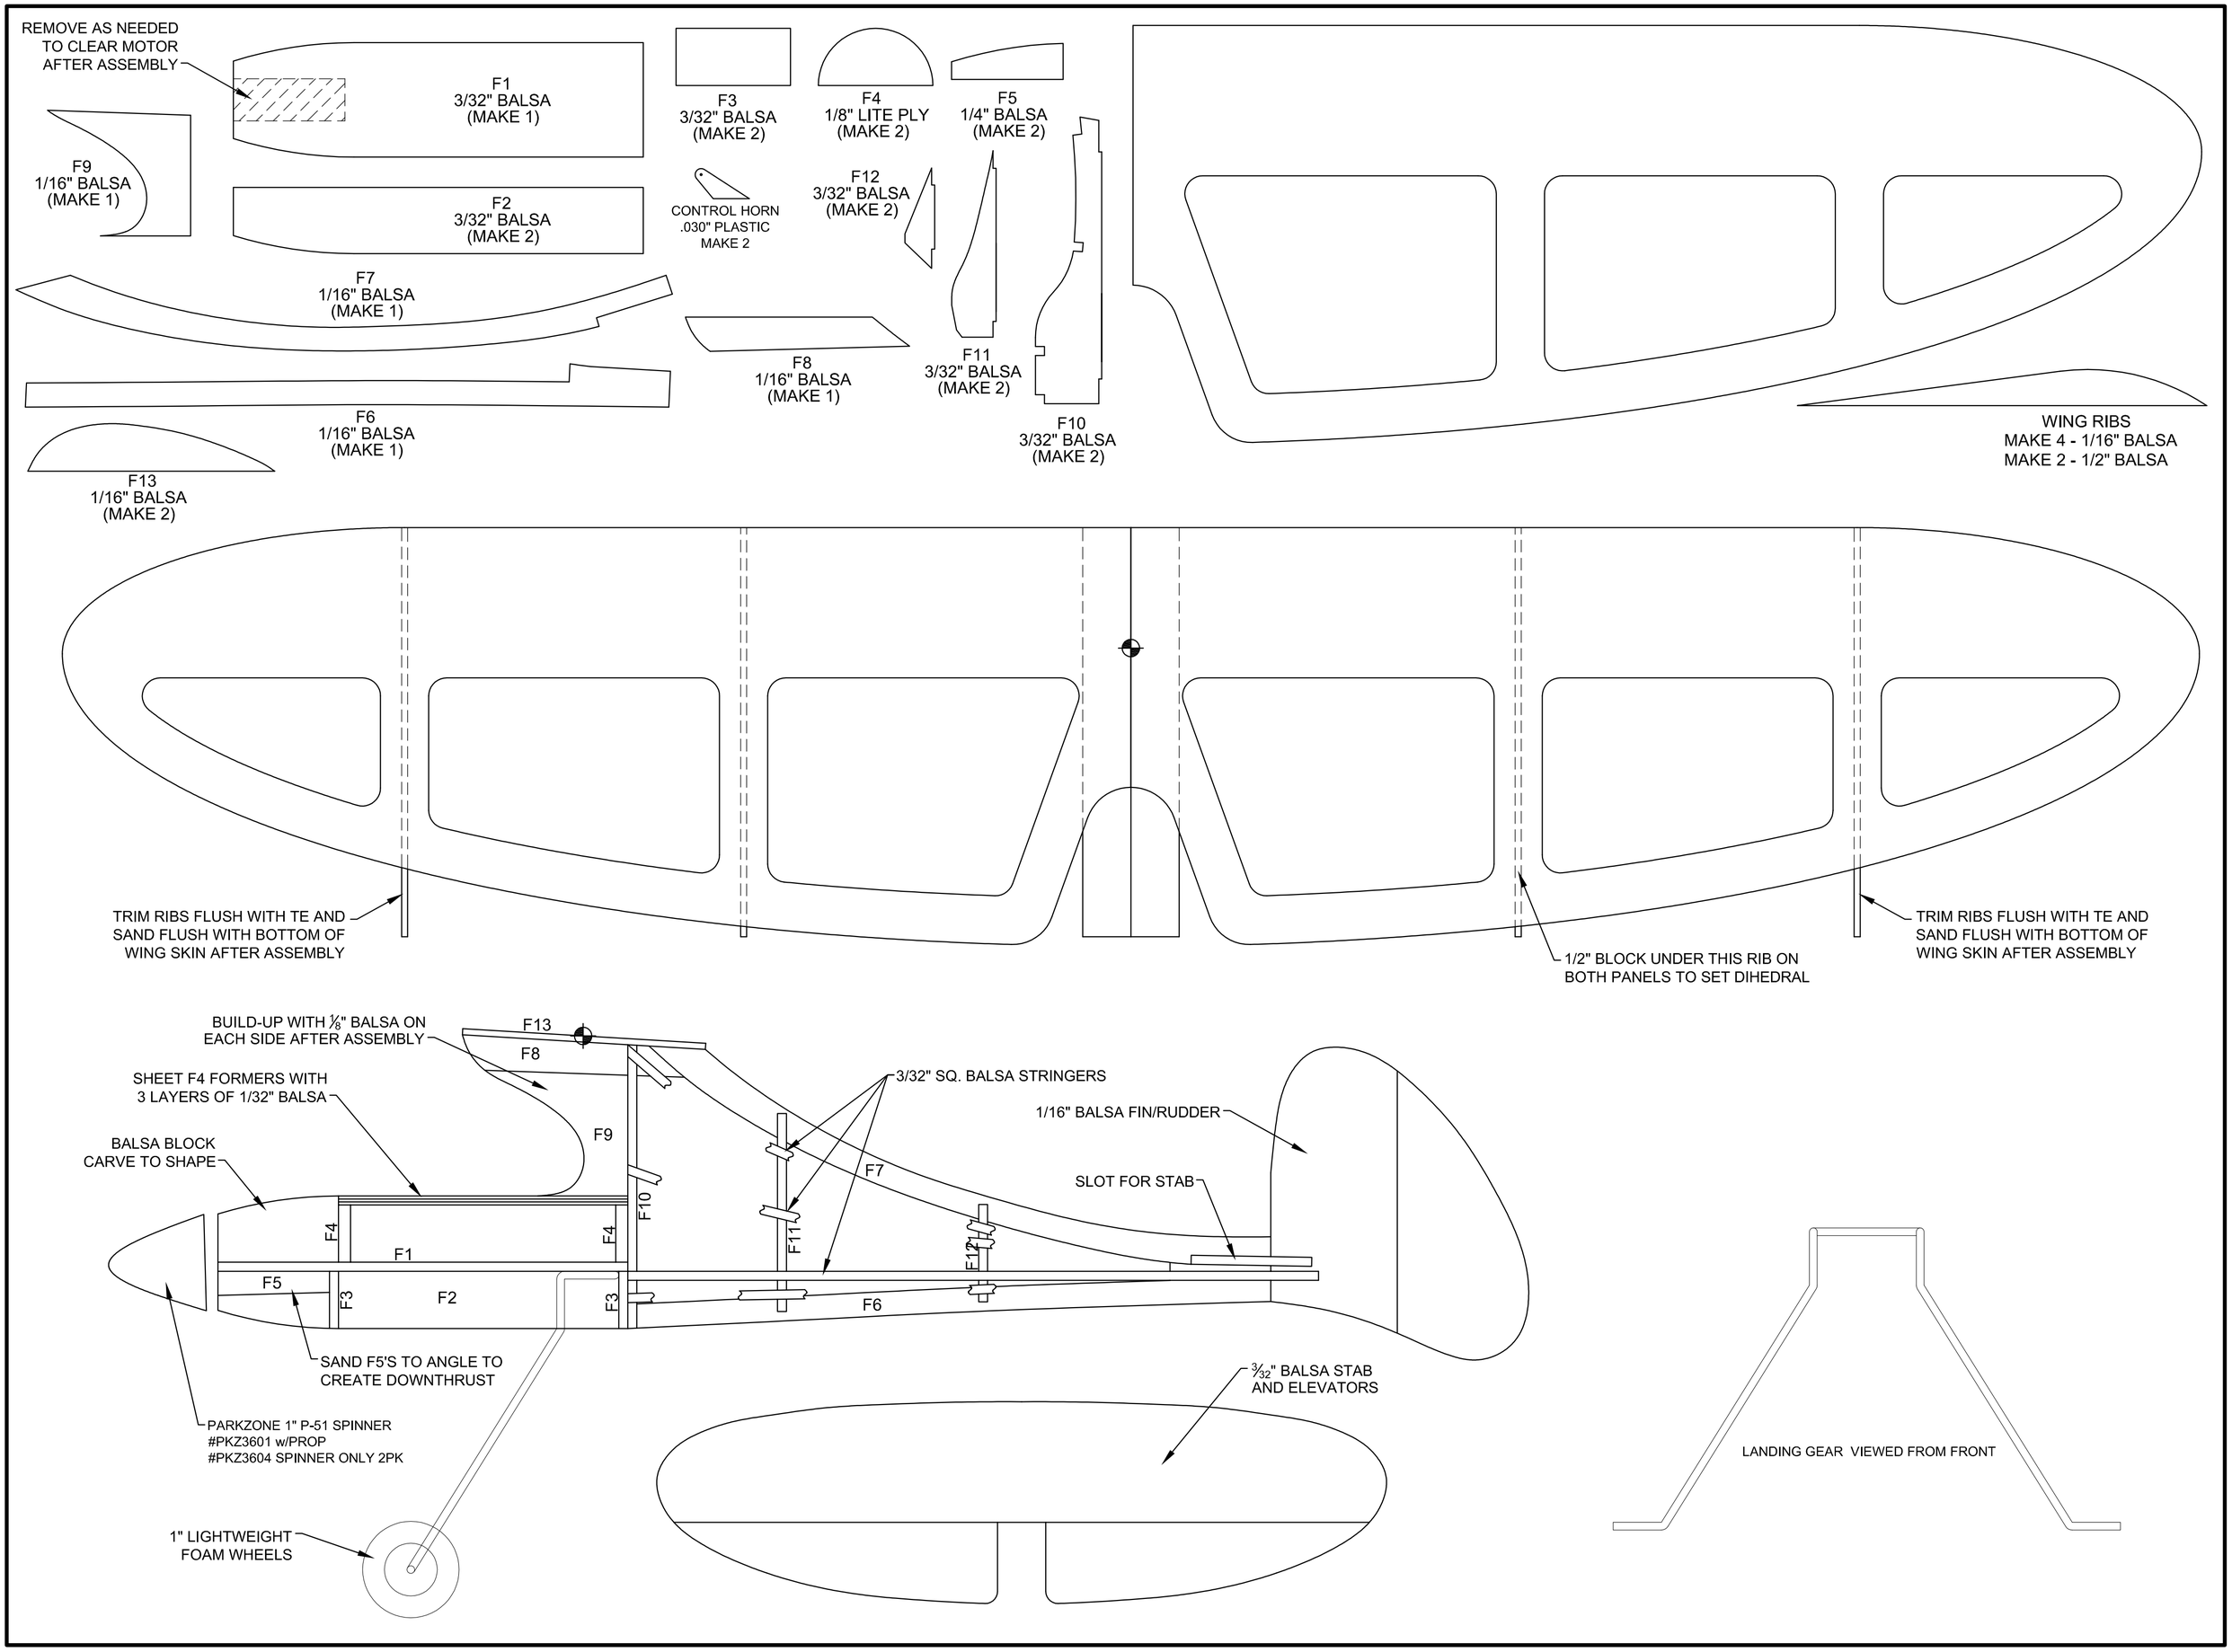
REMOVE AS NEEDED TO CLEAR MOTOR AFTER ASSEMBLY
F1 3/32" BALSA (MAKE 1)
F2 3/32" BALSA (MAKE 2)
F3 3/32" BALSA (MAKE 2)
F4 1/8" LITE PLY (MAKE 2)
F5 1/4" BALSA (MAKE 2)
F9 1/16" BALSA (MAKE 1)
CONTROL HORN .030" PLASTIC MAKE 2
F12 3/32" BALSA (MAKE 2)
F7 1/16" BALSA (MAKE 1)
F8 1/16" BALSA (MAKE 1)
F11 3/32" BALSA (MAKE 2)
F10 3/32" BALSA (MAKE 2)
F6 1/16" BALSA (MAKE 1)
F13 1/16" BALSA (MAKE 2)
WING RIBS MAKE 4 - 1/16" BALSA MAKE 2 - 1/2" BALSA
TRIM RIBS FLUSH WITH TE AND SAND FLUSH WITH BOTTOM OF WING SKIN AFTER ASSEMBLY
1/2" BLOCK UNDER THIS RIB ON BOTH PANELS TO SET DIHEDRAL
TRIM RIBS FLUSH WITH TE AND SAND FLUSH WITH BOTTOM OF WING SKIN AFTER ASSEMBLY
BUILD-UP WITH 1/8" BALSA ON EACH SIDE AFTER ASSEMBLY
SHEET F4 FORMERS WITH 3 LAYERS OF 1/32" BALSA
BALSA BLOCK CARVE TO SHAPE
3/32" SQ. BALSA STRINGERS
1/16" BALSA FIN/RUDDER
SLOT FOR STAB
SAND F5'S TO ANGLE TO CREATE DOWNTHRUST
PARKZONE 1" P-51 SPINNER #PKZ3601 w/PROP #PKZ3604 SPINNER ONLY 2PK
1" LIGHTWEIGHT FOAM WHEELS
3/32" BALSA STAB AND ELEVATORS
LANDING GEAR VIEWED FROM FRONT
F13
F8
F9
F10
F4
F1
F5
F3
F2
F7
F11
F12
F6