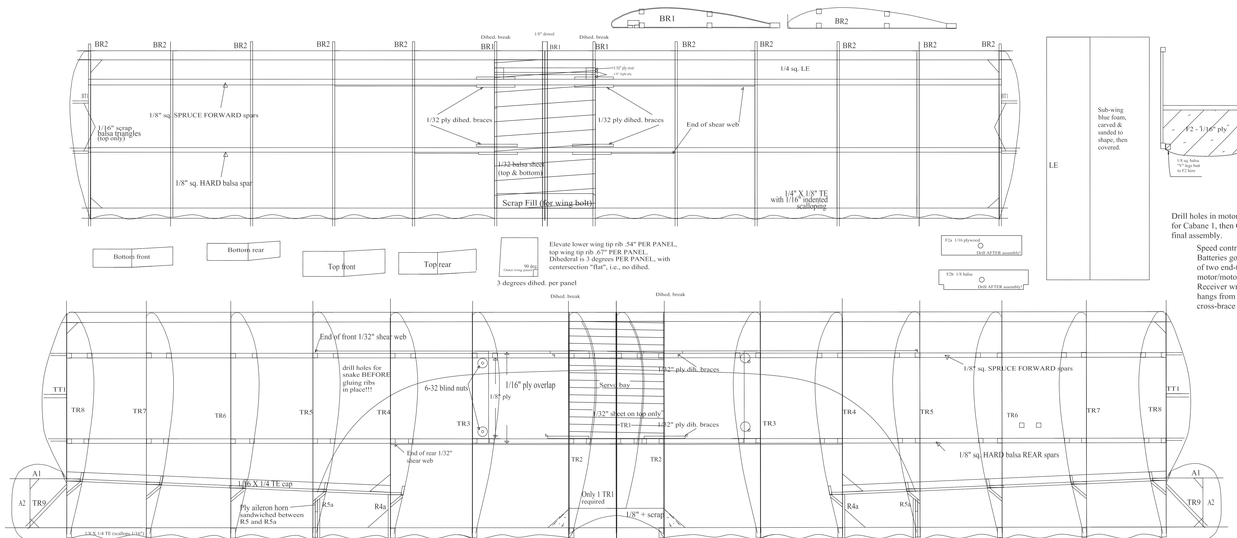

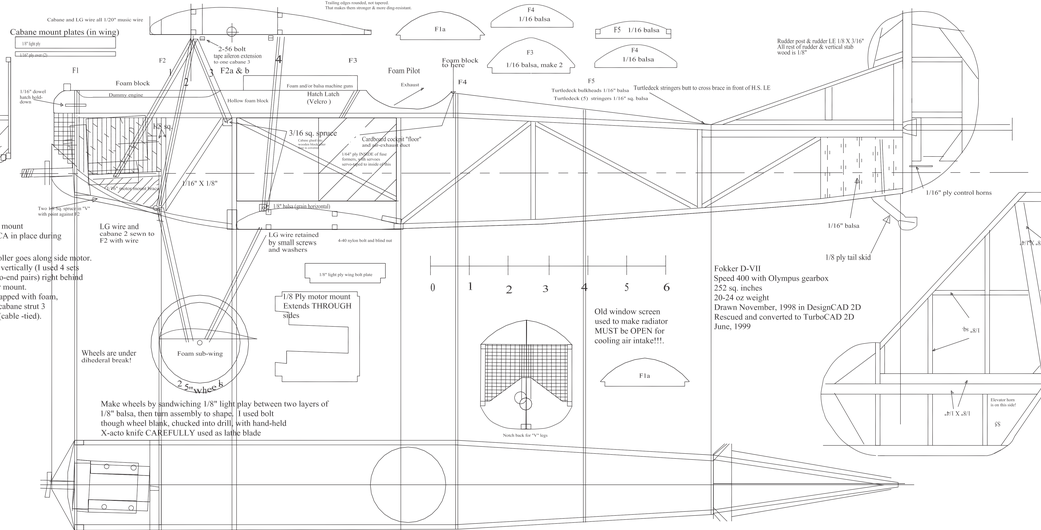

Drill holes in motor mount for Cabane 1, then CA in place during final assembly.

Speed controller goes along side motor. Batteries go vertically (I used 4 sets of two end-to-end pairs) right behind motor/motor mount. Receiver wrapped with foam, hangs from cabane strut 3 cross-brace (cable -tied).

All covering Litespan. Original done in all white Swiss trainer colors, with red Litespan Swiss markings laid over white.
WARNING: Blue foam WILL show through white Litespan!!!

Other color notes: Draw brown leather cockpit coaming on with marker.